


SHARP PROGRAMMING MANUAL

CODE : 00ZUP820FUPME

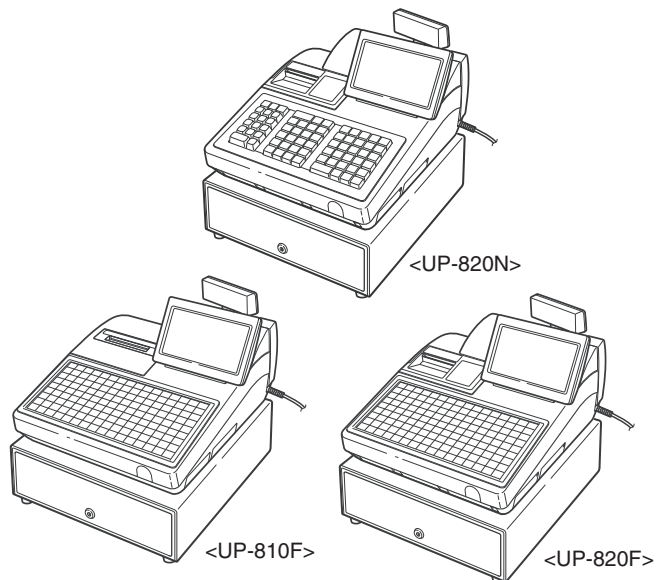

LEAD-FREE SOLDER MODEL

POS TERMINAL

UP-810F

UP-820N

MODEL UP-820F

(For "U" version)

CONTENTS

LEAD-FREE SOLDER

MAJOR KEYS USED IN THE SRV MODE

CHAPTER 1. TOUCH PANEL CALIBRATION, MASTER RESET AND PROGRAM RESET	1 - 1
CHAPTER 2. READING OF SRV MODE PROGRAM	2 - 1
CHAPTER 3. SRV MODE PROGRAMMING ("SETTING")	3 - 1
CHAPTER 4. SRV MODE PROGRAMMING ("IRC SET UP")	4 - 1
CHAPTER 5. SRV MODE PROGRAMMING ("DOWN LOAD")	5 - 1
CHAPTER 6. SRV MODE PROGRAMMING ("SD CARD MODE")	6 - 1

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/UP-810F UP-820F UP-820N Dealer program>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)