

# SHARP SERVICE MANUAL

CODE : 00ZUPE10INSME

## TCP/IP INLINE I/F

### MODEL UP-E10IN

#### CONTENTS

|                                                                      |    |
|----------------------------------------------------------------------|----|
| CHAPTER 1. GENERAL DESCRIPTION.....                                  | 1  |
| CHAPTER 2. BLOCK DIAGRAM .....                                       | 1  |
| CHAPTER 3. CONFIGURATION .....                                       | 1  |
| CHAPTER 4. MAIN LSI DESCRIPTION .....                                | 2  |
| CHAPTER 5. MEMORY MAP .....                                          | 6  |
| CHAPTER 6. INTERFACE WITH HOST CPU .....                             | 7  |
| CHAPTER 7. LAN CONTROL.....                                          | 8  |
| CHAPTER 8. PORT SETTING.....                                         | 8  |
| CHAPTER 9. CONNECTOR PIN TABLE .....                                 | 8  |
| CHAPTER 10. SWITCH SETTING.....                                      | 9  |
| CHAPTER 11. WRITING/READING<br>THE MAC ADDRESS/FIRMWARE PROGRAM..... | 10 |
| CHAPTER 12. CIRCUIT DIAGRAM .....                                    | 13 |
| CHAPTER 13. PWB LAYOUT .....                                         | 17 |

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)