


Sharp XE-1054 instruction programming Manual

**ELECTRONIC CASH REGISTER**

MODEL  
**XE-1054**

**INSTRUCTION MANUAL**

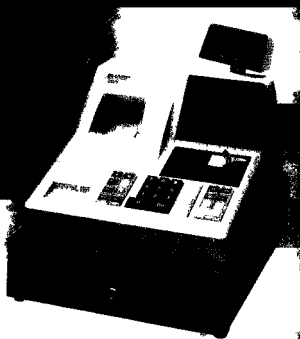

# CONTENTS

	Page
<b>Physical Characteristics of the XE-1054 Register</b>	<b>5</b>
<b>Keyboard Layout and Switch and Key Descriptions</b>	<b>6</b>
1 Mode switch (serves also as power switch)	6
2 Keyboard and key functions	7
<b>Description of the Display</b>	<b>8</b>
<b>Overflow Error Alarm</b>	<b>10</b>
<b>Installing the Paper Roll and Mounting the Take-Up Spool</b>	<b>11</b>
<b>Programming</b>	<b>13</b>
1 Machine number	13
2 Consecutive number	13
3 Tax programming for the XE-1054	14
4 Department and minus keys	17
5 Entry digit limit for the manual tax key	19
6 Percent key	20
7 Printing format and the presence or absence of the time on the receipt/journal	20
8 Reading the contents of programming	21
<b>Date and Time Setting</b>	<b>22</b>
1 Date setting	22
2 Time setting	22
3 Time display	23
4 Automatic updating of date	23
<b>Various Registrations</b>	<b>24</b>
1 Single-item registration	24
2 Registration of single-item cash sale	25
3 Multiple-item registration	25
4 Repetitive registration	25
5 Multiplication registration	26
6 Computation of subtotal	26
7 Finalization of transaction	27
(1) Change calculations	27
(2) Charge sale	27
(3) Mixed tender sale (cash tendering + charge sale)	27
8 Automatic tax	28
9 Manual tax entry	28
10 Tax delete	28
11 Tax shift	29
12 Percent calculation	29
(1) Percent calculation for departmental amount	29
(2) Percent calculation for merchandise subtotal	30
1 Returned merchandise/coupon reduction	30
1 Printing of non-add code numbers	31
1 No-sale(exchange)	31
1 Received-on-account registration	31
1 Paid-out registration	32
<b>Correction</b>	<b>33</b>
1 Correction of entered numbers	33
2 Correction of the last entry(direct void)	33
3 Correction of the next-to-last or earlier entries (indirect void)	34

	Page
<b>Cancellation (in <u>VOID</u> Mode) after the End of a Transaction (after the Issuance of a <b>Receipt</b>)</b>	35
<b>Reading and Resetting of Sales</b>	35
1 Reading of sales	35
2 Reading and resetting of sales	35
<b>In Case of Power Failure</b>	37
<b>Locking the Drawer</b>	37
<b>Removing the Drawer</b>	38
<b>Opening the Drawer manually</b>	38
<b>Replacing the Paper Roll and Removing the Paper <b>Take-up</b> Spool</b>	39
<b>Replacing the Ink Ribbon</b>	40
<b>Before Calling for Service</b>	41
<b>Specifications</b>	42
<b>Option</b>	43

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/sharp/XE-1054> instruction programming manual.

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)