
Sharp XE-1055 instruction programming Manual

SHARP ELECTRONIC CASH REGISTER

XE-1055

INSTRUCTION MANUAL

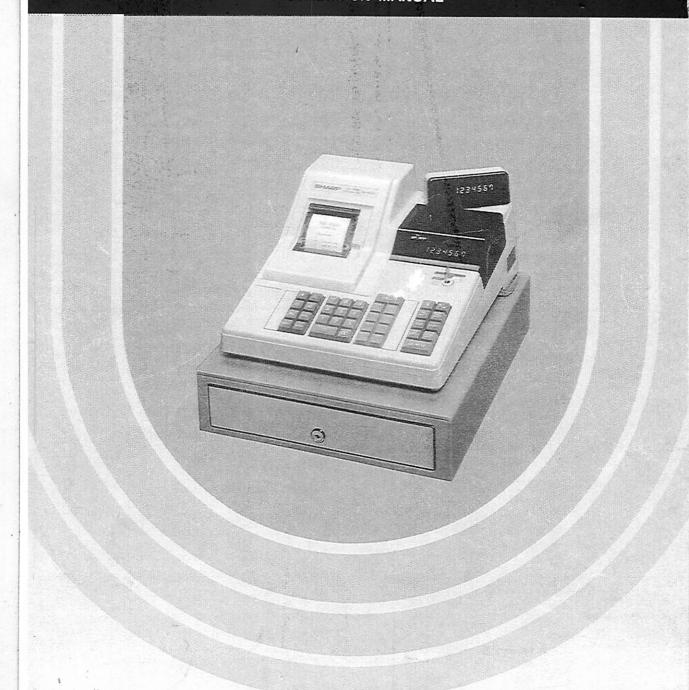

## CONTENTS

	Page
Physical Characteristics of the XE-1055 Register ·····	5
Keyboard Layout and Switch and Key Descriptions	6
1. Mode switch (serves also as the power switch)	
2. Keyboard layout and key functions	
Description of the Display ····	8
Overflow Error Alarm	
Installing the Paper Roll and Mounting the Take-Up Spool	··· 11
Programming	13
1. Machine number·····	
2. Consecutive number ·····	
3. Tax programming······	
4. Department and minus keys	18
5. Entry digit limit for the manual tax key	19
6. Percent key ·····	20
7. Printing format and printing of the time on the receipt/journal	20
8. Price lookup (PLU) programming	21
9. Entry digit limit for the charge, RA, and PO keys	22
10. Reading the contents of programming	22
Date and Time Setting	24
1. Date setting	
2. Time setting	
3. Time display ·····	
4. Automatic updating of date	25
Various Registrations ·····	26
1. Single-item registration·····	
2. Registration of single-item cash sale·····	
3. Multiple-item registration	27
4. Repetitive registration ·····	27
5. Multiplication registration	28
6. Computation of subtotal	
7. Finalization of transaction	29
(1) Change calculations ·····	
(2) Charge sale·····	29
(3) Mixed tender sale (cash tendering + charge sale)	
8. Automatic tax	
9. Manual tax entry ·····	
10. Tax delete	
11. Tax shift	
12. Percent calculation ·····	
(1) Percent calculation for item entries	
(2) Percent calculation for merchandise subtotal	
13. Discount entries	
14. Refund entries ·····	
15. Printing of non-add code numbers	33
16. No-sale (exchange)	
I.I. Received-on-account and paid-out registration	33

	Page
Correction ·····	34
1. Correction of entered numbers ······	34
2. Correction of the last entry (direct void)	34
3. Correction of the next-to-last or earlier entries (indirect void)	
Cancellation (in <u>VOID</u> Mode) after the End of a Transaction (after the	
Issuance of a Receipt)	
Reading and Resetting of Sales	36
1. Reading of sales·····	36
2. Reading and resetting of sales ·····	36
In Case of Power Failure	38
Locking the Drawer	38
Removing the Drawer	39
Opening the Drawer Manually	39
Replacing the Paper Roll and Removing the Paper Take-up Spool	40
Replacing the Ink Ribbon	41
Before Calling for Service	
Specifications	

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/sharp/XE-1055 instruction programming manual.

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM