

Sharp XE-A102 operating and programming Manual

SHARP®

ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA
ELEKTRONISCHE KASSA

MODEL
MODELL
MODELE
MODELO
MODEL

XE-A102

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
GEBRUIKSAANWIJZING

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES



CAUTION:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

LET OP:

Het stopcontact dient in de buurt van de kassa en gemakkelijk toegankelijk te zijn.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

LET OP:

Trek de stekker uit het stopcontact indien u de stroom geheel wilt uitschakelen.

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK και 73/23/EOK, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/EOK.

Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som komplette ras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warnung

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.

Avertissement

Ceci est un produit de Classe A. Dans un environnement domestique ce produit risque de provoquer une interférence radio, auquel cas l'utilisateur sera obligé d'observer les mesures adéquates.

Advertencia

Este es un producto de la clase A. En un ambiente doméstico es posible que este producto cause radiointerferencia. En este caso se solicita al usuario que tome medidas adecuadas.

Thank you for purchasing the SHARP Electronic Cash Register Model XE-A102. Please read this manual carefully before operating your machine. Keep this manual for future reference. It will help you solve operational problems that you may encounter.

Handling Cautions

- Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.
- Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity, or splashing water.
- Never operate the cash register with wet hands. Water can cause internal component failure.
- The cash register plugs into any standard wall outlet (official (nominal) voltage). Other electrical devices on the same electrical circuit can cause the cash register to malfunction.
- Clean the cash register with a dry, soft cloth. Never use volatile liquids, such as benzine or thinner. Chemicals can discolor or damage the cabinet.
- For protection against data loss, please purchase three R6 or LR6 batteries (“AA”size), and install them after resetting your cash register and before using it.

When handling the batteries, please observe the following. Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSED OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.
 - Be sure that the positive (+) and negative (-) poles of each battery are facing in the proper direction for the installation.
 - Never mix batteries of different types for the installation.
 - Never mix old batteries and new ones for the installation.
 - Never leave dead batteries in the battery compartment.
 - Remove the batteries if you do not plan to use the cash register for long periods.
 - Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.
 - For battery disposal, follow the corresponding law in your country.
- For a complete electrical disconnection, pull out the main plug.

IMPORTANT!

Before using the cash register for the first time, you must first reset the cash register, and then install three new R6 or LR6 batteries (“AA”size) on the register. Never fail to follow the procedures described on “Preparing the Cash Register” section.

When you open the carton, make sure that all accessories shown on the “Specifications” section are contained.

Contents

Parts and their Functions	3
When an Error Occurs	4
Preparing the Cash Register	5
Quick Start Operations	7
Programming Date and Time.....	8
Programming Tax.....	8
Programming Department Status	9
Making Basic Sales Entries (Department Entries)	9
Reading/Resetting Sales Data.....	11
Utilizing Various Features for Sales Entries	12
PLU Entries.....	12
Convenient Sales Entries	12
VAT (Tax) Calculation	13
Discounts and Premiums Using the Percent Key	13
Currency Exchange	14
No Sale	14
Refund	14
Non-add Code Number	14
Received-on Account and Paid-out Entries.....	14
Corrections	15
Reading and Resetting of Sales	15
EURO Migration Function	17
Advanced Programming	19
Department Preset Unit Price Programming	19
PLU Programming	19
Percent Key Programming	19
Exchange Key Programming.....	20
Printing Format Programming	20
Miscellaneous Programming	21
Consecutive Receipt Number Programming	21
EURO Programming.....	22
Rounding Programming (For Australian tax system).....	22
Secret Code Programming	22
Checking the Programmed Machine Settings	23
Maintenance	24
Drawer Handling.....	24
Replacing the Paper Roll.....	24
Replacing the Batteries	25
Replacing the Ink Roller	25
In Case of Power Failure or Paper Jam	25
Before Calling for Service.....	26
Specifications.....	26

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A102 operating and programming man](https://the-checkout-tech.com/manuals/sharp/XE-A102%20operating%20and%20programming%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)