

SHARP®

ELECTRONIC CASH REGISTER

MODEL

XE-A107

FULL DETAILED INSTRUCTION MANUAL



CONTENTS

INTRODUCTION	1
IMPORTANT	1
CONTENTS	2
Parts and their Functions	3
When an Error Occurs	5
Preparing the Cash Register	6
1 Initializing the Cash Register	6
2 Installing Batteries	6
3 Installing a Paper Roll	7
Quick Start Operations	8
1 Programming Date and Time	9
2 Programming Tax	9
3 Programming Department Status	10
4 Making Basic Sales Entries (Department Entries)	11
5 Reading/Resetting Sales Data	12
Utilizing Various Features for Sales Entries	13
PLU Entries	13
Convenient Sales Entries	14
VAT (Tax) Calculation	15
Discounts and Premiums Using the Percent Key	16
Currency Exchange	17
No Sale	17
Refund	17
Non-add Code Number	17
Received-on Account and Paid-out Entries	18
Corrections	18
Reading and Resetting of Sales	19
Flash reports for viewing on the display	19
X reports for reading of sales	19
Z reports for reading and resetting of sales	20
EURO Migration Function	21
Advanced Programming	23
Department Preset Unit Price Programming	23
PLU Programming	23
Percent Key Programming	24
Exchange Key Programming	24
Printing Format Programming	24
Miscellaneous Programming	25
Consecutive Receipt Number Programming	25
EURO Programming	26
Rounding Programming (For Australian tax system)	26
Secret Code Programming	26
Checking the Programmed Machine Settings	27
Maintenance	28
Drawer Handling	28
Replacing the Paper Roll	29
Replacing the Batteries	30
Replacing the Ink Roller	30
In Case of Power Failure or Paper Jam	30
Before Calling for Service	31
Specifications	32

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*