

SHARP®

ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA

MODEL
MODELL
MODELE
MODELO

XE-A201

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG

MANUEL D'INSTRUCTIONS
MANUAL DE INSTRUCCIONES



CAUTION:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/ΕΟΚ και 73/23/ΕΟΚ, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/ΕΟΚ.

Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som komplette ras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A201. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference. It will help you if you encounter any operational problems.

CAUTION!

Never install the batteries into the cash register before initializing it. Before you start operating the cash register, you must first initialize it, then install three new R6 or LR6 batteries (“AA” size) on the register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to page 7.

IMPORTANT

- **Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.**
- **Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity or splashing water.**
Installation in such locations could cause damage to the cabinet and the electronic components.
- **Never operate the register with wet hands.**
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (official (nominal) voltage).**
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **For protection against data loss, please install three R6 or LR6 batteries (“AA” size) after initializing the cash register. When handling the batteries, please observe the following:**
Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.
 - **Be sure that the the positive (+) and negative (-) poles of each battery are facing in the proper direction for installation.**
 - **Never mix batteries of different types.**
 - **Never mix old batteries and new ones.**
 - **Never leave dead batteries in the battery compartment.**
 - **Remove the batteries if you do not plan to use the cash register for long periods.**
 - **Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.**
 - **For battery disposal, follow the corresponding law in your country.**
- **For complete electrical disconnection, disconnect the main plug.**

**For Easy Set-up, see
“GETTING STARTED” (page 7).**

CONTENTS

INTRODUCTION	1
IMPORTANT	1
CONTENTS	2
PARTS AND THEIR FUNCTIONS	4
1 External View	4
2 Printer	4
3 Mode Switch and Mode Keys	5
4 Keyboard	5
5 Displays	6
6 Drawer Lock Key	6
GETTING STARTED	7

FOR THE OPERATOR

BASIC SALES ENTRY	11
1 Basic Sales Entry Example	11
2 Error Warning	12
3 Item Entries	13
Single item entries	13
Repeat entries	14
Multiplication entries	15
Single item cash sale (SICS) entry	15
4 Displaying Subtotals	16
5 Finalization of Transaction	16
Cash or cheque tendering	16
Cash or cheque sale that does not require tender entry	16
Credit sale	17
Mixed-tender sale	17
6 Computation of VAT (Value Added Tax)/tax	17
VAT/tax system	17
OPTIONAL FEATURES	18
1 Auxiliary Entries.....	18
Percent calculations (premium or discount)	18
Deduction entries.....	19
Refund entries	19
Non-add code number entries and printing	20
2 Auxiliary Payment Treatment	20
Currency exchange	20
Received-on account entries	21
Paid-out entries	21
No sale (exchange)	22
3 Automatic Sequence Key (AUTO key) Entries.....	22
CORRECTION	22
1 Correction of the Last Entry (direct void).....	22
2 Correction of the Next-to-last or Earlier Entry (indirect void).....	23
3 Subtotal Void	23
4 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function	23

PRIOR TO PROGRAMMING	24
BASIC FUNCTION PROGRAMMING (For Quick Start)	24
1 Date and Time Programming	24
2 Tax Programming	25
Tax rate programming	25
AUXILIARY FUNCTION PROGRAMMING	26
1 Department Programming	26
2 PLU (Price Look-Up) and Subdepartment Programming	28
3 Miscellaneous Key Programming	29
Rate for [%1], [%2] and [EX]	29
Amount for [⊖]	30
Percent rate limitation for [%1] and [%2]	30
Function parameters for [%1], [%2] and [⊖]	31
Function parameters for [EX]	31
Function parameters for [RA], [RCPT/PO], [CH], [CR1], [CR2] and [TL/NS] (when using as TL key)	32
4 Text Programming	33
ADVANCED FUNCTION PROGRAMMING	39
1 Register Number and Consecutive Number Programming	39
2 Electronic Journal (EJ) Programming	40
3 Various Function Selection Programming 1	41
Function selection for miscellaneous keys	42
Print format	42
Receipt print format	43
Other programming	43
4 Various Function Selection Programming 2	46
Power save mode	46
Logo message print format	47
Thermal printer density	47
Language selection	48
Training clerk specification for training mode	48
AUTO key programming	48
5 EURO Programming	49
6 Reading Stored Programs	51
EURO MIGRATION FUNCTION	53
TRAINING MODE	56
READING (X) AND RESETTING (Z) OF SALES TOTALS	57
EJ REPORT READING AND RESETTING	60
OVERRIDE ENTRIES	61
CORRECTION AFTER FINALIZING A TRANSACTION (Void mode).....	61
OPERATOR MAINTENANCE.....	62
1 In Case of Power Failure	62
2 In Case of Printer Error	62
3 Cautions in Handling the Printer and Recording Paper	62
4 Replacing the Batteries	63
5 Replacing the Paper Roll	63
6 Removing a Paper Jam	65
7 Cleaning the Print Head	66
8 Removing the Till and the Drawer	66
9 Opening the Drawer by Hand	66
10 Before Calling for Service.....	67
Error code table	67
SPECIFICATIONS	68

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A201 operating programming manual.h](https://the-checkout-tech.com/manuals/sharp/XE-A201_operating_programming_manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)