SHARP PROGRAMMING MANUAL

CODE: 00ZXEA203UPME



LEAD-FREE SOLDER MODEL

ELECTRONIC CASH REGISTER



("U" and "A" version)

CONTENTS
■ LEAD-FREE SOLDER
CHAPTER 1. MASTER RESET AND PROGRAM RESET1 - 1
CHAPTER 2. PROGRAM MODE
CHAPTER 3. OP X/Z, X1/Z1, X2/Z2 MODE

Parts marked with "<u>A</u>" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only. The contents are subject to change without notice. This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/sharp/XE-A203 programming U and A ver manual

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM