

# SHARP®

ELECTRONIC CASH REGISTER  
ELEKTRONISCHE REGISTRIERKASSE  
CAISSE ENREGISTREUSE ELECTRONIQUE  
CAJA REGISTRADORA ELECTRONICA  
ELEKTRONISCHE KASSA

MODEL  
MODELL  
MODELE  
MODELO  
MODEL

# XE-A203

INSTRUCTION MANUAL  
BEDIENUNGSANLEITUNG  
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES  
GEBRUIKSAANWIJZING



With Quick Start Guide  
Mit Schnellstartanleitung  
Avec Guide de démarrage rapide  
Con Guía de inicio rápido  
Met Gids voor snel starten

**CAUTION:**

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

**CAUTION:**

The socket-outlet shall be installed near the equipment and shall be easily accessible.

**VORSICHT:**

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

**ATTENTION:**

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

**AVISO:**

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

**WARNING:**

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

**LET OP:**

Het stopcontact dient in de buurt van de kassa en gemakkelijk toegangbaar te zijn.

**CAUTION:**

For a complete electrical disconnection pull out the mains plug.

**VORSICHT:**

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

**ATTENTION:**

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

**AVISO:**

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

**WARNING:**

För att helt koppla från strömmen, dra ut stickproppen.

**LET OP:**

Trek de stekker uit het stopcontact indien u de stroom geheel wilt uitschakelen.

**Warning**

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

**Warnung**

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.

**Avertissement**

Ceci est un produit de Classe A. Dans un environnement domestique ce produit risque de provoquer une interférence radio, auquel cas l'utilisateur sera obligé d'observer les mesures adéquates.

**Advertencia**

Este es un producto de la clase A. En un ambiente doméstico es posible que este producto cause radiointerferencia. En este caso se solicita al usuario que tome medidas adecuadas.

Contact the following for the CE mark.

**SHARP ELECTRONICS (Europe) GmbH**  
Sonnenstraße 3, D-20097 Hamburg

# INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A203. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features.

Please keep this manual for future reference. It will help you if you encounter any operational problems.

## CAUTION!

**Never install the batteries into the cash register before initializing it.** Before you start operating the cash register, you must first initialize it, then install three new alkaline batteries LR6 ("AA" size) on the register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to pages 8 to 9.

# IMPORTANT

- Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.

- Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity or splashing water.

Installation in such locations could cause damage to the cabinet and the electronic components.

- Never operate the register with wet hands.

The water could seep into the interior of the register and cause component failure.

- When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.

The use of such chemicals will lead to discoloration or deterioration of the cabinet.

- The register plugs into any standard wall outlet (official (nominal) voltage).

Other electrical devices on the same electrical circuit could cause the register to malfunction.

- For protection against data loss, please install three alkaline batteries LR6 ("AA" size) after initializing the cash register. When handling the batteries, please observe the following:

Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.

- RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

- Be sure that the positive (+) and negative (-) poles of each battery are facing in the proper direction for installation.

- Never mix batteries of different types.

- Never mix old batteries and new ones.

- Never leave dead batteries in the battery compartment.

- Remove the batteries if you do not plan to use the cash register for long periods.

- Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.

- For battery disposal, follow the corresponding law in your country.

- For complete electrical disconnection, disconnect the main plug.

# CONTENTS

INTRODUCTION .....	1
IMPORTANT .....	1
CONTENTS.....	2

## Part1 QUICK START GUIDE

<b>STEP1 PARTS AND THEIR FUNCTIONS.....</b>	<b>5</b>
1 External View .....	5
2 Printer .....	5
3 Mode Switch and Mode Keys.....	6
4 Keyboard .....	6
5 Displays.....	7
6 Drawer Lock Key .....	7
<b>STEP2 PREPARING THE CASH REGISTER .....</b>	<b>8</b>
1 Initializing the Cash Register .....	8
2 Installing Batteries .....	9
3 Installing a Paper Roll .....	10
<b>STEP3 BASIC FUNCTION PROGRAMMING.....</b>	<b>12</b>
1 Abbreviations and Terminology .....	12
2 Prior to Programming .....	12
Procedure for programming.....	12
Description of special keys .....	12
Guidance for text programming .....	13
3 Language Selection.....	14
4 Date and Time Programming .....	14
5 Tax Programming .....	15
6 Department Programming .....	16
7 PLU (Price Look-Up) and Subdepartment Programming .....	21
8 Text Programming.....	23
Clerk names .....	23
Logo messages .....	23
9 Programming Other Necessary Items .....	24
<b>STEP4 BASIC SALES ENTRY .....</b>	<b>25</b>
1 Basic Sales Entry Example .....	25
2 PLU Entry .....	26
<b>STEP5 CORRECTION .....</b>	<b>27</b>
1 Cancellation of the Numeric Entry .....	27
2 Correction of the Last Entry (direct void) .....	27
3 Correction of the Next-to-last or Earlier Entry (indirect void) .....	28
4 Subtotal Void .....	28
5 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function .....	29
<b>STEP6 FULL SALES REPORT (Z REPORT).....</b>	<b>30</b>

## Part2 FOR THE OPERATOR

<b>OTHER BASIC SALES ENTRIES .....</b>	<b>32</b>
1 Additional Information for BASIC SALES ENTRY .....	32
2 Error Warning .....	32
3 Item Entries .....	33
Single item entries .....	33
Repeat entries .....	34
Multiplication entries .....	35
Single item cash sale (SICS) entry .....	35
4 Displaying Subtotals .....	36
5 Finalization of Transaction .....	36
Cash or cheque tendering .....	36
Cash or cheque sale that does not require tender entry .....	36
Credit sale .....	37
Mixed-tender sale .....	37
6 Computation of VAT (Value Added Tax)/tax .....	37
VAT/tax system .....	37
<b>OPTIONAL FEATURES.....</b>	<b>39</b>
1 Auxiliary Entries .....	39
Percent calculations (premium or discount) .....	39
Deduction entries .....	39
Refund entries .....	40
Non-add code number entries and printing .....	40
2 Auxiliary Payment Treatment .....	41
Currency exchange .....	41
Received-on account entries .....	42
Paid-out entries .....	42
No sale (exchange) .....	42
3 Automatic Sequence Key ( <b>AUTO</b> key) Entries.....	42

## Part3 FOR THE MANAGER

<b>PRIOR TO PROGRAMMING .....</b>	43
<b>AUXILIARY FUNCTION PROGRAMMING .....</b>	46
1 Miscellaneous Key Programming.....	46
Programming for  .....	46
Programming for %1 and %2 .....	48
Programming for EX .....	51
Programming for RA, RCPTPO, CH1, CH2, CR1 and CR2 .....	52
Function parameters for TL/NS .....	54
2 Other Text Programming.....	55
Foreign currency symbol .....	55
Domestic currency symbol .....	55
Training mode text.....	56
Function text .....	56
<b>ADVANCED FUNCTION PROGRAMMING .....</b>	58
1 Register Number and Consecutive Number Programming .....	58
2 Various Function Selection Programming 1 .....	59
Function selection for miscellaneous keys .....	59
Print format .....	60
Receipt print format .....	60
Other programming .....	61
3 Various Function Selection Programming 2 .....	66
Power save mode .....	66
Logo message print format .....	66
Thermal printer density .....	67
EJ memory type .....	67
Training clerk specification for training mode .....	67
AUTO key programming - Automatic sequence key .....	68
4 EURO Programming .....	69
5 Reading Stored Programs.....	70
<b>TRAINING MODE .....</b>	73
<b>READING (X) AND RESETTING (Z) OF SALES TOTALS .....</b>	74
<b>EJ REPORT READING AND RESETTING .....</b>	76
<b>OVERRIDE ENTRIES .....</b>	77
<b>CORRECTION AFTER FINALIZING A TRANSACTION (Void mode).....</b>	77
<b>EURO MIGRATION FUNCTION .....</b>	78
<b>OPERATOR MAINTENANCE.....</b>	81
1 In Case of Power Failure .....	81
2 In Case of Printer Error .....	81
3 Cautions in Handling the Printer and Recording Paper.....	81
4 Replacing the Batteries .....	82
5 Replacing the Paper Roll .....	82
6 Removing a Paper Jam .....	85
7 Cleaning the Printer (Print Head / Sensor / Roller) .....	85
8 Removing the Till and the Drawer .....	86
9 Opening the Drawer by Hand .....	86
10 Before Calling for Service .....	87
Error message table .....	87
<b>SPECIFICATIONS .....</b>	88

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)