

SHARP®

ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA
ELEKTRONISCHE KASSA

MODEL
MODELL
MODELE
MODELO
MODEL

XE-A213

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
GEBRUIKSAANWIJZING



With Quick Start Guide
Mit Schnellstartanleitung
Avec Guide de démarrage rapide
Con Guía de inicio rápido
Met Gids voor snel starten

CAUTION:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

LET OP:

Het stopcontact dient in de buurt van de kassa en gemakkelijk toegankelijk te zijn.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

LET OP:

Trek de stekker uit het stopcontact indien u de stroom geheel wilt uitschakelen.

Warning

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Warnung

Dies ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.

Avertissement

Ceci est un produit de Classe A. Dans un environnement domestique ce produit risque de provoquer une interférence radio, auquel cas l'utilisateur sera obligé d'observer les mesures adéquates.

Advertencia

Este es un producto de la clase A. En un ambiente doméstico es posible que este producto cause radiointerferencia. En este caso se solicita al usuario que tome medidas adecuadas.

Contact the following for the CE mark.

SHARP ELECTRONICS (Europe) GmbH
Sonninstraße 3, D-20097 Hamburg

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A213. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features.

Please keep this manual for future reference. It will help you if you encounter any operational problems.

CAUTION!

Never install the batteries into the cash register before initializing it. Before you start operating the cash register, you must first initialize it, then install three new alkaline batteries LR6 ("AA" size) on the register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to pages 9 to 10.

IMPORTANT

- **Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.**
- **Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity or splashing water.**
Installation in such locations could cause damage to the cabinet and the electronic components.
- **Never operate the register with wet hands.**
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**
The use of such chemicals will lead to discoloration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (official (nominal) voltage).**
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **For protection against data loss, please install three alkaline batteries LR6 ("AA" size) after initializing the cash register. When handling the batteries, please observe the following:**
Incorrectly using batteries can cause them to burst or leak, possibly damaging the interior of the cash register.
 - **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**
 - **Be sure that the positive (+) and negative (-) poles of each battery are facing in the proper direction for installation.**
 - **Never mix batteries of different types.**
 - **Never mix old batteries and new ones.**
 - **Never leave dead batteries in the battery compartment.**
 - **Remove the batteries if you do not plan to use the cash register for long periods.**
 - **Should a battery leak, clean out the battery compartment immediately, taking care to avoid letting the battery fluid come into direct contact with your skin.**
 - **For battery disposal, follow the corresponding law in your country.**
- **For complete electrical disconnection, disconnect the main plug.**

CONTENTS

INTRODUCTION	1
IMPORTANT	1
CONTENTS.....	2

Part1 QUICK START GUIDE

STEP1 PARTS AND THEIR FUNCTIONS.....	5
1 External View	5
2 Printer	5
3 Mode Switch and Mode Keys	6
4 Keyboard	6
5 Displays	8
6 Drawer Lock Key	8
STEP2 PREPARING THE CASH REGISTER	9
1 Initializing the Cash Register	9
2 Installing Batteries	10
3 Installing a Paper Roll	11
STEP3 BASIC FUNCTION PROGRAMMING.....	13
1 Abbreviations and Terminology	13
2 Prior to Programming	13
Procedure for programming	13
Description of special keys	13
Guidance for text programming	14
3 Language Selection.....	15
4 Date and Time Programming	15
5 Tax Programming	16
6 Department Programming	17
7 PLU (Price Look-Up) and Subdepartment Programming	22
8 Text Programming	24
Clerk names	24
Logo messages	25
9 Programming Other Necessary Items	26
STEP4 BASIC SALES ENTRY	27
1 Basic Sales Entry Example	27
2 PLU Entry	28
Direct PLU entry	28
PLU code entry	28
STEP5 CORRECTION	29
1 Cancellation of the Numeric Entry	29
2 Correction of the Last Entry (direct void)	29
3 Correction of the Next-to-last or Earlier Entry (indirect void)	30
4 Subtotal Void	30
5 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function	31
STEP6 FULL SALES REPORT (Z REPORT).....	32

Part2 FOR THE OPERATOR

OTHER BASIC SALES ENTRIES34

- 1 Additional Information for BASIC SALES ENTRY34
- 2 Error Warning34
- 3 Item Entries35
 - Single item entries35
 - Repeat entries36
 - Multiplication entries37
 - Single item cash sale (SICS) entry37
 - PLU level shift (for direct PLU key).....38
- 4 Displaying Subtotals39
- 5 Finalization of Transaction40
 - Cash or cheque tendering40
 - Cash or cheque sale that does not require tender entry40
 - Credit sale41
 - Mixed-tender sale41
- 6 Computation of VAT (Value Added Tax)/tax41
 - VAT/tax system41
 - VAT shift entries42

OPTIONAL FEATURES.....43

- 1 Auxiliary Entries.....43
 - Percent calculations (premium or discount)43
 - Deduction entries.....43
 - Refund entries44
 - Non-add code number entries and printing44
- 2 Guest Look-Up (GLU)45
- 3 Auxiliary Payment Treatment47
 - Currency exchange47
 - Received-on account entries48
 - Paid-out entries48
 - No sale (exchange)48
- 4 Automatic Sequence Key (AUTO key) Entries.....48

Part3 FOR THE MANAGER

PRIOR TO PROGRAMMING49

AUXILIARY FUNCTION PROGRAMMING52

1 Miscellaneous Key Programming52

 Programming for 52

 Programming for 54

 Programming for 56

 Programming for , , , and 58

 Function parameters for 60

2 Other Text Programming61

 Foreign currency symbol61

 Domestic currency symbol61

 Training mode text62

 Function text62

ADVANCED FUNCTION PROGRAMMING64

1 Register Number and Consecutive Number Programming64

2 Various Function Selection Programming 165

 Function selection for miscellaneous keys65

 Print format66

 Receipt print format66

 PLU level shift and GLU function parameters67

 Other programming67

3 Various Function Selection Programming 272

 Power save mode72

 Logo message print format73

 Thermal printer density73

 EJ memory type73

 Training clerk specification for training mode74

 AUTO key programming - Automatic sequence key74

4 EURO Programming75

5 Reading Stored Programs76

TRAINING MODE79

READING (X) AND RESETTING (Z) OF SALES TOTALS80

EJ REPORT READING AND RESETTING83

OVERRIDE ENTRIES84

CORRECTION AFTER FINALIZING A TRANSACTION (Void mode)84

EURO MIGRATION FUNCTION85

OPERATOR MAINTENANCE88

1 In Case of Power Failure88

2 In Case of Printer Error88

3 Cautions in Handling the Printer and Recording Paper88

4 Replacing the Batteries89

5 Replacing the Paper Roll89

6 Removing a Paper Jam92

7 Cleaning the Printer (Print Head / Sensor / Roller)92

8 Removing the Till and the Drawer93

9 Opening the Drawer by Hand93

10 Before Calling for Service94

 Error message table94

SPECIFICATIONS95

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A213 operating programming manual.h](https://the-checkout-tech.com/manuals/sharp/XE-A213%20operating%20programming%20manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)