

SHARP PROGRAMMING MANUAL

CODE : 00ZXEA21SUPME



LEAD-FREE SOLDER MODEL

ELECTRONIC CASH REGISTER

MODEL XE-A21S

CONTENTS

■ LEAD-FREE SOLDER

CHAPTER 1. MASTER RESET AND PROGRAM RESET 1 - 1

CHAPTER 2. PROGRAM MODE 2 - 1

CHAPTER 3. OP X/Z, X1/Z1, X2/Z2 MODE 3 - 1

Parts marked with "△" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A21S programming manual.html](https://the-checkout-tech.com/manuals/sharp/XE-A21S_programming_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)