

SHARP®

ELECTRONIC CASH REGISTER
ELEKTRONISCHE REGISTRIERKASSE
CAISSE ENREGISTREUSE ELECTRONIQUE
CAJA REGISTRADORA ELECTRONICA
ELEKTRONISCHE KASSA

MODEL
MODELL
MODELE
MODELO
MODEL

XE-A301

INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'INSTRUCTIONS

MANUAL DE INSTRUCCIONES
GEBRUIKSAANWIJZING



CAUTION:

The cash register should be securely fitted to the supporting platforms to avoid instability when the drawer is open.

CAUTION:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

VORSICHT:

Die Netzsteckdose muß nahe dem Gerät angebracht und leicht zugänglich sein.

ATTENTION:

La prise de courant murale devra être installée à proximité de l'équipement et devra être facilement accessible.

AVISO:

El tomacorriente debe estar instalado cerca del equipo y debe quedar bien accesible.

VARNING:

Det matande vägguttaget skall placeras nära apparaten och vara lätt åtkomligt.

LET OP:

Het stopcontact dient in de buurt van de kassa en gemakkelijk toegankelijk te zijn.

CAUTION:

For a complete electrical disconnection pull out the mains plug.

VORSICHT:

Zur vollständigen elektrischen Trennung vom Netz den Netzstecker ziehen.

ATTENTION:

Pour obtenir une mise hors-circuit totale, débrancher la prise de courant secteur.

AVISO:

Para una desconexión eléctrica completa, desenchufar el enchufe de tomacorriente.

VARNING:

För att helt koppla från strömmen, dra ut stickproppen.

LET OP:

Trek de stekker uit het stopcontact indien u de stroom geheel wilt uitschakelen.

This equipment complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

Dieses Gerät entspricht den Anforderungen der EG-Richtlinien 89/336/EWG und 73/23/EWG mit Änderung 93/68/EWG.

Ce matériel répond aux exigences contenues dans les directives 89/336/CEE et 73/23/CEE modifiées par la directive 93/68/CEE.

Dit apparaat voldoet aan de eisen van de richtlijnen 89/336/EEG en 73/23/EEG, gewijzigd door 93/68/EEG.

Dette udstyr overholder kravene i direktiv nr. 89/336/EEC og 73/23/EEC med tillæg nr. 93/68/EEC.

Quest' apparecchio è conforme ai requisiti delle direttive 89/336/EEC e 73/23/EEC, come emendata dalla direttiva 93/68/EEC.

Η εγκατάσταση αυτή ανταποκρίνεται στις απαιτήσεις των οδηγιών της Ευρωπαϊκής Ένωσης 89/336/EOK και 73/23/EOK, όπως οι κανονισμοί αυτοί συμπληρώθηκαν από την οδηγία 93/68/EOK.

 
Este equipamento obedece às exigências das directivas 89/336/CEE e 73/23/CEE, na sua versão corrigida pela directiva 93/68/CEE.

Este aparato satisface las exigencias de las Directivas 89/336/CEE y 73/23/CEE, modificadas por medio de la 93/68/CEE.

Denna utrustning uppfyller kraven enligt riktlinjerna 89/336/EEC och 73/23/EEC så som komplette ras av 93/68/EEC.

Dette produktet oppfyller betingelsene i direktivene 89/336/EEC og 73/23/EEC i endringen 93/68/EEC.

Tämä laite täyttää direktiivien 89/336/EEC ja 73/23/EEC vaatimukset, joita on muutettu direktiivillä 93/68/EEC.



INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A301. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference. It will help you if you encounter any operational problems.

CAUTION!

Be sure to initialize the cash register before you start operating the cash register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to page 8.

IMPORTANT

- **Be very careful when removing and replacing the printer cover, as the cutter mounted on it is very sharp.**
- **Install the cash register in a location not subject to direct sunlight, unusual temperature changes, high humidity or splashing water.**
Installation in such locations could cause damage to the cabinet and the electronic components.
- **Never operate the register with wet hands.**
The water could seep into the interior of the register and cause component failure.
- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**
The use of such chemicals will lead to discolouration or deterioration of the cabinet.
- **The register plugs into any standard wall outlet (official (nominal) voltage).**
Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **For complete electrical disconnection, disconnect the main plug.**

 
PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

As you know, all batteries will, in time, dissipate their charge even if not used. Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use. Also note that if the rechargeable batteries have been discharged completely, your cash register will be automatically initialized when you turn on the power.

In order to charge the batteries, the machine must be plugged in and the mode switch must be in a position other than “⏻”. This recharging precaution can prevent unnecessary initial service calls.

**For Easy Set-up, see
“GETTING STARTED” (page 7).**




CONTENTS


INTRODUCTION	1
IMPORTANT	1
PRECAUTION	1
CONTENTS	2
PARTS AND THEIR FUNCTIONS	4
1 External View	4
2 Printer	4
3 Mode Switch and Mode Keys	5
4 Keyboard	5
5 Displays	6
6 Drawer Lock Key	6
GETTING STARTED	7

FOR THE OPERATOR

BASIC SALES ENTRY	11
1 Basic Sales Entry Example	11
2 Error Warning	12
3 Item Entries	13
Single item entries	13
Repeat entries	14
Multiplication entries	15
Split pricing entries	15
Single item cash sale (SICS) entry	16
4 Displaying Subtotals	16
5 Finalization of Transaction	16
Cash or cheque tendering	16
Cash or cheque sale that does not require tender entry	17
Credit sale	17
Mixed-tender sale	18
6 Computation of VAT (Value Added Tax)/tax	18
VAT/tax system	18
OPTIONAL FEATURES	19
1 Auxiliary Entries	19
Percent calculations (premium or discount)	19
Deduction entries	20
Refund entries	20
Non-add code number entries and printing	21
2 Auxiliary Payment Treatment	21
Currency exchange	21
Received-on account entries	22
Paid-out entries	22
No sale (exchange)	22
Cashing a cheque	23
3 Automatic Sequence Key (AUTO1 AUTO2 keys) Entries	23
CORRECTION	23
1 Correction of the Last Entry (direct void)	23
2 Correction of the Next-to-last or Earlier Entry (indirect void)	24
3 Subtotal Void	24
4 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function	24
OVERLAPPED CLERK ENTRY	25

 

PRIOR TO PROGRAMMING	26
BASIC FUNCTION PROGRAMMING (For Quick Start)	26
1 Date and Time Programming	26
2 Tax Programming	27
Tax rate programming	27
AUXILIARY FUNCTION PROGRAMMING	28
1 Department Programming	28
2 PLU (Price Look-Up) and Subdepartment Programming	30
3 Miscellaneous Key Programming	31
Rate for [%1], [%2] and [EX]	31
Amount for [⊖]	32
Percent rate limitation for [%1] and [%2]	32
Function parameters for [%1], [%2] and [⊖]	33
Function parameters for [EX]	33
Function parameters for [RA], [RCPTPO], [CH1], [CH2], [CR1], [CR2] and [TL/NS] (when using as TL key)	34
4 Text Programming	35
ADVANCED FUNCTION PROGRAMMING	43
1 Register Number and Consecutive Number Programming	43
2 Various Function Selection Programming 1	44
Function selection for miscellaneous keys	44
Print format	45
Receipt print format	45
Other programming	46
3 Various Function Selection Programming 2	49
Power save mode	50
Logo message print format	50
Clerk code assignment	51
Entry digit limit for cash in drawer (CID) (sentinel)	51
Entry digit limit for cheque cashing	51
Entry digit limit for cheque change	51
Thermal printer density	52
Language selection	52
Training clerk specification for training mode	52
AUTO key programming	53
4 EURO Programming	54
5 Reading Stored Programs	56
TRAINING MODE	57
READING (X) AND RESETTING (Z) OF SALES TOTALS	58
COMPULSORY CASH/CHEQUE DECLARATION	65
OVERRIDE ENTRIES	66
CORRECTION AFTER FINALIZING A TRANSACTION (Void mode).....	66
EURO MIGRATION FUNCTION	67
OPERATOR MAINTENANCE.....	70
1 In Case of Power Failure	70
2 In Case of Printer Error	70
3 Cautions in Handling the Printer and Recording Paper	70
4 Replacing the Paper Roll.....	71
5 Removing a Paper Jam	73
6 Cleaning the Print Head	73
7 Removing the Till and the Drawer	74
8 Opening the Drawer by Hand	74
9 Before Calling for Service	75
Error message table	75
SPECIFICATIONS	76

 

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A301 operating programming manual.h](https://the-checkout-tech.com/manuals/sharp/XE-A301_operating_programming_manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)