

SHARP®

ELECTRONIC CASH REGISTER
CAISSE ENREGISTREUSE ELECTRONIQUE

MODEL
MODELE

XE-A302

INSTRUCTION MANUAL

MANUEL D'INSTRUCTIONS



CAUTION

The socket-outlet shall be installed near the equipment and shall be easily accessible.

ATTENTION

La prise de courant murale devra être installée à proximité de l'équipement et être facilement accessible.

INTRODUCTION

Thank you very much for your purchase of the SHARP Electronic Cash Register, Model XE-A302. Please read this manual carefully before operating your machine in order to gain full understanding of functions and features. Please keep this manual for future reference. It will help you if you encounter any operational problems.

CAUTION!

Be sure to initialize the cash register before you start operating the cash register. Otherwise, distorted memory contents and malfunction of the cash register will occur. For this procedure, please refer to page 8.

IMPORTANT

- **On the printer cover, a paper cutter is mounted. Be careful not to cut yourself on the paper cutter.**
- **Install your register in a location that is not subject to direct radiation, unusual temperature changes, high humidity or exposed to water sources. Please keep the register away from heat and magnetic sources.**

Installation in such locations could cause damage to the cabinet and the electric components.

- **Never operate the register with wet hands.**

The water could seep into the interior of the register and cause component failure.

- **When cleaning your register, use a dry, soft cloth. Never use solvents, such as benzine and/or thinner.**

The use of such chemicals will lead to discoloration or deterioration of the cabinet.

- **The register plugs into any standard wall outlet (local voltage $\pm 10\%$ AC) with a dedicated earth-guard.** Other electrical devices on the same electrical circuit could cause the register to malfunction.
- **If the register malfunctions, call 905-568-7140 for service - do not try to repair the register yourself.**
- **For complete electrical disconnection, remove the AC power cord from the wall outlet.**

PRECAUTION

This Electronic Cash Register has a built-in memory protection circuit which is operated by rechargeable batteries.

Please note that all batteries will, in time, dissipate their charge even if not used. Therefore to insure an adequate initial charge in the protection circuit, and to prevent any possible loss of memory upon installation, it is recommended that each unit be allowed to recharge for a period of 24 to 48 hours prior to use by the customer.

After installation, the rechargeable batteries are charged when the machine is plugged in and its mode switch is set to the ON position (other than OFF position). This recharging precaution can prevent unnecessary initial service calls.

Customer Service Hotline
905-568-7140

For Easy Set-up, see
“GETTING STARTED” (page 8).

CONTENTS

INTRODUCTION	1
IMPORTANT	1
PRECAUTION	1
CONTENTS	2
PARTS AND THEIR FUNCTIONS	4
1 External View	4
2 Printer	4
3 Mode Switch and Mode Keys	5
4 Keyboard	5
5 Displays	6
6 Drawer Lock Key	6
GETTING STARTED	8

FOR THE OPERATOR

OVERVIEW OF FLOW OF DAILY SALES ENTRIES	12
BASIC SALES ENTRY	13
1 Basic Sales Entry Example	13
2 Error Warning	14
3 Item Entries	15
Single item entries	15
Repeat entries	16
Multiplication entries	16
Split pricing entries	17
Single item cash sale (SICS) entry	18
4 Displaying Subtotals	18
5 Finalization of Transaction	18
Cash or check tendering	18
Cash or check sale that does not require tender entry	19
Charge (credit) sale	19
Mixed-tender sale	19
6 Tax Calculation	20
Automatic tax	20
Manual tax	20
Tax delete	20
Tax status shift	21
OPTIONAL FEATURES	22
1 Auxiliary Entries	22
Discount and premium entries using the percent key	22
Discount and premium entries using the discount key	22
Refund entries	23
Non-add code number entries and printing	23
2 Auxiliary Payment Treatment	24
Currency conversion	24
Received-on account and paid-out entries	25
No sale (exchange)	25
Bottle return	25
3 Automatic Sequence Key (AUTO key) Entries	25
CORRECTION	26
1 Correction of the Last Entry (direct void)	26
2 Correction of the Next-to-last or Earlier Entry (indirect void)	26
3 Subtotal Void	27
4 Correction of Incorrect Entries not Handled by the Direct or Indirect Void Function	27

PRIOR TO PROGRAMMING	28
BASIC FUNCTION PROGRAMMING (For Quick Start)	28
1 Date and Time Programming	28
2 Tax Programming for Automatic Tax Calculation Function	29
Tax programming using a tax rate	29
The tax table (applicable to the add-on tax)	30
Quantity for doughnut tax exempt (for Canadian tax system)	32
AUXILIARY FUNCTION PROGRAMMING	33
1 Department Programming	33
2 PLU (Price Look-Up) and Subdepartment Programming	35
3 Commission Rate Programming	36
4 Miscellaneous Key Programming	37
Rate for [%1], [%2] and [CONV]	37
Amount for [⊖]	37
Percent rate limitation for [%1] and [%2]	38
Function parameters for [%1], [%2] and [⊖]	38
Function parameters for [CONV]	39
Entry digit limit for [RA], [RCPTPO] and [TAX]	39
Function parameters for [CHK], [CH1], [CH2] and [CA/AT] (when using as CA key)	40
5 Text Programming	41
ADVANCED PROGRAMMING	48
1 Register Number and Consecutive Number Programming	48
2 Various Function Selection Programming 1	48
Function selection for miscellaneous keys	49
Print format	49
Receipt print format	50
Electronic journal (EJ) function parameters	50
Function selection for tax	51
Other programming	51
3 Various Function Selection Programming 2	54
Power save mode	54
Logo message print format	54
High amount lockout (HALO) for cash in drawer (CID) (sentinel)	55
RS-232C interface	55
Thermal printer density	56
Language selection	56
Training clerk specification for training mode	57
AUTO key programming	57
4 Reading Stored Programs	57
TRAINING MODE	59
READING (X) AND RESETTING (Z) OF SALES TOTALS	60
EJ REPORT READING AND RESETTING	66
OVERRIDE ENTRIES	67
CORRECTION AFTER FINALIZING A TRANSACTION (Void mode).....	67
OPERATOR MAINTENANCE.....	68
1 In Case of Power Failure	68
2 In Case of Printer Error	68
3 Cautions in Handling the Printer and Recording Paper.....	68
4 Replacing the Paper Roll.....	69
5 Removing a Paper Jam	71
6 Cleaning the Printer (Print Head / Sensor / Roller)	71
7 Removing the Till and the Drawer	72
8 Opening the Drawer by Hand.....	72
9 Before Calling for Service.....	73
SPECIFICATIONS	74

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/sharp/XE-A302 operating programming manual.h](https://the-checkout-tech.com/manuals/sharp/XE-A302_operating_programming_manual.h)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)