 


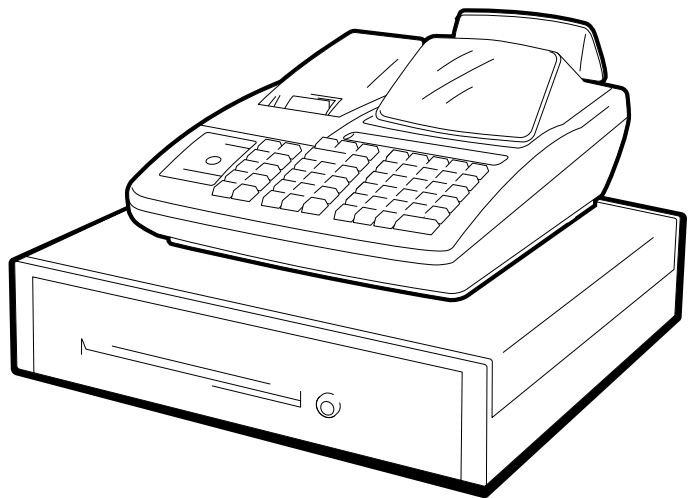

TEC Electronic Cash Register

MA-186-100 SERIES

Owner's Manual



TOSHIBA TEC CORPORATION

NOTICE

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications not expressly approved by manufacturer for compliance could void the user's authority to operate the equipment.

WARNING

"This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations."

"Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada."

Safety Summary

Personal safety in handling or maintaining the equipment is extremely important. Warnings and Cautions necessary for safe handling are included in this manual. All warnings and cautions contained in this manual should be read and understood before handling or maintaining the equipment.

Do not attempt to effect repairs or modifications to this equipment. If a fault occurs that cannot be rectified using the procedures described in this manual, turn off the power, unplug the machine, then contact your authorized TOSHIBA TEC representative for assistance.

Meanings of Each Symbol



This symbol indicates warning items (including cautions). Specific warning contents are drawn inside the \triangle symbol. (The symbol on the left indicates a general caution.)



This symbol indicates prohibited actions (prohibited items). Specific prohibited contents are drawn inside or near the \circ symbol. (The symbol on the left indicates "no disassembling".)




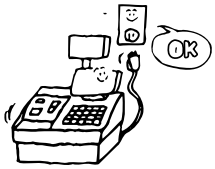

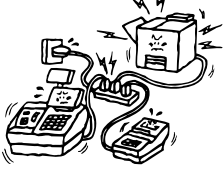





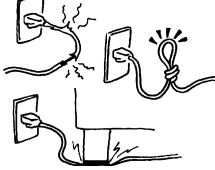



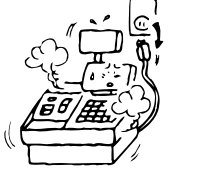





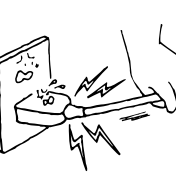

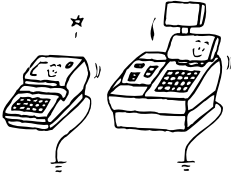


This symbol indicates actions which must be performed. Specific instructions are drawn inside or near the \bullet symbol. (The symbol on the left indicates "disconnect the power cord plug from the outlet".)



WARNING

This indicates that there is the risk of **death** or **serious injury** if the machines are improperly handled contrary to this indication.

 <p>Prohibited</p>  <p>■ Do not plug in or unplug the power cord plug with wet hands as this may cause electric shock.</p>	 <p>Any other than the specified AC voltage is prohibited.</p>  <p>■ Do not use voltages other than the voltage (AC) specified on the rating plate, as this may cause fire or electric shock.</p>
 <p>Prohibited</p>  <p>■ If the machines share the same outlet with any other electrical appliances which consume large amounts of power, the voltage will fluctuate widely each time these appliances operate. Be sure to provide an exclusive outlet for the machine as this may cause the machines to malfunction.</p>	 <p>Prohibited</p>  <p>■ Do not place metal objects or water-filled containers such as flower vases, flower pots or mugs, etc. on top of the machines. If metal objects or spilled liquid enter the machines, this may cause fire or electric shock.</p>
 <p>Prohibited</p>  <p>■ Do not insert or drop metal, flammable or other foreign objects into the machines through the ventilation slits, as this may cause fire or electric shock.</p>	 <p>Prohibited</p>  <p>■ Do not scratch, damage or modify the power cords. Also, do not place heavy objects on, pull on, or excessively bend the cords, as this may cause fire or electric shock.</p>
 <p>Disconnect the plug.</p>  <p>■ If the machines are dropped or their cabinets damaged, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause fire or electric shock.</p>	 <p>Disconnect the plug.</p>  <p>■ Continued use of the machines in an abnormal condition such as when the machines are producing smoke or strange smells may cause fire or electric shock. In these cases, immediately turn off the power switches and disconnect the power cord plugs from the outlet. Then, contact your authorized TOSHIBA TEC representative for assistance.</p>

 <p>Disconnect the plug.</p>  <p>■ If foreign objects (metal fragments, water, liquids) enter the machines, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause fire or electric shock.</p>	 <p>Disconnect the plug.</p>  <p>■ When unplugging the power cords, be sure to hold and pull on the plug portion. Pulling on the cord portion may cut or expose the internal wires and cause fire or electric shock.</p>
 <p>Connect a grounding wire.</p>  <p>■ Ensure that the equipment is properly grounded. Extension cables should also be grounded. Fire or electric shock can occur on improperly grounded equipment.</p>	 <p>No disassembling.</p>  <p>■ Do not remove covers, repair or modify the machine by yourself. You may be injured by high voltage, very hot parts or sharp edges inside the machine. Unauthorized modification is prohibited.</p>



CAUTION This indicates that there is the risk of personal **Injury** or **damage** to objects if the machines are improperly handled contrary to this indication.

Precaution

The following precautions will help to ensure that this machine will continue to function correctly.

- Try to avoid locations that have the following adverse conditions:
 - * Temperatures out of the specification
 - * Direct sunlight
 - * High humidity
 - * Shared power socket
 - * Excessive vibration
 - * Dust/Gas
- Do not subject the machine to sudden shocks.
- Do not press the keys too hard. Keys will operate correctly if they are touched lightly.
- Clean the cover and keyboard, etc. by wiping with a dry cloth or a cloth soaked with detergent and wrung out thoroughly. Never use thinner or other volatile solvent for cleaning.
- At the end of the day, turn the power OFF, then clean and inspect the exterior of the machine.
- Try to avoid using this equipment on the same power supply as high voltage equipment or equipment likely to cause mains interference.
- USE ONLY TOSHIBA TEC SPECIFIED consumables.
- DO NOT STORE the consumables where they might be exposed to direct sunlight, high temperatures, high humidity, dust, or gas.
- When moving the machine, take hold of the drawer and lift the machine.
- Do not place heavy objects on top of the machines, as these items may become unbalanced and fall causing **injury**.
- Do not block the ventilation slits of the machines, as this will cause heat to build up inside the machines and may cause **fire**.
- Do not lean against the machine. It may fall on you and could cause **injury**.

Request Regarding Maintenance

- Utilize our maintenance services.

After purchasing the machines, contact your authorized TOSHIBA TEC representative for assistance once per year or so to have the inside of the machines cleaned. Otherwise, dust will build up inside the machines and may cause **fire** or **malfunction**. Cleaning is particularly effective before humid rainy seasons.

- Our maintenance service performs the periodic checks and other work required to maintain the quality and performance of the machines, preventing accidents beforehand.

For details, please consult your authorized TOSHIBA TEC representative for assistance.

- Using insecticides and other chemicals

Do not expose the machines to insecticides or other volatile solvents, as this will deteriorate the cabinet or other parts or cause the paint to peel.

TABLE OF CONTENTS

	Page
1. Introduction	1
2. Unpacking	2
3. Outline of Preparation Procedure Before Operating the ECR	3
4. Appearance and Nomenclature	5
5. Control Lock and Control Keys	6
Control Keys	6
Control Lock	6
6. Display	7
Operator's Display	7
Customer's Display	7
Numeric Display	8
Message Descriptors (Triangular Lamps)	8
7. Keyboard	9
Standard Keyboard Layout	9
Other Optional Keys:	9
8. Installing the Paper Roll	10
9. Time and Date Setting	13
Time Setting or Adjustment	13
Date Setting or Adjustment	14
Displaying the Time	15
Printing the Time and Date	15
10. Tax Table Setting	15
U.S. Tax Tables Setting (also applicable to PST in Canada)	15
GST Rate Setting (applicable to Canada only)	19
Non-taxable Limit Amount Setting (applicable to only certain areas in Canada)	20
Tax Calculation Test	21
11. Optional Key Setting	21
List of Keys	21
Key Installation Setting	23
Blank Keyboard Sketch (for your planning aid)	23
12. Daily Operation Flow	25
13. Training	26
14. Setting Preparation of Each Key and Transaction Entries	27
Receipt-issue/Non-issue Selection	27
Clearing Errors, or Clearing Wrong Declaration Key or Wrong Numeric Entries	28
No-sale (Exchange)	29
Received-on-Account Payment	30
Paid Out	31
Department Keys	31
PLU (Price-Look-Up) (PLU Key)	40
Listing Capacity Open	46
Percent Charge, Percent Discount	46
Dollar Discount	49
Item Correct (Last Line Voiding)	49
Void (Designated Line Voiding)	50
All Void (Transaction Cancel)	51
Returned Merchandise	51
Non-add Number Print	52
Subtotal Read	53
Taxable Total Read	53
Manual Tax Entry	54
Finalizing a Sale	54
Check Cashing (Cashing Non-cash Media)	55
Post-issue Receipt	55

Tax Status Modification	56
Tax Exemption	57
Print/Non-print Options on Sale Receipts	58
15. Read and Reset Reports	59
Programming Operations Relating to Reports	59
Taking Read and Reset Reports	61
16. System Option Setting	69
Address: 1	71
Address: 2	72
Address: 3	73
Address: 6	74
Address: 7	75
Address: 8	76
Address: 11	77
Address: 13	78
Address: 14	79
Address: 15	80
Address: 16	81
17. Cashier Signing Operation (optional function)	82
Programming Requirements	82
Cashier Sign ON & Sign OFF	82
Cashier Reports	83
18. Electronic Journal (E.J.) Print (optional function)	83
Programming Requirement	83
E.J.-Near-Full Warning in REG Mode	83
Reading of the Remaining Lines of E.J. Memory	84
Electronic Journal Report	84
19. Program Data Verification	86
Operating Procedure	86
20. Paper Roll Replacement and Other Maintenance	90
Replacing the Paper Roll	90
Replacing the Ink Ribbon	93
Replenishing Ink to the Store Name Stamp	95
Manual Drawer Release and Lock	96
Removing the Drawer	97
Battery Exchange	97
Changing the Layout of the Money Case	98
Media Slot	99
21. In Case of the Power Failure	100
22. Troubleshooting	100
23. Status Clear and Memory Clear Operations	104
Status Clear	104
Sales Memory Clear	105
All Memory Clear	106
24. Specifications	107
Stamp Order	109

CAUTION:

1. *This manual may not be copied in whole or in part without prior written permission of TOSHIBA TEC.*
2. *The contents of this manual may be changed without notification.*
3. *Please refer to your local Authorized Service representative with regard to any queries you may have in this manual.*

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)