 


TEC

TEC Electronic Cash Register

MA-516-100 SERIES

Owner's Manual

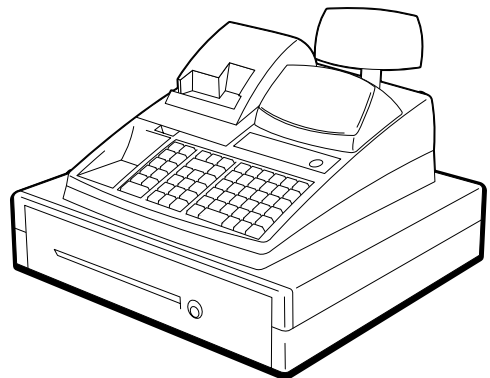

TOSHIBA TEC CORPORATION

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

Safety Summary

Personal safety in handling or maintaining the equipment is extremely important. Warnings and Cautions necessary for safe handling are included in this manual. All warnings and cautions contained in this manual should be read and understood before handling or maintaining the equipment.

Do not attempt to effect repairs or modifications to this equipment. If a fault occurs that cannot be rectified using the procedures described in this manual, turn off the power, unplug the machine, then contact your authorized TOSHIBA TEC representative for assistance.

Meanings of Each Symbol



This symbol indicates warning items (including cautions). Specific warning contents are drawn inside the \triangle symbol. (The symbol on the left indicates a general caution.)



This symbol indicates prohibited actions (prohibited items). Specific prohibited contents are drawn inside or near the $\text{\textcircled{/}}$ symbol. (The symbol on the left indicates "no disassembling".)




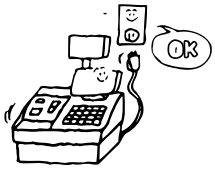

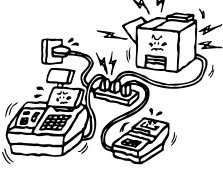





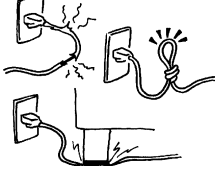



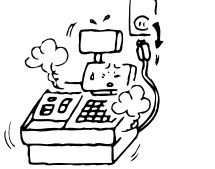





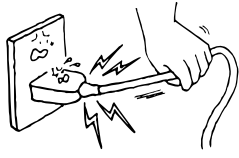

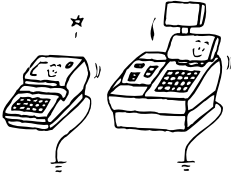


This symbol indicates actions which must be performed. Specific instructions are drawn inside or near the $\text{\textcircled{—}}$ symbol. (The symbol on the left indicates "disconnect the power cord plug from the outlet".)



WARNING

This indicates that there is the risk of **death** or **serious injury** if the machines are improperly handled contrary to this indication.

 <p>Prohibited</p>  <p>■ Do not plug in or unplug the power cord plug with wet hands as this may cause electric shock.</p>	 <p>Any other than the specified AC voltage is prohibited.</p>  <p>■ Do not use voltages other than the voltage (AC) specified on the rating plate, as this may cause fire or electric shock.</p>
 <p>Prohibited</p>  <p>■ If the machines share the same outlet with any other electrical appliances which consume large amounts of power, the voltage will fluctuate widely each time these appliances operate. Be sure to provide an exclusive outlet for the machine as this may cause the machines to malfunction.</p>	 <p>Prohibited</p>  <p>■ Do not place metal objects or water-filled containers such as flower vases, flower pots or mugs, etc. on top of the machines. If metal objects or spilled liquid enter the machines, this may cause fire or electric shock.</p>
 <p>Prohibited</p>  <p>■ Do not insert or drop metal, flammable or other foreign objects into the machines through the ventilation slits, as this may cause fire or electric shock.</p>	 <p>Prohibited</p>  <p>■ Do not scratch, damage or modify the power cords. Also, do not place heavy objects on, pull on, or excessively bend the cords, as this may cause fire or electric shock.</p>
 <p>Disconnect the plug.</p>  <p>■ If the machines are dropped or their cabinets damaged, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause fire or electric shock.</p>	 <p>Disconnect the plug.</p>  <p>■ Continued use of the machines in an abnormal condition such as when the machines are producing smoke or strange smells may cause fire or electric shock. In these cases, immediately turn off the power switches and disconnect the power cord plugs from the outlet. Then, contact your authorized TOSHIBA TEC representative for assistance.</p>

 <p>Disconnect the plug.</p>  <p>■ If foreign objects (metal fragments, water, liquids) enter the machines, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause fire or electric shock.</p>	 <p>Disconnect the plug.</p>  <p>■ When unplugging the power cords, be sure to hold and pull on the plug portion. Pulling on the cord portion may cut or expose the internal wires and cause fire or electric shock.</p>
 <p>Connect a grounding wire.</p>  <p>■ Ensure that the equipment is properly grounded. Extension cables should also be grounded. Fire or electric shock can occur on improperly grounded equipment.</p>	 <p>No disassembling.</p>  <p>■ Do not remove covers, repair or modify the machine by yourself. You may be injured by high voltage, very hot parts or sharp edges inside the machine. Unauthorized modification is prohibited.</p>



CAUTION This indicates that there is the risk of personal **Injury** or **damage** to objects if the machines are improperly handled contrary to this indication.

Precaution

The following precautions will help to ensure that this machine will continue to function correctly.

- Try to avoid locations that have the following adverse conditions:
 - * Temperatures out of the specification
 - * Direct sunlight
 - * High humidity
 - * Shared power socket
 - * Excessive vibration
 - * Dust/Gas
- Do not subject the machine to sudden shocks.
- Do not press the keys too hard. Keys will operate correctly if they are touched lightly.
- Clean the cover and keyboard, etc. by wiping with a dry cloth or a cloth soaked with detergent and wrung out thoroughly. Never use thinner or other volatile solvent for cleaning.
- At the end of the day, turn the power OFF, then clean and inspect the exterior of the machine.
- Try to avoid using this equipment on the same power supply as high voltage equipment or equipment likely to cause mains interference.
- USE ONLY TOSHIBA TEC SPECIFIED consumables.
- DO NOT STORE the consumables where they might be exposed to direct sunlight, high temperatures, high humidity, dust, or gas.
- When moving the machine, take hold of the drawer and lift the machine.
- Do not place heavy objects on top of the machines, as these items may become unbalanced and fall causing **injury**.
- Do not block the ventilation slits of the machines, as this will cause heat to build up inside the machines and may cause **fire**.
- Do not lean against the machine. It may fall on you and could cause **injury**.

Request Regarding Maintenance

- Utilize our maintenance services.

After purchasing the machines, contact your authorized TOSHIBA TEC representative for assistance once per year or so to have the inside of the machines cleaned. Otherwise, dust will build up inside the machines and may cause **fire** or **malfunction**. Cleaning is particularly effective before humid rainy seasons.

- Our maintenance service performs the periodic checks and other work required to maintain the quality and performance of the machines, preventing accidents beforehand.

For details, please consult your authorized TOSHIBA TEC representative for assistance.

- Using insecticides and other chemicals

Do not expose the machines to insecticides or other volatile solvents, as this will deteriorate the cabinet or other parts or cause the paint to peel.

1. Introduction

Thank you for choosing the TEC electronic cash register MA-516-100 series. This instruction manual provides a description of the functions and handling of this register and should be read carefully to ensure optimum performance. Since every consideration has been given to safety and reliability, there is no danger of damaging the machine by incorrect operation.

Please refer to this manual whenever you have any questions concerning the machine. This machine has been manufactured under strict quality control and should give you full satisfaction.

For supplies, service or assistance call:


Please have the following information available when you call:

Product Name:	TEC Electronic Cash Register
Model:	MA-516-100
Serial Number:	_____
Place Purchased:	_____
Date of Purchase:	_____

If for any reason this product is to be returned to the store where purchased, it must be packed in the original carton.

- The specifications described in this manual may be modified by TOSHIBA TEC, if necessary.
- Be sure to keep this manual for future reference.

 2. Unpacking

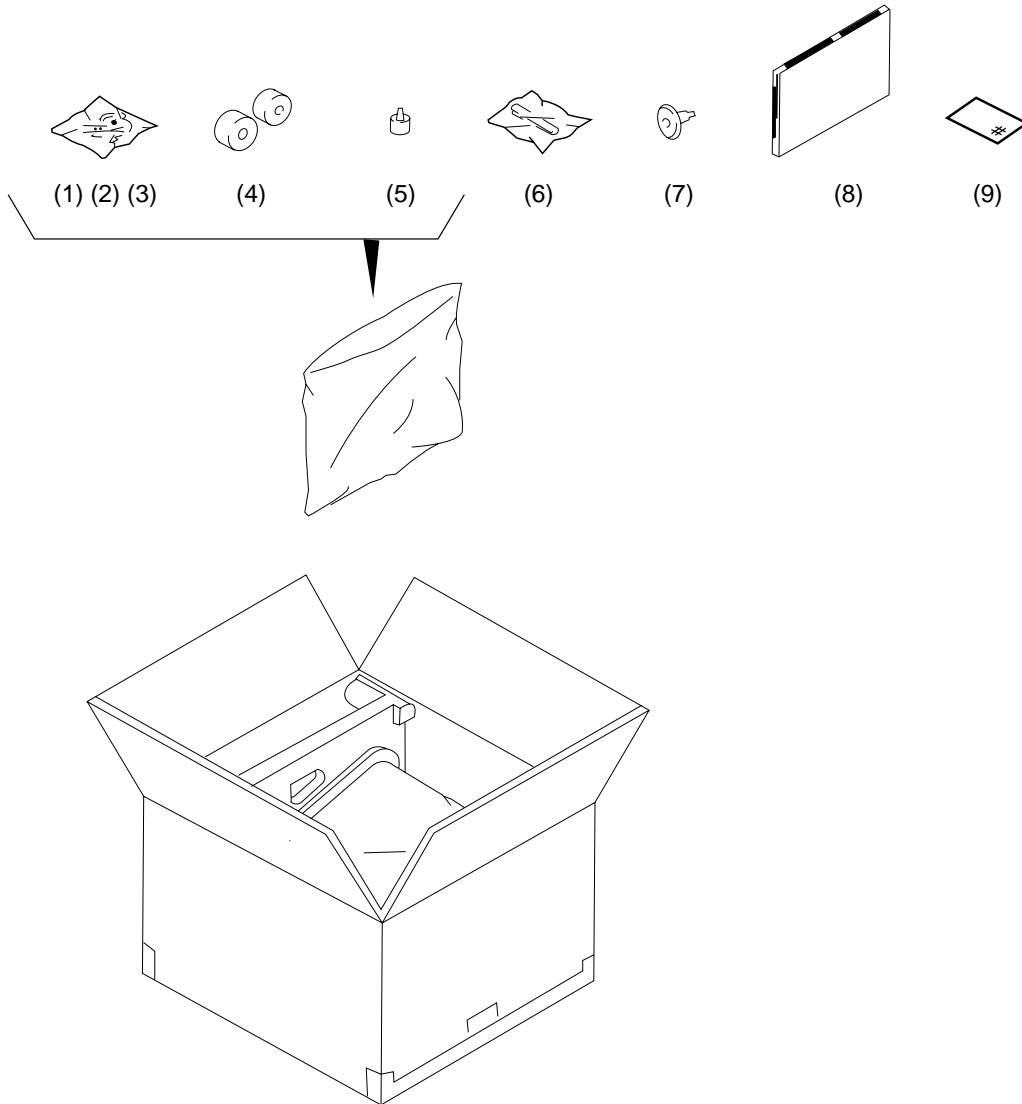

- [1] Control Key (**REG** Key, **MGR** Key, **MA** Key, **S** Key; 2 pcs. respectively)
- [2] Drawer Key (2 pcs.)
- [3] Printer Cover Key (2 pcs.)
- [4] Paper Roll 45mm x Ø50mm (2 pcs.)

- [5] Stamp Ink (1 pc.)
- [6] Ribbon Cassette (1 pc.)
- [7] Journal Take-up Reel (1 pc.)
- [8] Owner's Manual (1 pc.)
- [9] Warranty Registration (1 pc.)

3. Precautions

The ECR is a precision machine. Please handle it carefully considering the following guidelines.

Remarks on the Location

Do not place it where unusual temperature changes are expected or where it will be subjected to direct sunlight.

 


Place it on a flat and level surface with little dust, humidity, vibration, etc.

Keep it away from water sources.



Be certain that the power voltage in your area matches that required for the machine. (The rated voltage is 117V AC.)


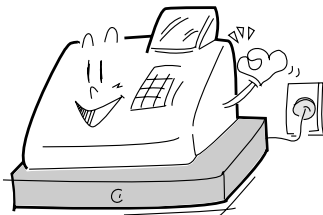


The socket-outlet shall be installed near the equipment and shall be easily accessible.

Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

Remarks on Operating the ECR

  The keys on the keyboard function with a light touch. Avoid pressing the keys too hard.

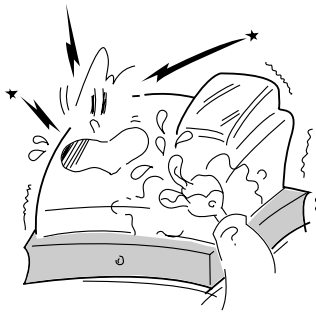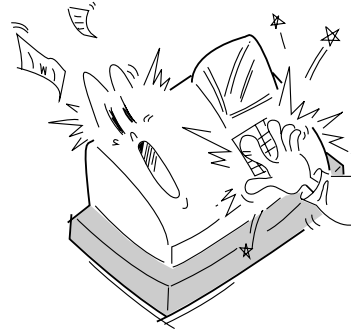

Do not apply thinner, benzene, or other volatile materials to the cabinet or other plastic parts. Such liquids will cause discoloration or deterioration. If dirty, wipe off with a piece of cloth soaked in a neutral detergent and wrung out thoroughly.

Do not handle the machine with wet hands, since this may cause electrical malfunctions and corrosion of parts.



Turn the Control Lock to **OFF** position when all operations are completed after business hours.

Never try to repair the ECR. Call dealer for information of your local TEC representative.

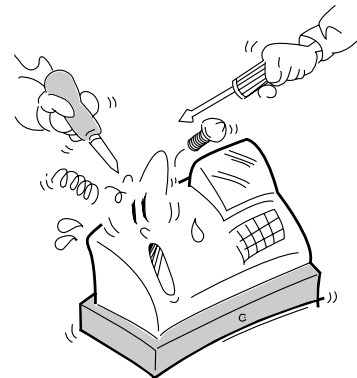 


TABLE OF CONTENTS

	Page
1. Introduction.....	1
2. Unpacking	1
3. Precautions	3
Remarks on the Location.....	3
Remarks on Operating the ECR	4
5. Outline of Preparation Procedure Before Operating the ECR.....	9
6. Appearance and Nomenclature	11
7. Control Lock and Control Keys	12
Control Keys	12
Control Lock	12
8. Display	13
Numeric Display	14
Message Descriptors (Status Lamps).....	14
9. Keyboard	15
10. Installing the Receipt/Journal Roll	16
Installing the Receipt Roll.....	16
Installing the Journal Roll.....	18
11. Installing the Ribbon Cassette.....	19
12. Setting the Time and Date	20
Setting the Time.....	20
Setting the Date	21
Displaying the Time.....	22
Printing the Time and Date	22
13. Tax Table Setting.....	22

Setting the U.S. Tax Table (Also applicable to PST in Canada).....	22
Setting the GST Rate (applicable to Canada only)	27
Setting the Non-taxable Limit Amount (applicable to only certain areas in Canada).....	28
Tax Calculation Test.....	29
14. Register No. Setting	29
15. Optional Key Setting	30
List of Keys	30
Key Installation Setting.....	32
Blank Keyboard Sketch (for your planning aid).....	32
16. Daily Operation Flow.....	35
Before Opening the Store	35
During Business Hours.....	35
After Closing the Store	35
17. Cashier Identifying Operation	36
(1) Signing Method	36
(2) Cashier Push Key Method.....	37
18. Setting Preparation of Each Key, And Transaction Entries	38
Receipt-issue/Non-issue Selection	38
Clearing Errors, or Clearing Wrong Declaration Key or Wrong Numeric Entries	39
Department Keys	40
PLU (Price-Look-UP)	51
Preset Price Open.....	59
Listing Capacity Open.....	60
Percent Charge, Percent Discount.....	61
Dollar Discount	63
Vendor Coupon.....	64
Store Coupon.....	65
Tax Modification	66
Food Stamp Modification.....	67

Item Correction (Last Line Voiding).....	68
Returned Merchandise.....	68
Void (Designated Line Voiding).....	70
All Void (Transaction Cancel).....	71
Non-add Number Print	72
Subtotal Read & Print.....	73
Taxable Total Read.....	74
Manual Tax Entry	74
Food Stamp Tender.....	75
Cash Total, Cash Tender	77
Non-cash Media Total, Non-cash Media Tender	80
Multi-tender, Split Tender	82
Tax Exemption	84
Check Cashing.....	85
No-sale	86
Received-on Account Payment	87
Paid Out.....	88
Sale Paid in Foreign Currencies.....	88
Post-issue Receipt	92
Validation Print	93
Print/Non-print Options on Sale Receipts	95
19. Operations in “MGR” Mode.....	96
Items programmed to require Manager Intervention.....	96
Listing Capacity Release	97
20. Operations in “ - “ Mode	98
21. Read and Reset Reports	99
Programming Operations Relating to Reports	99
Taking Read and Reset-Reports	101
Report Sample Format	107
22. System Option Setting	117
Programming Procedure.....	117
Address: 1.....	119
Address: 2.....	120

Address: 3	122
Address: 4	123
Address: 5	124
Address: 6	124
Address: 7	125
Address: 8	126
Address: 9	127
Address: 10	128
Address: 11	129
Address: 12	130
Address: 13	131
Address: 14	132
Address: 15	133
Address: 16	134
23. Program Data Verification	136
Operating Procedure	136
24. Paper Roll Replacement and Other Maintenance	141
Replacing the Receipt Roll	141
Replacing the Journal Roll	142
Replacing the Ribbon Cassette	143
Replenishing Ink to the Store Name Stamp	145
Manual Drawer Release and Lock	147
Removing the Drawer	147
Changing the Layout of the Money Case	148
Media Slot	149
25. In Case of the Power Failure	149
26. Troubleshooting	150
27. Status Clear and Memory Clear Operations	155
Status Clear	155
Sales Memory Clear	156
All Memory Clear	157
28. Specifications	158
STAMP ORDER	159

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/MA-516 Series owners manual.html](https://the-checkout-tech.com/manuals/TEC/MA-516%20Series%20owners%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)