 


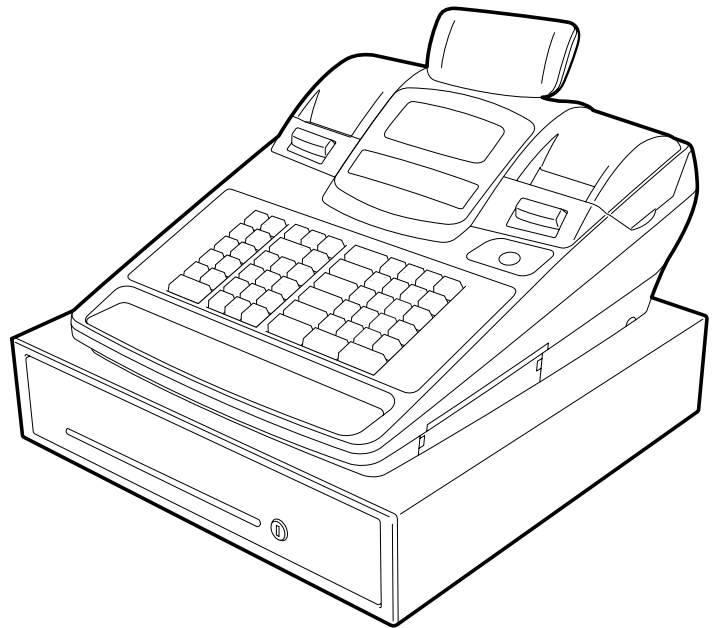

TEC Electronic Cash Register

MA-600-1 SERIES

Owner's Manual



TOSHIBA TEC CORPORATION

FCC Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Changes or modifications not expressly approved by manufacturer for compliance could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Caution:

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Attention:

Le socle de prise de courant doit être installé à proximité du matériel et doit être aisément accessible.

CAUTION!

1. *This manual may not be copied in whole or in part without prior written permission of TOSHIBA TEC.*
2. *The contents of this manual may be changed without notification.*
3. *Please refer to your local Authorized Service representative with regard to any queries you may have in this manual.*

Safety Summary

Personal safety in handling or maintaining the equipment is extremely important. Warnings and Cautions necessary for safe handling are included in this manual. All warnings and cautions contained in this manual should be read and understood before handling or maintaining the equipment.

Do not attempt to effect repairs or modifications to this equipment. If a fault occurs that cannot be rectified using the procedures described in this manual, turn off the power, unplug the machine, then contact your authorized TOSHIBA TEC representative for assistance.

Meanings of Each Symbol



This symbol indicates warning items (including cautions). Specific warning contents are drawn inside the Δ symbol. (The symbol on the left indicates a general caution.)



This symbol indicates prohibited actions (prohibited items). Specific prohibited contents are drawn inside or near the \odot symbol. (The symbol on the left indicates “no disassembling”.)



This symbol indicates actions which must be performed. Specific instructions are drawn inside or near the \bullet symbol. (The symbol on the left indicates “disconnect the power cord plug from the outlet”.)



WARNING

This indicates that there is the risk of **death** or **serious injury** if the machines are improperly handled contrary to this indication.



 
Prohibited

Do not plug in or unplug the power cord plug with wet hands as this may cause **electric shock**.




Any other than the specified AC voltage is prohibited.

Do not use voltages other than the voltage (AC) specified on the rating plate, as this may cause **fire** or **electric shock**.

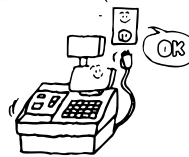

Prohibited

 If the machines share the same outlet with any other electrical appliances that consume large amounts of power, the voltage will fluctuate widely each time these appliances operate. Be sure to provide an exclusive outlet for the machine as this may cause **fire** or **electric shock**.

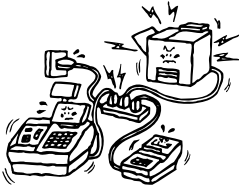

Prohibited

Do not place metal objects or water-filled containers such as flower vases, flower pots or mugs, etc. on top of the machines. If metal objects or spilled liquid enter the machines, this may cause **fire** or **electric shock**.



Prohibited

Do not insert or drop metal, flammable or other foreign objects into the machines through the ventilation slits, as this may cause **fire** or **electric shock**.



Prohibited

Do not scratch, damage or modify the power cords. Also, do not place heavy objects on, pull on, or excessively bend the cords, as this may cause **fire** or **electric shock**.



Disconnect the plug.






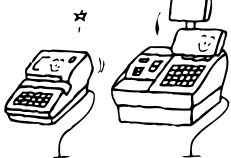 


If the machines are dropped or their cabinets damaged, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause **fire** or **electric shock**.



Disconnect the plug.

Continued use of the machines in an abnormal condition such as when the machines are producing smoke or strange smells may cause **fire** or **electric shock**. In these cases, immediately turn off the power switches and disconnect the power cord plugs from the outlet. Then, contact your authorized TOSHIBA TEC representative for assistance.



 <p>Disconnect the plug.</p> 	<p>If foreign objects (metal fragments, water, liquids) enter the machines, first turn off the power switches and disconnect the power cord plugs from the outlet, and then contact your authorized TOSHIBA TEC representative for assistance. Continued use of the machine in that condition may cause fire or electric shock.</p>	 <p>Disconnect the plug.</p> 	<p>When unplugging the power cords, be sure to hold and pull on the plug portion. Pulling on the cord portion may cut or expose the internal wires and cause fire or electric shock.</p>
 <p>Connect a grounding wire.</p> 	<p>Ensure that the equipment is properly grounded. Extension cables should also be grounded. Fire or electric shock could occur on improperly grounded equipment.</p>	 <p>No disassembling.</p> 	<p>Do not remove covers, repair or modify the machine by yourself. You may be injured by high voltage, very hot parts or sharp edges inside the machine. Unauthorized modification is prohibited.</p>



CAUTION

This indicates that there is the risk of personal **Injury** or **damage** to objects if the machines are improperly handled contrary to this indication.

Precautions

The following precautions will help to ensure that this machine will continue to function correctly.

- Try to avoid locations that have the following adverse conditions:
 - * Temperatures out of the specification
 - * Direct sunlight
 - * High humidity
 - * Shared power source
 - * Excessive vibration
 - * Dust/Gas
- Do not subject the machine to sudden shocks.
- Do not press the keys too hard. Keys will operate correctly if they are touched lightly.
- Clean the cover and keyboard, etc. by wiping with a dry cloth or a cloth soaked with detergent and wrung out thoroughly. Never use thinner or other volatile solvent for cleaning.
- At the end of the day, turn the power OFF, then clean and inspect the exterior of the machine.
- Try to avoid using this equipment on the same power supply as high voltage equipment or equipment likely to cause mains interference.
- USE ONLY TOSHIBA TEC SPECIFIED consumables.
- DO NOT STORE the consumables where they might be exposed to direct sunlight, high temperatures, high humidity, dust, or gas.
- When moving the machine, take hold of the drawer and lift the machine.
- Do not place heavy objects on top of the machines, as these items may become unbalanced and fall causing **injury**.
- Do not block the ventilation slits of the machines, as this will cause heat to build up inside the machines and may cause **fire**.
- Do not lean against the machine. It may fall on you and could cause **injury**.
- Place the machine on a stable and level surface.

Request Regarding Maintenance

- Utilize our maintenance services.
After purchasing the machine, contact your authorized TOSHIBA TEC representative for assistance once a year to have the inside of the machine cleaned. Otherwise, dust will build up inside the machines and may cause a **fire** or a **malfunction**. Cleaning is particularly effective before humid rainy seasons.
- Our preventive maintenance service performs the periodic checks and other work required to maintain the quality and performance of the machines, preventing accidents beforehand.
For details, please consult your authorized TOSHIBA TEC representative for assistance.
- Using insecticides and other chemicals
Do not expose the machines to insecticides or other volatile solvents. This will cause the cabinet or other parts to deteriorate or cause the paint to peel.

OPERATOR'S GUIDE

TABLE OF CONTENTS

	Page
1. TO OUR CUSTOMERS -----	1- 1
2. ACCESSORIES -----	1- 1
3. APPEARANCE AND NOMENCLATURE -----	3- 1
4. MODE LOCK AND MODE SELECTOR KEYS -----	4- 1
4.1 Mode Lock-----	4- 1
4.2 Mode Selector Keys-----	4- 1
5. DISPLAY -----	5- 1
5.1 LCD Display-----	5- 2
5.2 10-digit 7-segment Numeric Display-----	5- 4
5.3 Message Description (Status Lamps)-----	5- 4
6. OUTLINE OF PREPARATION PROCEDURE BEFORE OPERATING THE ECR ----	6- 1
6.1 Installing/Replacing the Receipt/Journal Roll-----	6- 2
7. KEYBOARD LAYOUT -----	7- 1
8. FUNCTIONS OF EACH KEY -----	8- 1
9. CASHIER SIGNING OR CASHIER KEY OPERATIONS -----	9- 1
9.1 Cashier Code Entry-----	9- 1
9.2 Cashier Key Method ([CLK] Keys) -----	9- 5
9.3 Training Mode Start and End-----	9- 6
10. DAILY OPERATION FLOW -----	10- 1
11. REGISTERING PROCEDURE AND PRINT FORMAT -----	11- 1
11.1 No-Sale-----	11- 2
11.2 Receipt-Issue/Non-Issue Selection -----	11- 3
11.3 Receipt Post-Issue-----	11- 4
11.4 Department Entry -----	11- 5
11.5 PLU Entry-----	11- 6
11.6 Quantity Extension (Multiplication) for DEPTs/PLUs -----	11- 7
11.7 Repeat Entry -----	11- 9
11.8 Single-Item Department or Single-Item PLU Entry-----	11-11
11.9 HASH Department Entry, HASH PLU Entry -----	11-11
11.10 Split Package Pricing -----	11-12
11.11 Item Correct -----	11-14
11.12 Void -----	11-15
11.13 All Void -----	11-15
11.14 Returned Merchandise -----	11-16
11.15 Subtotal (Sale Total Pre-taxed) Read-----	11-16

	Page
11.16 Finalizing a Sale-----	11-17
11.17 Multi-Tendering-----	11-18
11.18 Split Tendering -----	11-18
11.19 Sale Paid in Foreign Currencies-----	11-19
11.20 Food Stampable Total Read, Food Stamp Tendering -----	11-20
11.21 Tax Calculation and Print -----	11-20
11.22 Taxable Total (Sale Total With Taxes) Read-----	11-21
11.23 Tax Exemption-----	11-21
11.24 Tax Status or Food Stamp Status Modification-----	11-21
11.25 Manual Tax Entry -----	11-21
11.26 Received-on-Account -----	11-22
11.27 Paid-out -----	11-22
11.28 Dollar Discount -----	11-23
11.29 Percent Discount, Percent Charge -----	11-23
11.30 Store Coupon -----	11-24
11.31 Vendor Coupon-----	11-24
11.32 Listing Capacity Open -----	11-25
11.33 Non-Add Number Print -----	11-25
11.34 Check Cashing (No-sale cashing of a non-cash media)-----	11-26
11.35 No-Sale Exchange from Foreign Currency to Domestic Currency -----	11-26
11.36 No-Sale Exchange from Domestic Currency to Foreign Currency -----	11-27
11.37 PLU Price Shift Entry ([PRICE SHIFT 1] to [PRICE SHIFT 3] Keys) -----	11-27
11.38 PLU Price Shift Entry ([1st PRICE], [2nd PRICE], [3rd PRICE] Keys) -----	11-28
11.39 Charge Posting: Previous Balance Manual Entry Type-----	11-29
11.40 Consignment Print -----	11-31
11.41 Validation Print -----	11-31
11.42 Sale Finalization by Electronic Fund Transfer (EFT) -----	11-32
11.43 Remote Slip Printer (hardware option) Operation-----	11-46
11.44 When a Power Failure Occurs... -----	11-47
12. JOURNAL AND RECEIPT PAPER-END DETECTOR-----	12- 1
13. PRINTER HEAD OPEN DETECTOR -----	13- 1
14. REMOTE SLIP PRINTER MOTOR LOCK DETECTOR -----	13- 1
15. GENERAL MAINTENANCE-----	15- 1
15.1 Cleaning the Covers-----	15- 1
15.2 Removing Jammed Paper -----	15- 1
15.3 When "VOLTAGE ERROR" is displayed...-----	15- 1
15.4 Removing the Drawer-----	15- 1
15.5 Media Slot -----	15- 2
15.6 Drawer Key-----	15- 2
16. SPECIFICATIONS -----	16- 1

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/MA-600 Series owners programming manual/](https://the-checkout-tech.com/manuals/TEC/MA-600%20Series%20owners%20programming%20manual/)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)