

# Handleiding bij uw TOWA kasregister model SX-680



# Inhoudsopgave

Pag. 2	Inhoudsopgave	Pag. 25	3.24	Extra logo programmeren
Pag. 3	1		3.25	Programmering controleren
	1.1	Pag. 26	4.0	Uitleg van de toetsen
	1.2	Pag. 27	4.1	Extra uitleg
	1.3	Pag. 28	5.0	Rapportage
Pag. 4	1.4	Pag. 29	6.0	Reinigen van de kassa
	1.5		7.0	Handmatig openen van de geldlade
Pag. 5	1.6		8.0	Onderhoud van de kassa
Pag. 6	1.7		9.0	Kasdeclaratie
Pag. 7	1.8	Pag. 30	10.0	Foutmedelingen
Pag. 8	1.81	Pag. 31	11.0	Uitleg van de rapportage
Pag. 9	1.9			
Pag. 10	2			
	2.1			
	2.2			
	2.3			
Pag. 11	2.4			
Pag. 12	3			
	3.1			
	3.2			
	3.3			
	3.4			
	3.5			
Pag. 13	3.6			
	3.7			
	3.8			
Pag. 14	3.9			
	3.9.1			
	3.9.2			
	3.9.3			
Pag. 15	3.9.4			
	3.9.5			
Pag. 16	3.10			
	3.10.1			
	3.10.2			
	3.10.3			
	3.10.4			
Pag. 17	3.10.5			
Pag. 18	3.10.6			
	3.10.7			
	3.10.8			
Pag. 19	3.11			
	-%			
	+%			
	Toeslag			
	-%Art			
	-			
Pag. 20	3.12			
	BTW programmeren			
	BTW tarief1 programmeren			
	BTW tarief2 programmeren			
	3.13			
Pag. 21	3.14			
	3.15			
	3.16			
Pag. 22	3.17			
	3.18			
	3.19			
Pag. 23	3.20			
Pag. 24	3.21			
	3.22			
	3.23			

## 1.Voordat u begint

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/towa/SX-680 programming DUTCH manual.html](https://the-checkout-tech.com/manuals/towa/SX-680%20programming%20DUTCH%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)