

LX-5000 series 02 type

LX-5600 2-sheet dot matrix printer

LX-5700 2-sheet thermal printer

LX-5750 1-sheet thermal printer

Interfaces & 

Peripherals 

Manual 

CAUTION!

When the control key position is LOCK, the display is off and keyboard is disabled but the ECR's power is still **ON**. So that before you connect the cable of peripherals, make sure that the AC cord is disconnected otherwise the ECR will be damaged.

CONTENTS

I. INTERFACE INFORMATION	1
II. IRC SYSTEM.....	4
III. PERIPHERALS.....	6
1. TERMINAL PRINTERS.....	6
1) TP-822/832 (Kitchen Printer, connected to ch-A).....	6
2) TP-620 (Slip Printer, connected to ch-A).....	7
3) CBM-1000 (Thermal Kitchen Printer, connected to ch-A via NA-710/730)	8
4) TM-T88III (Thermal Slip Printer, connected to ch-B).....	9
2. SCANNER	10
3. SCALE	12
1) Scale Information of ICL Protocol [SF-25.a=0].....	13
2) Scale Information of W Protocol [SF-25.a=1]	15
4. EFT TERMINALS.....	16
IV. PC COMMUNICATION	17
1. BATCH COMMUNICATION.....	17
2. PROGRAM LOADER (PLM 2000).....	17
3. ESF DATA TRANSFER (Electronic Store & Forward).....	18
V. ECR TO ECR RAM DATA TRANSFER.....	20
VI. JOURNAL DATA TRANSFER	21
VII. CABLE CONNECTION.....	22
1. CHANNEL A --- IRC LINE.....	22
2. CHANNELS B, D & E.....	24
1) ECR (ch-B) to Thermal Slip Printer TM-T88III	24
2) ECR (ch-B, ch-D/E) to Scale.....	24
3) ECR (ch-B, ch-D/E) to PC	24
4) ECR (ch-B, ch-D/E) to Handy Scanner	25
5) ECR (ch-B, ch-D/E) to Flat Bed Scanner	25
6) ECR (ch-B, ch-D/E) to Peripheral for Journal Data Transfer.....	26
7) ECR (ch-B) to ECR (ch-B) for RAM Data Transfer	26
8) ECR (ch-B) to EFT Terminal	27

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/uniwell/LX-5000 LX-5600 LX-5700 LX-5750 Type>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)