

**LX-5000** series 05 type

LX-5600 2-sheet dot matrix printer

LX-5700 2-sheet thermal printer

LX-5750 1-sheet thermal printer

Interfaces & 

Peripherals 

Manual 

## **CAUTION!**

When the control key position is LOCK, the display is off and keyboard is disabled but the ECR's power is still **ON**. So that before you connect the cable of peripherals, make sure that the AC cord is disconnected otherwise the ECR will be damaged.

# CONTENTS

<b>I. INTERFACE INFORMATION</b> .....	<b>1</b>
<b>System Configuration</b> .....	<b>1</b>
<b>Interface Information</b> .....	<b>2</b>
<b>Pin Assignment &amp; Character Structures</b> .....	<b>3</b>
<b>II. IRC SYSTEM</b> .....	<b>4</b>
<b>III. REAL-TIME COMMUNICATION --- not available</b> .....	<b>6</b>
<b>IV. PERIPHERALS</b> .....	<b>8</b>
<b>1. SLIP PRINTERS</b> .....	<b>8</b>
1) TP-822/832 (connected to ch-A).....	8
2) TP-620 (connected to ch-A).....	9
3) CBM-1000 (connected to ch-A via NA-710/730).....	10
4) CBM-1000 (connected to ch-B).....	11
5) TM-T88III (connected to ch-B) .....	12
<b>2. SCANNER</b> .....	<b>13</b>
<b>3. SCALE</b> .....	<b>15</b>
1) Scale Information of ICL Protocol [SF-5.a=0] .....	16
2) Scale Information of W Protocol [SF-5.a=1] .....	18
<b>V. PC COMMUNICATION</b> .....	<b>19</b>
<b>1. BATCH COMMUNICATION</b> .....	<b>19</b>
<b>2. PROGRAM LOADER (PLM 2000)</b> .....	<b>20</b>
<b>3. ESF DATA TRANSFER (Electronic Store &amp; Forward)</b> .....	<b>20</b>
<b>VI. ECR TO ECR RAM DATA TRANSFER</b> .....	<b>23</b>
<b>VII. JOURNAL DATA TRANSFER</b> .....	<b>24</b>
<b>VIII. CABLE CONNECTION</b> .....	<b>25</b>
<b>1. CHANNEL A</b> .....	<b>25</b>
<b>2. CHANNEL B/D/E</b> .....	<b>27</b>
1) ECR (ch-B) to Thermal Slip Printer CBM-1000, TM-T88III .....	27
2) ECR (ch-B, ch-D/E) to Scale .....	27
3) ECR (ch-B, ch-D/E) to PC.....	28
4) ECR (ch-B, ch-D/E) to Handy Scanner .....	28
5) ECR (ch-B, ch-D/E) to Flat Bed Scanner .....	28
6) ECR (ch-B) to NA-740 .....	28
for Journal Data Transfer, Handy Scanner and Flat Bed Scanner .....	28
7) ECR (ch-B) to ECR (ch-B) for ECR RAM Data Transfer .....	29
8) ECR (ch-B) to NA-740 (MASTER) for Thermal Slip Printer CBM-1000 and PC.....	29
9) ECR (ch-B, ch-D/E) to Flat Bed Scanner .....	29
10) ECR (ch-B, ch-D/E) to Peripheral for Journal Data Transfer .....	29

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/uniwell/LX-5000 LX-5600 LX-5700 LX-5750 Type>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)