

		Uniwell
	<i>NX-5400</i> <i>01 type</i> <i>Interfaces and Peripherals</i> <i>Manual</i>	
		<i>Sep.12.2001</i>

CONTENTS

I. INTERFACE INFORMATION	1
II. IRC SYSTEM.....	3
III. PERIPHERALS.....	5
1. TP-420/422/522/722 (Kitchen Printer, connected to ch-A)	5
2. TP-620 (Slip Printer, connected to ch-A).....	6
3. SCANNER	7
IV. PC COMMUNICATION	9
1. BATCH COMMUNICATION.....	9
2. PROGRAM LOADER (PLM 2000).....	9
V. ECR TO ECR RAM DATA TRANSFER.....	10
VI. JOURNAL DATA TRANSFER	11
VII. CABLE CONNECTION.....	12
1. CHANNEL A --- IRC LINE.....	12
2. CHANNEL B	13
1) ECR --- PC	13
2) ECR --- AUTO ANSWER MODEM (to AUTO DIAL MODEM --- PC)	13
3) ECR --- HANDY SCANNER	14
4) ECR --- FLAT BED SCANNER.....	14
5) ECR --- ECR FOR RAM DATA TRANSFER.....	15
6) ECR --- PERIPHERAL FOR JOURNAL DATA TRANSFER	15