

		Uniwell
	<i>NX-5400</i> <i>02 type</i> <i>Interfaces and</i> <i>Peripherals Manual</i>	
		Aug. 26. 2002

CAUTION!

When the control key position is OFF, the display is off and keyboard is disabled but the ECR's power is still **ON**. So that before you open the upper case, make sure that the AC cord is disconnected. Especially when you replace the ROM, it must be disconnected, otherwise the ECR will be damaged.

CONTENTS

I. INTERFACE INFORMATION	1
II. IRC SYSTEM	3
III. PERIPHERALS	5
1. TERMINAL PRINTERS	5
1) TP-420/422/522/722 (Kitchen Printer, connected to ch-A)	5
2) TP-620 (Slip Printer, connected to ch-A).....	6
3) CBM-233/1000 (Thermal Kitchen Printer, connected to ch-A via NA-710/730)	7
4) TM-T88III (Thermal Slip Printer, connected to ch-B).....	8
2. SCANNER	9
3. EFT TERMINALS	11
IV. PC COMMUNICATION	12
1. BATCH COMMUNICATION	12
2. PROGRAM LOADER (PLM 2000)	12
3. ESF DATA TRANSFER (Electronic Store & Forward)	13
V. ECR TO ECR RAM DATA TRANSFER	15
VI. JOURNAL DATA TRANSFER	16
VII. CABLE CONNECTION	17
1. CHANNEL A --- IRC LINE	17
2. CHANNEL B /CHANNEL C & D of IF10-1 K-UNIT	18
1) ECR (ch-B) --- THERMAL SLIP PRINTER TM-T88III	18
2) ECR (ch-B) --- PC.....	18
3) ECR (ch-B) --- AUTO ANSWER MODEM (to AUTO DIAL MODEM --- PC).....	19
4) ECR (ch-B or C) --- HANDY SCANNER	19
5) ECR (ch-B or C) --- FLAT BED SCANNER.....	19
6) ECR (ch-B) --- ECR FOR RAM DATA TRANSFER	20
7) ECR (ch-B) to EFT TERMINAL	20
8) ECR (ch-B or D) --- PERIPHERAL FOR JOURNAL DATA TRANSFER.....	21

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/uniwell/NX-5400 type 02 interfaces and peripherals](https://the-checkout-tech.com/manuals/uniwell/NX-5400%20type%2002%20interfaces%20and%20peripherals.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)