
## OPERATION MANUAL UI-5 series

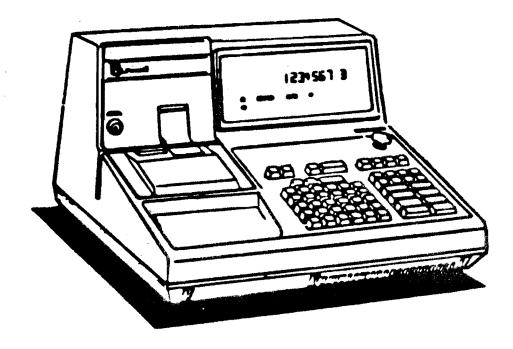

## BUniwell

## I-1.CONTROL LOCK/KEY

¢)

Key name & rotate position M Z OP			Key position	Function on each position
		UF	Z2	To reset (1) 2nd level of DPT/PLU (2) GTTL 1 (3) SECRET CLERK CODE (4) SECRET MODE
			SP	To program (1) System Function(2) Machine- No. (3) Secret Clerk Code (4) VAT % TAX (5) Tax Table (6) DEPT FLAG (7) Media/% FLAG
0	$\odot$	Ð	LOCK	To lock/prohibit to use machine.
0	Φ	Φ	R	To register normal operation
			X	To read data & program dump,PLU, DPT, Transaction, Clerk-report,and to set DATE & One day-increment.
			Z1/P	To Program (1) DPT Price (2) HALO (3) PLU Price (4) STOCK(Q"ty) Entry(5) % Rate and to reset (1) Auto Full Transaction (2) Single Clerk (3) CID-1/2 (4) Full 1st level PLU

NOTE-1 : Each key can be inserted & taken off at lock & R-position. NOTE-2 : Although Control key is turned to Lock-position(In case that

You don't need to operatte the machine), the power is till "ON", therefore please turn-off "AC-POWER-SWITCH" located at right side of cabinet.

## 1-2. CLERK SYSTEM

There are 15 different clerks (from A-U).

STANDARD ..... by SECRET CODE INPUT SYSTEM.

OPTION ..... By STAYDOWN or INSERT-KEY mounted by the dealer.

NOTE : In case of STANDARD, CLERK CODE INPUT is <u>A MUST</u>. CLERK ID CHANGE is anytime possible before registration This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/uniwell/UI-5 operation manual.html

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM