


UCP-102 PROTOCOL APPENDIX FOR REAL-TIME COMMUNICATION (UX-60/70/75/M720-05)

Real-time communication refers to the instantaneous on-line communication between any ECR and an external equipment (PC) through RS485 line. There are four functions of the real-time communication:

1. **Real-time card verification**
2. **External non-add number** (entered by using the MESSAGE key)
3. **External PLU**
4. **External track**


When a host PC is connected directly to the RS485 line of the ECRs

Please note that a PC should have an optional RS485/RS422 interface board installed. Please contact Uniwell Systems U.K. to obtain this board.

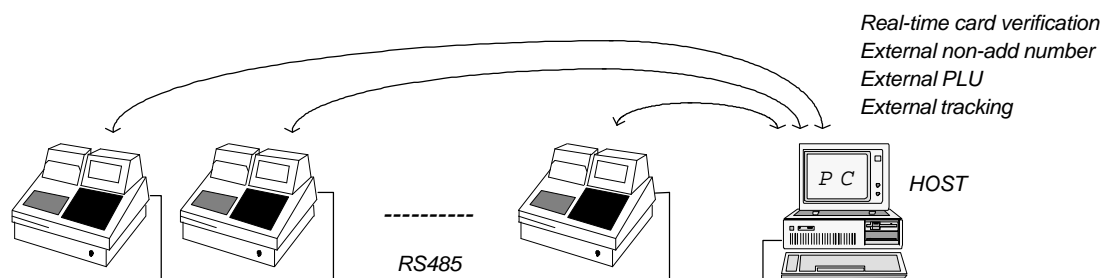

REAL-TIME COMMUNICATION SYSTEM CONFIGURATION

When a host PC is connected to the RS485 line via the network adapter NA-720

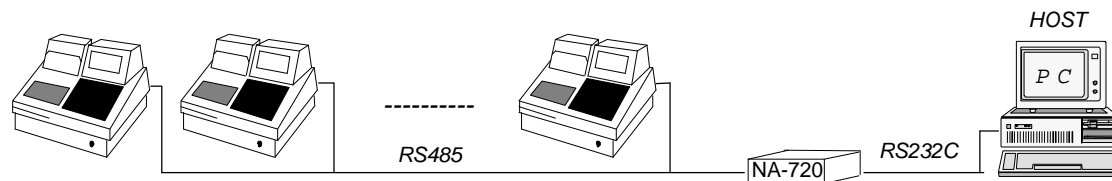

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/uniwell/UPC-102 for UX-60 UX-50 UX-M720 type](https://the-checkout-tech.com/manuals/uniwell/UPC-102%20for%20UX-60%20UX-50%20UX-M720%20types)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)