

# **INTERFACES & PERIPHERALS MANUAL**

***UX-40/40F***  
***01 type***

This document includes the features for UX-40-01-Q.

Jul.18.2001

# CONTENTS

<b>I. INTERFACE INFORMATION .....</b>	<b>1</b>
<b>II. IRC SYSTEM.....</b>	<b>3</b>
<b>III. TERMINAL PRINTERS .....</b>	<b>5</b>
1. TP-420/422/522/722 (Kitchen Printer, connected to ch-A) .....	5
2. TP-620 (Slip Printer, connected to ch-A).....	6
<b>IV. PC COMMUNICATION .....</b>	<b>7</b>
1. BATCH COMMUNICATION.....	7
2. PROGRAM LOADER (PLM-UX/PLM 2000).....	7
<b>V. ECR TO ECR RAM DATA TRANSFER.....</b>	<b>8</b>
<b>VI. JOURNAL DATA TRANSFER .....</b>	<b>9</b>
<b>VII. CABLE CONNECTION.....</b>	<b>10</b>
1. CHANNEL A.....	10
IRC LINE .....	10
2. CHANNEL B .....	11
1) ECR --- PC .....	11
2) ECR --- AUTO ANSWER MODEM (to AUTO DIAL MODEM --- PC) .....	11
3) ECR --- ECR FOR RAM DATA TRANSFER.....	12
4) ECR --- PERIPHERAL FOR JOURNAL DATA TRANSFER .....	12
<b>APPENDIX .....</b>	<b>13</b>
<b>CIRCUIT MODIFICATION FOR CASHIER INSERT KEY.....</b>	<b>13</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

<https://the-checkout-tech.com/manuals/uniwell/UX-40 UX-40F type 01 Interfaces and pe>

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)