


LINE THERMAL PRINTER

MODEL CT-S310

User's Manual

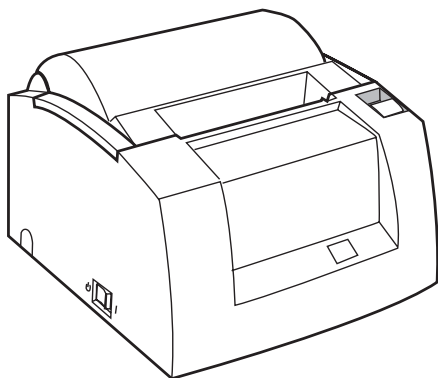

CITIZEN SYSTEMS JAPAN CO., LTD.

THE TABLE OF CONTENTS

- 1. GENERAL OUTLINE 9**
 - 1.1 Features 9
 - 1.2 Unpacking 10
 - 1.3 Model Classification 10
 - 1.4 Basic Specifications 11
- 2. EXPLANATION OF PRINTER PARTS 12**
 - 2.1 Printer Appearance 12
 - 2.2 Paper Cover Inside 14
 - 2.3 Other Built-in Functions 14
- 3. PREPARATION 15**
 - 3.1 Connecting the AC Adapter and AC Power Cord 15
 - 3.2 Connecting Interface Cables 16
 - 3.3 Connecting the Cash Drawer 17
 - 3.4 Installing the Printer 18
 - 3.5 Partition for 58-mm Wide Paper Roll 18
 - 3.6 Setting DIP Switch 19
 - 3.7 Adjusting the Paper Near-end Sensor 20
- 4. MAINTENANCE AND TROUBLESHOOTING 21**
 - 4.1 Setting/Replacing Paper Rolls 21
 - 4.2 Removing Jammed Paper 21
 - 4.3 Cleaning the Print Head 22
 - 4.4 When the Paper Cover Cannot Be Opened 22
 - 4.5 Self-printing 23
 - 4.6 Hexadecimal Dump Printing 23
 - 4.7 Error Indication 24
- 5. OTHER 25**
 - 5.1 External Views and Dimensions 25
 - 5.2 Manual Setting of Memory Switch 26
 - 5.3 Printing Paper 28

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Citizen/CT-S310 user manual.html](https://the-checkout-tech.com/manuals/Citizen/CT-S310%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)