

TM-L90/TM-L90 Peeler

Technical Reference

Guide

EPSON

English

410019401

Contents

Revision Table	1-i
For Safety	1-ii
Key to Symbols	1-ii
Warnings	1-iii
Cautions	1-iv
Modular Connector	1-iv
About This Manual	1-v
Aim of the Manual	1-v
Manual Content	1-v
Related Documentation	1-v

Chapter 1 Product Overview

1.1 Product Structure	1-1
1.1.1 Models	1-1
1.1.2 Accessories	1-1
1.1.3 Option	1-2
1.2 Name and Description of Each Part	1-3
1.2.1 Part Names (TM-L90)	1-3
1.2.2 Part names (TM-L90 peeler specification)	1-4
1.2.3 Control Panel	1-5
1.2.4 Power Switch	1-7
1.2.5 Power switch cover	1-8
1.2.6 Mode switch (TM-L90 peeler specification only)	1-8
1.2.7 Connectors	1-9

Chapter 2 Setup

2.1 Setup Flow	2-1
2.2 Installation Procedures	2-2
2.2.1 Precaution For Installation	2-2
2.2.2 Instructions for Installation	2-2
2.3 Adjusting Roll Paper Near-End Detection Position	2-4
2.3.1 With TM-L90	2-4
2.3.2 With the TM-L90 peeler specification	2-8
2.4 Connecting Power Supply Unit (PS-180)	2-12
2.4.1 Attaching Power Supply Unit	2-12
2.4.2 Caution about Power Supply unit and Supply Voltage	2-13
2.5 Autocutter settings (TM-L90 only)	2-14
2.6 Setting Roll Paper Width	2-17
2.7 DIP Switch Settings	2-19
2.8 Setting Memory Switches	2-21
2.8.1 Items that can be set in the memory switch setting mode	2-22
2.8.2 Starting the Memory Switch Setting mode	2-23
2.8.3 Ending Memory Switch Setting mode	2-24
2.8.4 Operating procedure of Memory Switch Settings	2-25
2.9 Memory Switch Functions	2-33
2.9.1 TM-L90 memory switch settings	2-33
2.9.2 TM-L90 peeler specification memory switch settings	2-36
2.10 Paper Loading Method	2-39
2.10.1 With TM-L90	2-39

2.10.2 With the TM-L90 peeler specification	2-40
2.10.3 Setting Paper Layout	2-44
2.10.4 Clearing Paper Layout Setting	2-48
2.11 TM Setup Items (Summary)	2-49
2.12 Operating Mode (Panel Switch Operation)	2-51
2.12.1 Self Test Mode	2-51

Chapter 3 Connecting to the Host Computer and Options

3.1 Connecting the Cable	3-1
3.2 Connecting to the Host Computer	3-2
3.2.1 With the RS-232C interface	3-2
3.2.2 With the parallel (IEEE1284) interface	3-5
3.2.3 With the USB interface	3-5
3.2.4 With the Ethernet interface 'IEEE802.3' (TM-L90 only)	3-7
3.3 Connecting to the Drawer	3-9

Chapter 4 Application Development Information

4.1 Introduction of Control Methods	4-1
4.1.1 Windows Driver (EPSON Advanced Printer Driver)	4-1
4.1.1.1 EPSON Advanced Printer Driver Overview	4-1
4.1.1.2 EPSON Advanced Printer Driver Contents	4-2
4.1.1.3 EPSON Advanced Printer Driver Support Environment	4-3
4.1.1.4 Driver Information and Download Destination	4-4
4.1.2 EPSON OPOS ADK	4-4
4.1.2.1 EPSON OPOS ADK (OPOS Control) Overview	4-5
4.1.2.2 EPSON OPOS ADK Contents	4-5
4.1.2.3 EPSON OPOS ADK Support Environment	4-6
4.1.2.4 Driver Information and Download Destination	4-7
4.1.3 ESC/POS Commands	4-7
4.1.4 Various Utilities	4-7
4.1.4.1 Address Setup Utility for Ethernet Interface (for UB-E01/UB-E02)	4-7
4.1.4.2 Electronic Logo Registration Utility for NVRAM	4-7
4.1.4.3 TM Printer Memory Switch Setup Utility	4-7
4.1.4.4 USB Interface ID Code Rewrite Utility	4-7
4.2 Sensors	4-8
4.2.1 Paper sensors	4-8
4.2.1.1 Roll paper near-end sensor	4-8
4.2.1.2 Roll Paper End Sensor	4-8
4.2.2 Printer Cover Sensor	4-8
4.2.2.1 Roll Paper Cover Open Sensor	4-8
4.2.2.2 Offline	4-9
4.2.2.3 Busy state	4-9
4.2.2.4 Receive buffer	4-10
4.2.3 Label peeling sensor (peeler specification only)	4-10
4.3 Setting of Paper Width	4-11
4.4 Print Density	4-11
4.5 Print Speed	4-11
4.5.1 Paper to use for high speed	4-11
4.6 Barcode Printing	4-12
4.7 CODE 128 Barcode	4-12
4.8 Precautions for Two-Dimensional Code Printing	4-16
4.9 Two-Color Printing	4-16
4.10 NV Memory	4-16
4.11 FAQ List	4-17

Chapter 5 ESC/POS Command-Related Information

5.1	TM Printer Operation Performed When Power Supply Switch is Disabled	5-1
5.1.1	Power Supply Switch-Related User Operation List	5-1
5.1.2	Power Off Control by the Host	5-1
5.1.2.1	When the Power Supply Switch is Enabled	5-2
5.1.2.2	When the Power Supply Switch is Disabled	5-2
5.2	Head Divided Control	5-2
5.3	Control After Paper Cut	5-2
5.4	NV Memory	5-2
5.5	Customizing Printer	5-3
5.5.1	Printer initial setting up	5-3
5.5.2	Changing command default values	5-3
5.5.3	Using the NV Memory	5-3
5.6	Printer Status	5-4
5.6.1	Hexadecimal Dump Mode	5-4

Chapter 6 Product Specifications

6.1	Product Specifications	6-1
6.1.1	TM-L90	6-1
6.1.2	TM-L90 peeler specification	6-3
6.2	Print Specifications	6-4
6.3	Reliability	6-5
6.3.1	TM-L90	6-5
6.3.2	TM-L90 peeler specification	6-7
6.4	Character Specifications	6-8
6.5	Paper Feed Specifications	6-9
6.5.1	Precautions for Printing and Paper Feed	6-9
6.6	Paper Specifications	6-9
6.7	Printing Area	6-10
6.7.1	Thermal Paper	6-10
6.7.2	Label	6-11
6.8	Printing Position in Relation to Cutter Position (TM-L90)	6-12
6.9	Printing Position, Peeling Position, Manual Cutter Position (TM-L90 Peeler Specification)	6-13
6.10	Overview of External Dimensions	6-14
6.10.1	Operating specifications	6-16

Appendix A Interface And Connectors

A.1	RS-232 Serial Interface	A-1
A.1.1	Interface board specifications (RS-232 standard)	A-1
A.1.2	Functions of each connector pin	A-2
A.1.3	XON/XOFF	A-3
A.1.4	Code	A-3
A.2	IEEE1284 Parallel Interface	A-4
A.2.1	Mode	A-4
A.2.2	Interface Signals	A-5

Appendix B Consumable Specifications

B.1	TM-L90 Roll Paper	B-1
B.1.1	Receipt Roll Paper	B-1
B.1.1.1	Specified Receipt Roll Paper	B-2
B.1.1.2	Specified Original Roll Paper	B-2
B.1.1.3	Print Density Adjustment	B-3
B.1.1.4	Paper to Use for High Speed	B-3

B.1.1.5	In case that paper other than the specified original paper is used	B-4
B.1.1.6	Requirements for Black Mark Position for Receipt Paper	B-4
B.1.2	Die-Cut Label Roll Paper	B-5
B.1.2.1	Die-Cut Label Paper	B-5
B.1.2.2	Specified Die-Cut Label Roll Paper Specifications	B-5
B.1.2.3	Specified Original Paper	B-6
B.1.2.4	Print Density Adjustment	B-6
B.1.2.5	Paper to Use for High Speed	B-6
B.1.2.6	In case that paper other than the specified original paper is used	B-7
B.1.2.7	Requirements for Die-Cut Label Paper Thickness, Peeling Strength, and Adhesive Agent	B-7
B.1.2.8	Requirements for Die-Cut Label Size	B-8
B.1.2.9	Requirements for Transparency Rate of Die-Cut Label Paper	B-9
B.1.2.10	Requirements for Black Mark Position for Die-Cut Label Paper	B-9
B.1.2.11	Requirements for Black Mark Position I	B-9
B.1.2.12	Requirements for Black Mark Position II	B-10
B.1.3	Continuous Label Roll Paper	B-11
B.1.3.1	Continuous Label Paper	B-11
B.1.3.2	Specified Continuous Label Roll Paper	B-11
B.1.3.3	Print Density Adjustment	B-12
B.1.3.4	Paper to Use for High Speed	B-12
B.1.3.5	Requirements for Size of Continuous Label Paper	B-12
B.2	TM-L90 with Peeler Roll Paper	B-13
B.2.1	Receipt Roll Paper	B-13
B.2.1.1	Specified Original Roll Paper	B-13
B.2.1.2	Print Density Adjustment	B-14
B.2.1.3	Paper to Use for High Speed	B-14
B.2.1.4	Requirements for Black Mark Position for Receipt Paper	B-15
B.2.2	Die-Cut Label Roll Paper	B-16
B.2.2.1	Die-Cut Label Paper	B-16
B.2.2.2	Specified Original Paper	B-16
B.2.2.3	Print Density Adjustment	B-17
B.2.2.4	Paper to Use for High Speed	B-17
B.2.2.5	If paper other than the specified original paper is used	B-17
B.2.2.6	Requirements for Die-Cut Label Paper Thickness, Peeling Strength, and Adhesive Agent	B-17
B.2.2.7	Requirements for Die-Cut Label Size	B-18
B.2.2.8	Requirements for Transparency Rate of Die-Cut Label Paper	B-19
B.2.2.9	Requirements for Black Mark Position for Die-Cut Label Paper	B-19
B.2.2.10	Requirements for Black Mark Position I	B-20
B.2.2.11	Requirements for Black Mark Position II	B-21
B.3	Notes On Paper Handling	B-22
B.3.1	Notes on Thermal Paper Handling	B-22
B.3.2	Notes on Storage	B-22
B.3.3	Notes on Two-Color Paper Handling	B-23

Appendix C Character Code Table

C.1	Page 0 (PC437 : USA, Standard Europe)	C-1
C.2	Page 1 (Katakana)	C-2
C.3	Page 2 (PC850: Multilingual)	C-3
C.4	Page 3 (PC860: Portuguese)	C-4
C.5	Page 4 (PC863: Canadian-French)	C-5
C.6	Page 5 (PC865: Nordic)	C-6
C.7	Page 16 (WPC1252)	C-7
C.8	Page 17 (PC866: Cyrillic #2)	C-8
C.9	Page 18 (PC852: Latin2)	C-9

C.10 Page 19 (PC858: Euro)	C-10
C.11 Page 255 (Blank page)	C-11
C.12 International Character Set	C-12

Appendix D Option Specifications

D.1 PS-180	D-1
D.1.1 Electrical Characteristics	D-1
D.1.2 Case Specifications	D-1
D.1.2.1 Material	D-2
D.1.3 AC Cable Selection	D-2

Appendix E Maintenance

E.1 Cleaning the autocutter (TM-L90 only)	E-1
E.2 Print Head Cleaning	E-3
E.3 Cleaning the peeler (TM-L90 peeler specification only)	E-5

Appendix F Troubleshooting

F.1 Panel LED and Error Status	F-1
F.1.1 Power (POWER) LED	F-1
F.1.2 No Roll Paper (PAPER OUT) LED	F-2
F.1.3 Error (ERROR) LED	F-2
F.1.4 Error code	F-3
F.2 The autocutter is jammed or the roll paper cover will not open (TM-L90 only)	F-8
F.3 When a paper jam occurs (TM-L90 peeler specification)	F-9
F.4 The printer became inoperative after you change the interface reset signal in the memory switch setting mode	F-9

Appendix G Shipping Procedures

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Epson/TM-L90 technical reference manual.html](https://the-checkout-tech.com/manuals/Epson/TM-L90%20technical%20reference%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)