

# NCR 7158 Thermal Receipt and Impact Printer

Release 1.0

## Owner's Guide



B005-0000-1112

Issue D

---

# Table of Contents

## Chapter 1: About the Printer

Introducing the 7158 Printer .....	1-1
Standard Features .....	1-2
Connectivity Features .....	1-2
Advanced Interface Design.....	1-2
Electronics and Firmware.....	1-2
Thermal Receipt Printer.....	1-3
Impact Slip Printer .....	1-4
Options .....	1-5
Connectivity Options.....	1-5
Thermal Receipt Printer Options .....	1-5
Impact Slip Printer Options .....	1-5
Electronics and Firmware Options .....	1-5
Model Identification Key .....	1-6

## Chapter 2: Setup Guide

Unpacking the Printer .....	2-1
Choosing a Location .....	2-2
Remove the Packing Restraints.....	2-3
Connecting the Cables.....	2-5
Communication Cable .....	2-5
Cash Drawer Cables.....	2-6
Power Supply Cable.....	2-7
Loading Receipt Paper .....	2-8
Putting In the Ribbon Cassette.....	2-10
Testing the Printer.....	2-11

**Chapter 3: Using the Printer**

Printer Controls .....	3-1
Changing the Receipt Paper .....	3-3
Replacing the Ribbon Cassette .....	3-5
Printing on Forms or Checks .....	3-7
Verifying and Validating Checks .....	3-10
Clearing Check Flip Paper Jams .....	3-12
Testing the Printer .....	3-14
Printer Configuration .....	3-16
Configuring the Printer .....	3-17
Communication Interface .....	3-20
RS-232C Serial Interface Settings .....	3-20
Diagnostic Modes .....	3-21
Datscope Mode .....	3-21
Receipt Test Mode .....	3-22
Slip Test Mode .....	3-23
MICR Test Mode .....	3-23
Check Flip Test Mode .....	3-25
Emulation/Software Options .....	3-26
Printer Emulations .....	3-26
Printer ID Mode .....	3-26
Default Lines Per Inch .....	3-27
Carriage Return Usage .....	3-27
Hardware Options .....	3-27
Print Density .....	3-27
Maximum Power .....	3-27
Knife Option .....	3-28
Paper Low Sensor .....	3-28
Printhead Resistance .....	3-28
MICR Option .....	3-28

---

Check Flip Option .....	3-28
Basic Troubleshooting .....	3-29
Printer Beeps .....	3-31
Printer Will Not Print.....	3-32
On-Line, Paper Status, Error LED Flashes .....	3-33
Poor Forms Print Quality .....	3-34
Poor Receipt Print Quality .....	3-34
Slip Station, MICR and Flip Problems.....	3-36
Knife Does Not Operate .....	3-37
Other Serious Problems .....	3-38
Contacting a Service Representative .....	3-38
Returning a Printer .....	3-39

#### **Chapter 4: Printer & Media Supplies**

Ordering Thermal Paper.....	4-1
Thermal Paper Specifications .....	4-1
Ordering Parts and Supplies .....	4-2
Ordering Cash Drawers.....	4-2
Ordering Power Supply Cord and Adapters .....	4-2
Ordering Communication Cables .....	4-3
Forms Specifications .....	4-3
Check Specifications.....	4-4
Ordering Ribbon Cassettes .....	4-4
Ordering Extended Slip Tables.....	4-4
Ordering Documentation .....	4-4

#### **Chapter 5: Technical Specifications**

Functional Description.....	5-1
Standard Slip Features.....	5-1
Slip Forms - Recommendations .....	5-3
MICR Reader - Additional Information.....	5-5

Standard Receipt Features.....	5-5
Optional Features .....	5-7
Reliability .....	5-8
Certifications.....	5-9
EMI:.....	5-9
Safety:.....	5-9
Physical and Operating Environment.....	5-10
Temperature and Humidity.....	5-10
Electrical.....	5-10
Slip Media.....	5-10
Receipt Media .....	5-11
Migration.....	5-12
Performance Requirements .....	5-12
Slip Printing.....	5-12
Slip Positioning.....	5-12
Slip Format.....	5-13
Slip Throughput .....	5-14
Character Format.....	5-15
Allowable Duty Cycle (measured over one minute of continuous printing).....	5-16
Ribbon Life.....	5-16
Receipt Printing .....	5-17
Receipt Format, 80mm Paper Width .....	5-17
Receipt Throughput:.....	5-21
Allowable Duty Cycle (measured over one minute of continuous printing).....	5-22
Partial Cut Knife.....	5-22
Receipt Paper Low: .....	5-22
Interface Description .....	5-23
Human Interfaces .....	5-23
Power Requirements.....	5-25

Electrical Interfaces .....	5-26
Switch Settings.....	5-27
Character Sets.....	5-27
Code Page 437.....	5-28
Code Page 850.....	5-29
Code Page 852.....	5-30
Code Page 858.....	5-31
Code Page 860.....	5-32
Code Page 863.....	5-33
Code Page 865.....	5-34
Code Page 866.....	5-35
Dimensions and Weight.....	5-36

## Chapter 6: Communication Interface

Communication Overview .....	6-1
Using DOS to Send Commands .....	6-1
Using BASIC to Send Commands.....	6-2
RS-232C Interface.....	6-3
Print Speed and Timing.....	6-3
50ms Pause after Each Line .....	6-4
No Delay after Each Line .....	6-5
RS-232C Communications.....	6-5
RS-232C Interface Timing .....	6-5
XON/XOFF Protocol .....	6-6
DTR/DSR Protocol.....	6-7
Connector Pin-outs.....	6-8
Communication Connectors.....	6-8
Power Connector.....	6-8
Cash Drawer Connector.....	6-9

**Chapter 7: Programming Guide**

Command Conventions .....	7-1
List of Commands and Location.....	7-2
By Command Code .....	7-2
By Function.....	7-8
Printer Function Commands .....	7-8
Vertical Positioning and Print Commands.....	7-9
Horizontal Positioning Commands.....	7-10
Print Characteristic Commands.....	7-11
Graphics Commands .....	7-12
Status Commands .....	7-12
Barcode Commands.....	7-13
Page Mode Commands .....	7-14
Macro Commands.....	7-14
MICR Check Reader Commands.....	7-14
Check Flip Commands.....	7-15
User Data Storage Commands .....	7-15
Flash Download Commands .....	7-16
Comparison to 7156 .....	7-17
New Features .....	7-17
Page Mode on the receipt.....	7-17
Additional Code pages.....	7-17
Additional character attributes .....	7-18
Flip.....	7-18
Additional flexibility when using User-defined Characters and Logos (Downloadable Bit Image).....	7-18
Barcodes .....	7-18
FLASH Memory Allocation.....	7-18
Higher Baud Rate.....	7-18
8 Dot High Graphics on Slip.....	7-18
Macro Capability.....	7-19

---

Additional Remote Diagnostics .....	7-19
Comparison Chart .....	7-20
Command Descriptions .....	7-22
Printer Function Commands .....	7-22
Clear Printer .....	7-22
Exceptions: .....	7-23
Close Form .....	7-23
Open Form .....	7-23
Perform Full Knife Cut .....	7-24
Perform Partial Knife Cut .....	7-24
Generate Tone .....	7-24
Return Home .....	7-25
Select Peripheral Device (for Multi-Drop) .....	7-25
Initialize Printer .....	7-26
Set Slip Paper Eject Length .....	7-26
Select Receipt or Slip for Printing; Slip for MICR Read .....	7-27
Select Receipt or Slip for Setting Line Spacing .....	7-28
Select Paper Sensors to Output Paper End Signals (Parallel Only) .....	7-29
Select Sensors to Stop Printing .....	7-30
Enable or Disable Panel Buttons .....	7-30
Enable or Disable Online Switch .....	7-31
Set Slip Paper Waiting Time .....	7-31
Generate Pulse to Open Cash Drawer .....	7-32
Select or Cancel Parallel Printing Mode on R&J .....	7-32
Select Slip Station .....	7-33
Select Cut Mode and Cut Paper .....	7-34
Select Receipt Station .....	7-35
Print Test Form .....	7-35
Vertical Positioning and Print Commands .....	7-36
Print and Feed Paper One Line .....	7-36



Print and Eject Slip.....	7-36
Print and Carriage Return.....	7-37
Feed <i>n</i> Print Lines.....	7-37
Feed <i>n</i> Dot Rows .....	7-38
Add <i>n</i> Extra Dot Rows.....	7-39
Print.....	7-40
Set Line Spacing to 1/6 Inch.....	7-40
Set Line Spacing .....	7-41
Print and Feed Paper .....	7-42
Print and Reverse Feed Paper .....	7-42
Print and Feed <i>n</i> Lines.....	7-43
Print and Reverse Feed <i>n</i> Lines.....	7-43
Reverse Feed <i>n</i> Lines .....	7-43
Reverse Feed <i>n</i> Dots.....	7-44
Set Horizontal and Vertical Minimum Motion Units .....	7-44
Horizontal Positioning Commands .....	7-45
Horizontal Tab.....	7-45
Set Column.....	7-45
Set Absolute Starting Position.....	7-46
Set Horizontal Tabs.....	7-47
Set Relative Print Position.....	7-48
Select Justification .....	7-50
Set Left Margin .....	7-51
Set Printing Area Width.....	7-52
Print Characteristic Commands .....	7-53
Select Double-Wide Characters.....	7-53
Select Single-Wide Characters.....	7-53
Select 90 Degree Counter-Clockwise Rotated Print .....	7-54
Select Pitch (Column Width) .....	7-55
Set Character Right-Side Spacing .....	7-56
Select Print Modes.....	7-57

---

Select or Cancel User-Defined Character Set .....	7-58
Define User-Defined Characters .....	7-59
Defining User-Defined Characters for the Slip and Receipt Station .....	7-60
Select or Cancel Underline Mode .....	7-62
Copy Character Set from ROM to RAM .....	7-62
Cancel User-Defined Characters .....	7-63
Select or Cancel Emphasized Mode .....	7-63
Select Double Strike .....	7-64
Cancel Double Strike .....	7-64
Select or Cancel Italic Print .....	7-65
Select International Character Set .....	7-66
Select Character Code Table .....	7-66
Select or Cancel Unidirectional Printing Mode .....	7-67
Select or Cancel 90 Degrees Clockwise Rotated Print.....	7-67
Select or Cancel Upside Down Printing Mode .....	7-68
Select Character Size .....	7-69
Select or Cancel White/Black Reverse Print Mode .....	7-71
Select Superscript or Subscript Modes .....	7-72
Summary of Rotated Printing .....	7-73
Graphics Commands .....	7-74
Download BMP Logo .....	7-74
Select Bit Image Mode .....	7-75
Select Double-Density Graphics .....	7-78
Select the Current Logo (Downloaded Bit Image) .....	7-79
Define Downloaded Bit Image .....	7-81
Print Downloaded Bit Image .....	7-83
Convert 6 Dots/mm Bitmap to 8 Dots/mm Bitmap.....	7-84
Status Commands .....	7-85
Status Command Introduction.....	7-85
Batch Mode .....	7-86

Transmit Peripheral Device Status .....	7-86
Request Alternate Status (Parallel Only) .....	7-87
Transmit Printer Status .....	7-88
Transmit Printer ID.....	7-89
Transmit Printer ID, Remote Diagnostics Extension .....	7-91
Transmit Status.....	7-96
Recognizing Data from the Printer .....	7-99
Real Time Commands .....	7-100
Preferred Implementation.....	7-100
Alternate Implementation.....	7-101
Rules for Using Real Time Commands .....	7-101
Moving Data Through the Buffer .....	7-102
Real Time Status Transmission .....	7-103
Real Time Request to Printer .....	7-107
Real Time Printer Status Transmission.....	7-109
Auto Status Back .....	7-110
Select or Cancel Automatic Status Back.....	7-110
Bar Code Commands .....	7-114
Select Printing Position for HRI Characters .....	7-114
Select Pitch for HRI Characters .....	7-115
Select Bar Code Height.....	7-115
Print Bar Code .....	7-115
Select Bar Code Width.....	7-119
Page Mode Commands.....	7-120
Print and Return to Standard Mode .....	7-120
Cancel Print Data in Page Mode .....	7-121
Print Data in Page Mode .....	7-121
Select Page Mode.....	7-122
Select Standard Mode.....	7-123
Select Print Direction in Page Mode .....	7-124
Set Printing Area in Page Mode.....	7-125

---

Set Absolute Vertical Print Position in Page Mode .....	7-127
Set Relative Vertical Print Position in Page Mode.....	7-128
Macro Commands .....	7-129
Start or End Macro Definition .....	7-129
Execute Macro .....	7-130
MICR Commands.....	7-131
MICR Reading .....	7-131
Read MICR Data and Transmit.....	7-131
Reread MICR Data .....	7-131
MICR Parsing.....	7-132
Define Parsing Format, Save in NVRAM .....	7-132
Define Parsing Format, Do Not Save Permanently .....	7-132
Parsing Parameter String Options .....	7-133
Sample Parsing Formats.....	7-136
Notes .....	7-139
Check Serial Number.....	7-141
Exception Table Entry Format.....	7-144
Maintaining the Exception Table .....	7-145
Check Flip Command .....	7-146
Check Flip Command.....	7-146
User Data Storage Commands .....	7-146
Write to User Data Storage .....	7-146
Read from User Data Storage.....	7-147
Read from Non-Volatile Memory .....	7-147
Write to Non-Volatile Memory (NVRAM).....	7-147
Select Memory Type (SRAM/Flash) Where to Save Logos or User-Defined Fonts.....	7-148
Flash Allocation.....	7-149
Erase User Flash Sector .....	7-150
Flash Download Commands .....	7-151
Switch to Flash Download Mode.....	7-151

Request Printer ID.....	7-152
Return Segment Number Status of Flash Memory .....	7-152
Select Flash Memory Sector to Download.....	7-153
Get Firmware CRC.....	7-153
Return Microprocessor CRC.....	7-154
Erase the Flash Memory.....	7-154
Return Main Program Flash CRC.....	7-154
Erase Selected Flash Sector .....	7-155
Download to Active Flash Sector.....	7-156
Reboot the Printer .....	7-157

**Chapter 8: Universal Serial Bus**

About the Universal Serial Bus .....	8-1
Advantages of USB connections.....	8-1
Advantages of the NCR USB Solution .....	8-2
Checking for USB Support on the Host Computer .....	8-3
Host Configuration .....	8-3
Windows NT:.....	8-3
Configuring NCR POS Printers for USB.....	8-5
Installing the NCR 7158 USB Upgrade Kit .....	8-5
To update the firmware:.....	8-5
To remove the Options Board and install the USB Board: ...	8-6
Configuring the Printer .....	8-8
To define software or hardware handshaking:.....	8-8
Installing the USB Printer Drivers .....	8-12
Load from NCR LPIN D370-1111-0100.....	8-12
Installing the Drivers .....	8-12
Checking the Installation .....	8-14
Configuring Serial Port Number Assignments .....	8-16
Running the Edgeport Utility .....	8-16
Serial Port Configuration Methods.....	8-17

---

Uninstalling the Drivers .....	8-17
Troubleshooting .....	8-19
Frequently Asked Questions .....	8-20
USB Printer Performance Under Windows 95 .....	8-20

## Revision Record

Issue	Date	Remarks
A	Apr 99	First issue
B	June 99	Minor Updates
C	June 00	Updates
D	Jan 03	Updates

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCR/7158\\_owners\\_manual.html](https://the-checkout-tech.com/manuals/NCR/7158_owners_manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)