



NCR 7193 Thermal Receipt Printer

Service Guide

BD20-1440-A
Issue B
August 1998

Contents

Chapter 1: About the 7193 Printer	1
Models	1
Communication Interfaces.....	1
Features	2
Options	2
Thermal Printhead	2
Cleaning the Printer.....	3
Cleaning the Cabinet	3
Cleaning the Thermal Printhead.....	3
Chapter 2: Installing the Printer	5
What Is in the Box?	5
Removing the Printer	5
Repacking the Printer	5
Choosing a Location	6
Setting Switches.....	6
RS-232C Switch Settings.....	8
Parallel Switch Settings	9
LCSIO (RS-485) Switch Settings	10
Connecting Cash Drawer Cables	11
Connecting Communication and Power Cables	12
RS-232C and LCSIO (RS-485) Models	12
Parallel Models.....	13
Turning On the Printer.....	14
Testing the Printer.....	15
Models Receiving Power from the Power Supply (Remote).....	15
Models Receiving Power from the Host (Integrated)	15
Mounting the Printer on a Wall.....	17
Mounting the Power Supply on a Wall.....	19
Chapter 3: Diagnostics	21
Level 0 Diagnostics	21
Level 1 Diagnostics	22
Setting Data Error and Data Buffer options	23
Setting Printhead Resistance	24
Setting Default Lines per Inch.....	25
Setting Partial Cut Distance.....	26
Setting the 7150 Response Mode.....	27
Ignoring/Using the Carriage Return.....	28
Running the Data Scope Mode.....	28
Testing Receipt Printing.....	30
Level 2 Diagnostics	31
Level 3 Diagnostics	31

Chapter 4: Troubleshooting	33
Operator Panel Lights.....	33
Field Effect Transistors (FETs)	34
Operating Problems.....	35
Electronic Problems	37
Printing Problems	37
Chapter 5: Disassembling and Reassembling the Printer	39
Getting Started.....	39
Tools.....	39
Removing the Receipt Cover	40
Removing the L Cover.....	41
Removing the Print Mechanism and PC Board Assembly	42
Separating the Print Mechanism and PC Board Assembly	44
Disconnecting Cables.....	45
Disassembling the Print Mechanism	46
Removing the Knife Assembly.....	46
Replacing the Knife Assembly	47
Removing the Printhead	48
Replacing the Printhead.....	49
Removing the Knife Motor	49
Replacing the Knife Motor.....	50
Removing the Switches	50
Replacing the Switches.....	51
Removing the Paper Feed Motor	51
Replacing the Paper Feed Motor.....	51
Disassembling the PC Board Assembly	52
Removing the ESD/EMC Shield.....	52
Replacing the ESD/EMC Shield	52
Replacing the Print Mechanism	53
Replacing the PC Board Assembly on the Print Mechanism	53
Reconnecting the Cables and Harnesses.....	53
Replacing the Print Mechanism	54
Finishing Up	54
Replacing the L-Cover.....	54
Replacing the Receipt Cover.....	54
Checking out the Printer	54
Appendix A: Specifications	55
Features	55
Reliability	55
Environmental Conditions.....	55
Power Requirements.....	56
Dimensions and Weight.....	56
Printing Specifications.....	57
Density of Receipt Print Lines	58
Duty Cycle Restrictions (Printing Solid Blocks).....	58

Appendix B: Ordering Paper and Supplies	59
Ordering Thermal Paper	59
Ordering Other Supplies.....	60
Order from Other Equipment Manufacturers.....	60
Order from Axiohm.....	60
Appendix C: Kits	61
Appendix D: Connectors	63
Power Connector.....	63
RS-232C Connector	63
RS-232C 25-Pin to 9-Pin Cable Diagram	64
RS-232C 9-Pin to 9-Pin Cable Diagram	64
Parallel Connector.....	65
LCSIO (RS-485) Connectors.....	65
Powered from Host.....	65
Powered from Power Supply.....	66
Cash Drawer Connectors	66
Appendix E: Commands	67
Command List	67
Printer Function Commands	68
Print Characteristics Commands	69
Graphics Commands.....	70
Printer Status Commands.....	70
Real Time Commands	70
Bar Code Commands.....	71
Index	73

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/NCR/7193 service manual.html](https://the-checkout-tech.com/manuals/NCR/7193%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)