



# **NCR 7193 Thermal Receipt Printer**

## Service Guide

BD20-1440-A  
Issue B  
August 1998

# Contents

<b>Chapter 1: About the 7193 Printer</b>	<b>1</b>
Models .....	1
Communication Interfaces.....	1
Features .....	2
Options .....	2
Thermal Printhead .....	2
Cleaning the Printer.....	3
Cleaning the Cabinet .....	3
Cleaning the Thermal Printhead.....	3
<b>Chapter 2: Installing the Printer</b>	<b>5</b>
What Is in the Box? .....	5
Removing the Printer .....	5
Repacking the Printer .....	5
Choosing a Location .....	6
Setting Switches.....	6
RS-232C Switch Settings.....	8
Parallel Switch Settings .....	9
LCSIO (RS-485) Switch Settings .....	10
Connecting Cash Drawer Cables .....	11
Connecting Communication and Power Cables .....	12
RS-232C and LCSIO (RS-485) Models .....	12
Parallel Models.....	13
Turning On the Printer.....	14
Testing the Printer.....	15
Models Receiving Power from the Power Supply (Remote).....	15
Models Receiving Power from the Host (Integrated) .....	15
Mounting the Printer on a Wall.....	17
Mounting the Power Supply on a Wall.....	19
<b>Chapter 3: Diagnostics</b>	<b>21</b>
Level 0 Diagnostics .....	21
Level 1 Diagnostics .....	22
Setting Data Error and Data Buffer options .....	23
Setting Printhead Resistance .....	24
Setting Default Lines per Inch.....	25
Setting Partial Cut Distance.....	26
Setting the 7150 Response Mode.....	27
Ignoring/Using the Carriage Return.....	28
Running the Data Scope Mode.....	28
Testing Receipt Printing.....	30
Level 2 Diagnostics .....	31
Level 3 Diagnostics .....	31

<b>Chapter 4: Troubleshooting</b>	<b>33</b>
Operator Panel Lights.....	33
Field Effect Transistors (FETs) .....	34
Operating Problems.....	35
Electronic Problems .....	37
Printing Problems .....	37
<b>Chapter 5: Disassembling and Reassembling the Printer</b>	<b>39</b>
Getting Started.....	39
Tools.....	39
Removing the Receipt Cover .....	40
Removing the L Cover.....	41
Removing the Print Mechanism and PC Board Assembly .....	42
Separating the Print Mechanism and PC Board Assembly .....	44
Disconnecting Cables.....	45
Disassembling the Print Mechanism .....	46
Removing the Knife Assembly.....	46
Replacing the Knife Assembly .....	47
Removing the Printhead .....	48
Replacing the Printhead.....	49
Removing the Knife Motor .....	49
Replacing the Knife Motor.....	50
Removing the Switches .....	50
Replacing the Switches.....	51
Removing the Paper Feed Motor .....	51
Replacing the Paper Feed Motor.....	51
Disassembling the PC Board Assembly .....	52
Removing the ESD/EMC Shield.....	52
Replacing the ESD/EMC Shield .....	52
Replacing the Print Mechanism .....	53
Replacing the PC Board Assembly on the Print Mechanism .....	53
Reconnecting the Cables and Harnesses.....	53
Replacing the Print Mechanism .....	54
Finishing Up .....	54
Replacing the L-Cover.....	54
Replacing the Receipt Cover.....	54
Checking out the Printer .....	54
<b>Appendix A: Specifications</b>	<b>55</b>
Features .....	55
Reliability .....	55
Environmental Conditions.....	55
Power Requirements.....	56
Dimensions and Weight.....	56
Printing Specifications.....	57
Density of Receipt Print Lines .....	58
Duty Cycle Restrictions (Printing Solid Blocks).....	58

<b>Appendix B: Ordering Paper and Supplies</b>	<b>59</b>
Ordering Thermal Paper .....	59
Ordering Other Supplies.....	60
Order from Other Equipment Manufacturers.....	60
Order from Axiohm.....	60
<b>Appendix C: Kits</b>	<b>61</b>
<b>Appendix D: Connectors</b>	<b>63</b>
Power Connector.....	63
RS-232C Connector .....	63
RS-232C 25-Pin to 9-Pin Cable Diagram .....	64
RS-232C 9-Pin to 9-Pin Cable Diagram .....	64
Parallel Connector.....	65
LCSIO (RS-485) Connectors.....	65
Powered from Host.....	65
Powered from Power Supply.....	66
Cash Drawer Connectors .....	66
<b>Appendix E: Commands</b>	<b>67</b>
Command List .....	67
Printer Function Commands .....	68
Print Characteristics Commands .....	69
Graphics Commands.....	70
Printer Status Commands.....	70
Real Time Commands .....	70
Bar Code Commands.....	71
<b>Index</b>	<b>73</b>

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*