

# **NCR 7194 Thermal Receipt Printer**

Release 1.0

## **Service Guide**



---

# Table of Contents

## **Chapter 1: Technical Specifications**

Reliability .....	1-1
Power Requirements.....	1-2
Environmental Conditions .....	1-3
Dimensions and Weight.....	1-4
Printing Specifications.....	1-5
Density of Receipt Print Lines.....	1-6
Duty Cycle Restrictions (Printing Solid Blocks) .....	1-7
Allowable Duty Cycle (measured over one minute of continuous printing) .....	1-8

## **Chapter 2: Diagnostics and Configuration**

Startup Diagnostics.....	2-2
Runtime Diagnostics.....	2-3
Remote Diagnostics .....	2-4
Indicators.....	2-7
Printer Configuration .....	2-9
Configuring the Printer.....	2-11
Communication Interface.....	2-14
RS-232C Serial Interface Settings.....	2-14
Printer Emulations.....	2-16
Printer Settings and Functions.....	2-16
Enable or Disable Data Scope Mode .....	2-19
Printhead Resistance .....	2-21

## **Chapter 3: Troubleshooting**

Service Level Troubleshooting.....	3-1
Printer Tone and Green LED .....	3-1

Printing Problems..... 3-2  
Printer Does Not Function ..... 3-5

**Chapter 4: Servicing the Printer**

Tools Required..... 4-1  
Service Procedure Map..... 4-2  
1, 2: Removing or Accessing the PC Control Board..... 4-3  
    Procedure..... 4-4  
    Re-installing the Control PC Board..... 4-7  
3, 4: Removing the Options PC Board..... 4-9  
    Procedure..... 4-9  
    Re-installing the Options PC Board ..... 4-10  
5, 6: Removing the Rear Cover and Platen ..... 4-11  
    Procedure..... 4-11  
    Re-installing the Rear Cover and Platen ..... 4-12  
7: Removing the Platen/Fixed Knife Carrier Assembly..... 4-13  
    Procedure..... 4-14  
    Fixed Knife Blade/Platen-Carrier Assembly Removal..... 4-15  
    Re-installing the Knife ..... 4-15  
8, 9, 10, 11: Removing the Top Cover Assembly, Paper Feed  
Rod/Light Pipe, Reset Rod, and Paper Feed Button ..... 4-16  
    Procedure (See illustration next page.)..... 4-16  
    R ..... 4-18  
12: Removing the Paper Low Sensor/Mount ..... 4-19  
    Procedure (See illustration next page.)..... 4-19  
    Re-installing the Paper Low Sensor/Mount..... 4-21  
13: Removing the Thermal Mechanism ..... 4-22  
    Procedure..... 4-22  
    Re-installing the Thermal Mechanism..... 4-25  
14, 15, 16: Removing the Paper Out Switch, Knife Home  
Switch, and Cover Open Switch ..... 4-26  
    Procedure..... 4-26

---

Re-installing the Paper Out Switch, Knife Home Switch, and Cover Open Switch.....	4-27
17: Removing the Rotating Knife Blade .....	4-28
Procedure.....	4-28
Re-installing the Rotating Knife Blade .....	4-29
Cleaning the Printer .....	4-30
Cleaning the Printhead .....	4-30

## Revision Record

Issue	Date	Remarks
A	Nov 98	First issue
B	Mar 99	Updated
C	June 99	Minor updates
D	June 00	Updates

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*