




SERVICE MANUAL

POS PRINTER ELLIX 20

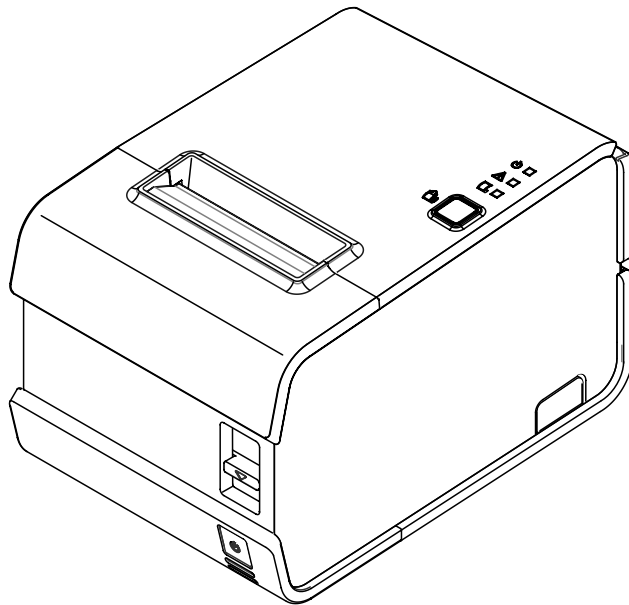

All specifications are subject to change without notice.

CONTENTS

CHAPTER 1 PRECAUTION STATEMENT	1-1
1.1 Safety Precaution	1-2
1.2 Servicing Precaution	1-3
1.3 Precaution for Electrostatic Sensitive Device	1-4
1.4 Operational Precaution	1-4
CHAPTER 2 PRODUCT SPECIFICATION	2-1
2.1 General Specification	2-2
2.2 Appearance	2-3
2.2.1 Printer Dimension	2-3
2.2.2 AC Adapter Dimension	2-3
2.2.3 Feature Location	2-4
2.3 Thermal Printer Specification	2-4
2.3.1 Printer Specification	2-4
2.3.2 Character Specification	2-5
2.3.3 Paper Specification	2-5
2.3.4 Reliability and Environment Specification	2-5
2.3.5 Printable Area	2-6
2.3.6 TPH Specification	2-7
2.3.7 TPH Maximum Condition	2-7
2.3.8 Other Component Specification	2-7
2.4 SMPS Specification	2-8
2.4.1 SMPS Specification	2-8
2.4.2 SMPS Output Connector	2-8
2.5 Interface Specification	2-9
2.5.1 RS-232C Serial Interface	2-9
2.5.1.1 RS-232C Specification	2-9
2.5.1.2 RS-232C Signal Description	2-9
2.5.1.3 RS-232C Interface Cable	2-10
2.5.2 RS-485 Serial Interface	2-11
2.5.2.1 RS-485 Signal Description	2-11
2.5.2.2 RS-485 Interface Cable	2-11

2.5.3 IEEE-1284 Parallel Interface	2-12
2.5.3.1 Parallel Interface Cable Pin Connection	2-12
2.5.3.2 Parallel Signal Description	2-12
2.5.4 USB Interface	2-14
2.5.4.1 USB Specification	2-14
2.5.4.2 USB Signal Description	2-14
2.5.4.3 USB Interface Cable	2-14
2.5.5 Ethernet Interface	2-15
2.5.5.1 Ethernet Specification	2-15
2.5.5.2 Ethernet Interface Cable	2-15
2.6 Drawer Kick-Out Specification	2-16
2.6.1 Drawer Signal Description	2-16
2.6.2 Drawer Interface Cable	2-16
CHAPTER 3 INSTALLATION AND OPERATION	3-1
3.1 Installation	3-2
3.1.1 AC Adapter, Interface and Drawer Cable Installation	3-2
3.1.2 Paper Roll Installation	3-4
3.1.3 Partition Installation	3-5
3.1.4 Wall Mount Installation	3-6
3.2 Operation	3-7
3.2.1 Setting the DIP Switch	3-7
3.2.1.1 DIP Switch Setting 1 Function	3-7
3.2.1.2 Baud Rate Selection	3-8
3.2.1.3 DIP Switch Setting 2 Function	3-8
3.2.1.4 Printing Density Selection	3-8
3.2.2 Hexadecimal Dumping	3-9
3.2.3 The Self Test Mode	3-10
3.2.4 Control Command	3-12
CHAPTER 4 DISASSEMBLY AND ASSEMBLY	4-1
4.1 Case-Lower Block	4-2
4.2 Case-Upper Block	4-4
4.3 Printer Block	4-7

CHAPTER 5 MAINTENANCE AND ADJUSTMENT	5-1
5.1 Adjustment.....	5-2
5.1.1 Adjustment Near-End Sensor	5-2
5.1.2 Paper Jam	5-4
5.2 Maintenance.....	5-5
5.2.1 Cleaning Head.....	5-5
CHAPTER 6 REFERENCE INFORMATION	6-1
6.1 SDRAM (K4S641632A) Diagram & Description	6-2
6.2 NOR FLASH MEMORY (A29L800UV) Diagram & Description	6-3
6.3 MOTOR DRIVER IC (MC34920EI) Diagram & Description.....	6-4
6.4 USB TO SERIAL IC (CY7C64013) Diagram & Description.....	6-5
6.5 Other ICs (SN74ACT245 / SN74LV14 / LM393D) Diagram & Description.....	6-6
6.6 Other ICs (74HC74 / 34063 / MAX232) Diagram & Description.....	6-7
6.7 Other ICs and TR, DIODE Diagram.....	6-8
CHAPTER 7 TROUBLESHOOTING	7-1
7.1 Power Problem.....	7-2
7.1.1 Verifying the Power Supply	7-2
7.1.2 Verifying the Main B'D Power Line.....	7-3
7.1.3 Verifying the LED B'D Power Line	7-4
7.1.4 Verifying the TPH Logic Power Line	7-4
7.1.5 Verifying the I/F B'D Power Line	7-4
7.2 System Problem.....	7-5
7.2.1 System Clock problem	7-5
7.2.2 System Signal problem	7-5
7.3 Thermal Printer and Feed Motor problem.....	7-6
7.3.1 TPH problem	7-6
7.3.2 Step Motor and Auto Cutter problem	7-7
7.4 LED B'D and Sensor Problem	7-8
7.5 Drawer Problem.....	7-9
7.6 RS-232C Interface Problem.....	7-9
7.7 RS-485 Interface Problem	7-10
7.8 IEEE-1284 Parallel Interface Problem	7-11
7.9 USB Interface Problem	7-12
7.10 Ethernet Interface problem	7-13

CHAPTER 8 EXPLODED VIEWS AND PARTS LIST	8-1
8.1 Exploded View	8-2
8.2 Parts List	8-3
CHAPTER 9 PCB LAYOUT AND PARTS LIST	9-1
9.1 Main PCB	9-2
9.1.1 Layout.....	9-2
9.1.2 Parts List.....	9-3
9.2 LED PCB.....	9-6
9.2.1 Layout.....	9-6
9.2.2 Parts List.....	9-6
9.3 P-END PCB.....	9-7
9.3.1 Layout.....	9-7
9.3.2 Parts List.....	9-7
9.4 P-NEAR END PCB	9-7
9.4.1 Layout.....	9-7
9.4.2 Parts List.....	9-7
9.5 POWER PCB	9-8
9.5.1 Layout.....	9-8
9.5.2 Parts List.....	9-8
9.6 RS-232C Serial Interface PCB.....	9-9
9.6.1 Layout.....	9-9
9.6.2 Parts List.....	9-9
9.7 RS-485 Serial Interface PCB	9-10
9.7.1 Layout.....	9-10
9.7.2 Parts List.....	9-10
9.8 IEEE-1284 Parallel Interface PCB	9-11
9.8.1 Layout.....	9-11
9.8.2 Parts List.....	9-11
9.9 USB Interface PCB	9-12
9.9.1 Layout.....	9-12
9.9.2 Parts List.....	9-12
9.10 Ethernet PCB	9-13
9.10.1 Layout.....	9-13
9.10.2 Parts List.....	9-13

CHAPTER 10	BLOCK DIAGRAM	10-1
10.1	ELLIX 20	10-2
CHAPTER 11	WIRING DIAGRAM	11-1
11.1	Main PCB Block Diagram	11-2
11.2	Main PCB Wiring Connection	11-2
11.3	LED PCB Block Diagram	11-4
11.4	LED PCB Wiring Connection	11-4
11.5	POWER PCB Block Diagram.....	11-6
11.6	POWER PCB Wiring Connection.....	11-6
CHAPTER 12	SCHEMATIC DIAGRAM	12-1
12.1	Main PCB CPU Part.....	12-2
12.2	Main PCB Memory Part	12-3
12.3	Main PCB Motor Driver Part	12-4
12.4	Main PCB TPH Part	12-5
12.5	Main PCB Sensing Part	12-6
12.6	Main PCB Drawer / Buzzer / Reset Part.....	12-7
12.7	Main PCB Power Part.....	12-8
12.8	Main PCB Interface Part	12-9
12.9	LED PCB Circuit	12-10
12.10	Power PCB Circuit	12-11
12.11	Paper End PCB Circuit	12-12
12.12	RS-232C I/F PCB Circuit	12-13
12.13	RS-485 I/F PCB Circuit.....	12-14
12.14	IEEE-1284 Parallel I/F PCB Circuit.....	12-15
12.15	USB I/F PCB Circuit.....	12-16
12.16	Ethernet I/F PCB Circuit.....	12-17

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Samsung/ELLIX-20 service manual.html](https://the-checkout-tech.com/manuals/Samsung/ELLIX-20%20service%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)