


**SAM4S**

---

# SERVICE MANUAL

**POS PRINTER  
ELLIX 20II**

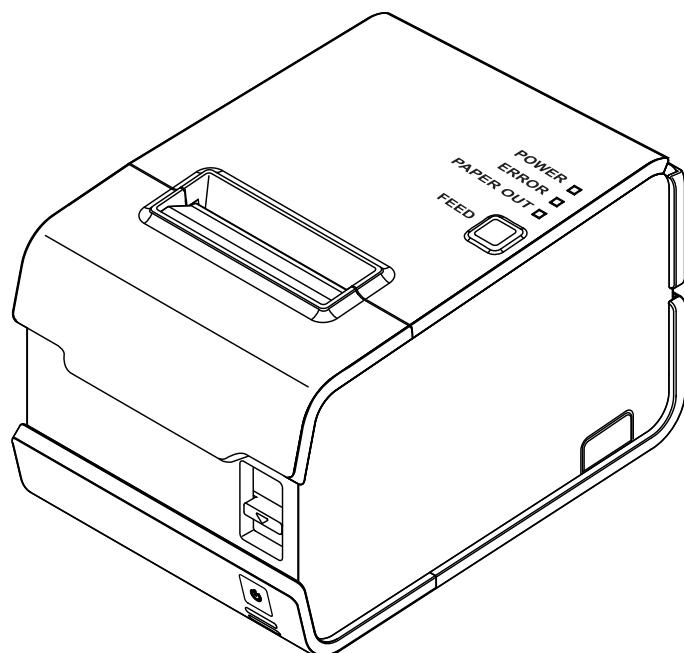

All specifications are subject to change without notice.

# CONTENTS

<b>CHAPTER 1 PRECAUTION STATEMENT .....</b>	1-1
1.1 Safety Precaution.....	1-2
1.2 Servicing Precaution .....	1-3
1.3 Precaution for Electrostatic Sensitive Device .....	1-4
1.4 Operational Precaution .....	1-4
<b>CHAPTER 2 PRODUCT SPECIFICATION .....</b>	2-1
2.1 General Specification.....	2-2
2.2 Appearance.....	2-3
2.2.1 Printer Dimension .....	2-3
2.2.2 AC Adapter Dimension.....	2-3
2.2.3 Feature Location .....	2-4
2.3 Thermal Printer Specification.....	2-4
2.3.1 Printer Specification .....	2-4
2.3.2 Character Specification .....	2-5
2.3.3 Paper Specification .....	2-5
2.3.4 Reliability and Environment Specification .....	2-5
2.3.5 Printable Area.....	2-6
2.3.6 TPH Specification .....	2-7
2.3.7 TPH Maximum Condition .....	2-7
2.3.8 Other Component Specification .....	2-7
2.4 SMPS Specification .....	2-8
2.4.1 SMPS Specification.....	2-8
2.4.2 SMPS Output Connector.....	2-8
2.5 Interface Specification.....	2-9
2.5.1 RS-232C Serial Interface .....	2-9
2.5.1.1 RS-232C Specification.....	2-9
2.5.1.2 RS-232C Signal Description .....	2-9
2.5.1.3 RS-232C Interface Cable.....	2-10
2.5.2 RS-485 Serial Interface .....	2-11
2.5.2.1 RS-485 Signal Description.....	2-11
2.5.2.2 RS-485 Interface Cable .....	2-11

---

2.5.3 IEEE-1284 Parallel Interface .....	2-12
2.5.3.1 Parallel Interface Cable Pin Connection .....	2-12
2.5.3.2 Parallel Signal Description.....	2-12
2.5.4 USB Interface .....	2-14
2.5.4.1 USB Specification .....	2-14
2.5.4.2 USB Signal Description .....	2-14
2.5.4.3 USB Interface Cable .....	2-14
2.5.5 Ethernet Interface .....	2-15
2.5.5.1 Ethernet Specification .....	2-15
2.5.5.2 Ethernet Interface Cable .....	2-15
2.6 Drawer Kick-Out Specification .....	2-16
2.6.1 Drawer Signal Description.....	2-16
2.6.2 Drawer Interface Cable .....	2-16
<b>CHAPTER 3 INSTALLATION AND OPERATION .....</b>	<b>3-1</b>
3.1 Installation .....	3-2
3.1.1 AC Adapter, Interface and Drawer Cable Installation .....	3-2
3.1.2 Paper Roll Installation .....	3-4
3.1.3 Partition Installation .....	3-5
3.1.4 Wall Mount Installation .....	3-6
3.2 Operation .....	3-7
3.2.1 Setting the DIP Switch.....	3-7
3.2.1.1 DIP Switch Setting 1 Function .....	3-7
3.2.1.2 Baud Rate Selection .....	3-8
3.2.1.3 DIP Switch Setting 2 Function .....	3-8
3.2.1.4 Printing Density Selection.....	3-8
3.2.2 Hexadecimal Dumping .....	3-9
3.2.3 The Self Test Mode .....	3-10
3.2.4 Control Command .....	3-12
<b>CHAPTER 4 DISASSEMBLY AND ASSEMBLY .....</b>	<b>4-1</b>
4.1 Case-Lower Block .....	4-2
4.2 Case-Upper Block .....	4-4
4.3 Printer Block.....	4-7

<b>CHAPTER 5 MAINTENANCE AND ADJUSTMENT.....</b>	5-1
5.1 Adjustment .....	5-2
5.1.1 Adjustment Near-End Sensor .....	5-2
5.1.2 Paper Jam .....	5-4
5.2 Maintenance.....	5-5
5.2.1 Cleaning Head.....	5-5
<b>CHAPTER 6 REFERENCE INFORMATION.....</b>	6-1
6.1 SDRAM (K4S641632A) Diagram & Description .....	6-2
6.2 NOR FLASH MEMORY (A29L800UV) Diagram & Description .....	6-3
6.3 MOTOR DRIVER IC (MC34920EI) Diagram & Description.....	6-4
6.4 USB TO SERIAL IC (CY7C64013) Diagram & Description.....	6-5
6.5 Other ICs (SN74ACT245 / SN74LV14 / LM393D) Diagram & Description.....	6-6
6.6 Other ICs (74HC74 / 34063 / MAX232) Diagram & Description .....	6-7
6.7 Other ICs and TR, DIODE Diagram.....	6-8
<b>CHAPTER 7 TROUBLESHOOTING .....</b>	7-1
7.1 Power Problem.....	7-2
7.1.1 Verifying the Power Supply .....	7-2
7.1.2 Verifying the Main B'D Power Line.....	7-3
7.1.3 Verifying the LED B'D Power Line .....	7-4
7.1.4 Verifying the TPH Logic Power Line .....	7-4
7.1.5 Verifying the I/F B'D Power Line .....	7-4
7.2 System Problem.....	7-5
7.2.1 System Clock problem .....	7-5
7.2.2 System Signal problem .....	7-5
7.3 Thermal Printer and Feed Motor problem.....	7-6
7.3.1 TPH problem .....	7-6
7.3.2 Step Motor and Auto Cutter problem .....	7-7
7.4 LED B'D and Sensor Problem .....	7-8
7.5 Drawer Problem .....	7-9
7.6 RS-232C Interface Problem.....	7-9
7.7 RS-485 Interface Problem .....	7-10
7.8 IEEE-1284 Parallel Interface Problem .....	7-11
7.9 USB Interface Problem .....	7-12
7.10 Ethernet Interface problem .....	7-13

---

<b>CHAPTER 8 EXPLODED VIEWS AND PARTS LIST .....</b>	8-1
8.1 Exploded View .....	8-2
8.2 Parts List .....	8-3
<b>CHAPTER 9 PCB LAYOUT AND PARTS LIST.....</b>	9-1
9.1 Main PCB .....	9-2
9.1.1 Layout.....	9-2
9.1.2 Parts List.....	9-3
9.2 LED PCB.....	9-6
9.2.1 Layout.....	9-6
9.2.2 Parts List.....	9-6
9.3 P-END PCB.....	9-7
9.3.1 Layout.....	9-7
9.3.2 Parts List.....	9-7
9.4 P-NEAR END PCB .....	9-7
9.4.1 Layout.....	9-7
9.4.2 Parts List.....	9-7
9.5 POWER PCB .....	9-8
9.5.1 Layout.....	9-8
9.5.2 Parts List.....	9-8
9.6 RS-232C Serial Interface PCB.....	9-9
9.6.1 Layout.....	9-9
9.6.2 Parts List.....	9-9
9.7 RS-485 Serial Interface PCB .....	9-10
9.7.1 Layout.....	9-10
9.7.2 Parts List.....	9-10
9.8 IEEE-1284 Parallel Interface PCB .....	9-11
9.8.1 Layout.....	9-11
9.8.2 Parts List.....	9-11
9.9 USB Interface PCB .....	9-12
9.9.1 Layout.....	9-12
9.9.2 Parts List.....	9-12
9.10 USB(New) Interface PCB.....	9-13
9.10.1 Layout.....	9-13
9.10.2 Parts List.....	9-13

---

9.11 Ethernet PCB .....	9-14
9.11.1 Layout.....	9-14
9.11.2 Parts List.....	9-14
9.12 BLUETOOTH PCB.....	9-15
9.12.1 Layout.....	9-15
9.12.2 Parts List.....	9-15
9.13 WIRELESS PCB .....	9-16
9.13.1 Layout.....	9-16
9.13.2 Parts List.....	9-16
9.14 MELODY PCB.....	9-17
9.14.1 Layout.....	9-17
9.14.2 Parts List.....	9-17
 <b>CHAPTER 10 BLOCK DIAGRAM .....</b>	 10-1
10.1 ELLIX 20II .....	10-2
 <b>CHAPTER 11 WIRING DIAGRAM .....</b>	 11-1
11.1 Main PCB Block Diagram .....	11-2
11.2 Main PCB Wiring Connection .....	11-2
11.3 LED PCB Block Diagram .....	11-4
11.4 LED PCB Wiring Connection .....	11-4
11.5 POWER PCB Block Diagram.....	11-6
11.6 POWER PCB Wiring Connection.....	11-6
 <b>CHAPTER 12 SCHEMATIC DIAGRAM .....</b>	 12-1
12.1 Main PCB CPU Part.....	12-2
12.2 Main PCB Memory Part .....	12-3
12.3 Main PCB Motor Driver Part .....	12-4
12.4 Main PCB TPH Part .....	12-5
12.5 Main PCB Sensing Part .....	12-6
12.6 Main PCB Drawer / Buzzer / Reset Part.....	12-7
12.7 Main PCB Power Part .....	12-8
12.8 Main PCB Interface Part .....	12-9
12.9 LED PCB Circuit .....	12-10
12.10 Power PCB Circuit .....	12-11

12.11 Paper End PCB Circuit .....	12-12
12.12 RS-232C I/F PCB Circuit .....	12-13
12.13 RS-485 I/F PCB Circuit.....	12-14
12.14 IEEE-1284 Parallel I/F PCB Circuit.....	12-15
12.15 USB I/F PCB Circuit.....	12-16
12.16 Ethernet I/F PCB Circuit.....	12-17

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : the biggest supplier of cash register and scale manuals on the net