


STP-102S / STP-102P

Operator's Manual

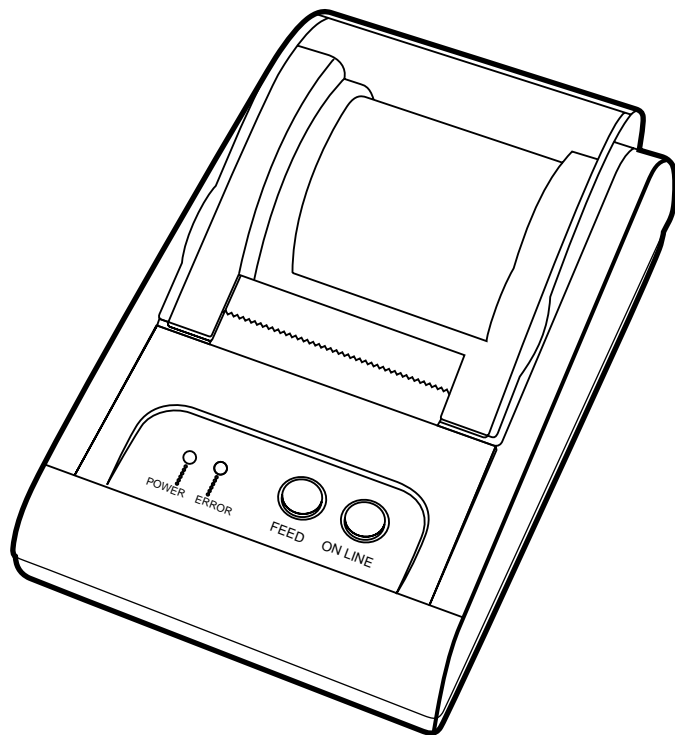

Warning - U.S

This equipment has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interface when the equipment is operated in a commercial environment. This equipment generates uses, and can radiate radio frequency energy and, if not installed and uses in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Notice - Canada

This Apparatus complies with class "A" limits for radio interference as specified in the Canadian department of communications radio interference regulations.

Introduction

The STP-102S and STP-102P Roll Printer is designed for use with electric instruments such as system ECR, POS, banking equipment peripheral equipment, etc.

The main features of the printer are as follows:

1. High speed printing
2. Low noise thermal printing.
3. RS-232 serial interface (STP-102S). Parallel interface (STP-102P).
4. The data buffer allows the unit to receive print data even during printing.
5. Different print densities can be selected by DIP switches.

Please be sure to read the instruction in this manual carefully before using your new STP-102S and STP-102P.

NOTE

The socket-outlet shall be near the equipment and it shall be easy accessible.


Table of Contents

Chapter 1. Unpacking	4
1-1. Checking the contents of the Printer	4
1-2. Locating the Printer	4
1-3. Printer Part names	5
1-4. Operating Control Panel	6
Chapter 2. Connecting the cable	7
2-1. Connecting the AC adapter to your printer	7
2-2. Connecting the Printer to your computer	8
Chapter 3. Installing the Paper Roll	10
Chapter 4. Setting the DIP Switching	11
Chapter 5. Running the Self Test	13
Chapter 6. Code Table	14
Chapter 7. Functions	21
Chapter 8. Control Commands	23
APPENDIX A - Connectors	34
- Serial Type (STP-102S)	34
- Parallel Type (STP-102P)	34
APPENDIX B - Specification	35

Chapter 1. Unpacking

1-1. Checking the contents of the Printer.

The items illustrated below are included with your printer. If any items are damaged or missing, please contact your dealer for assistance.

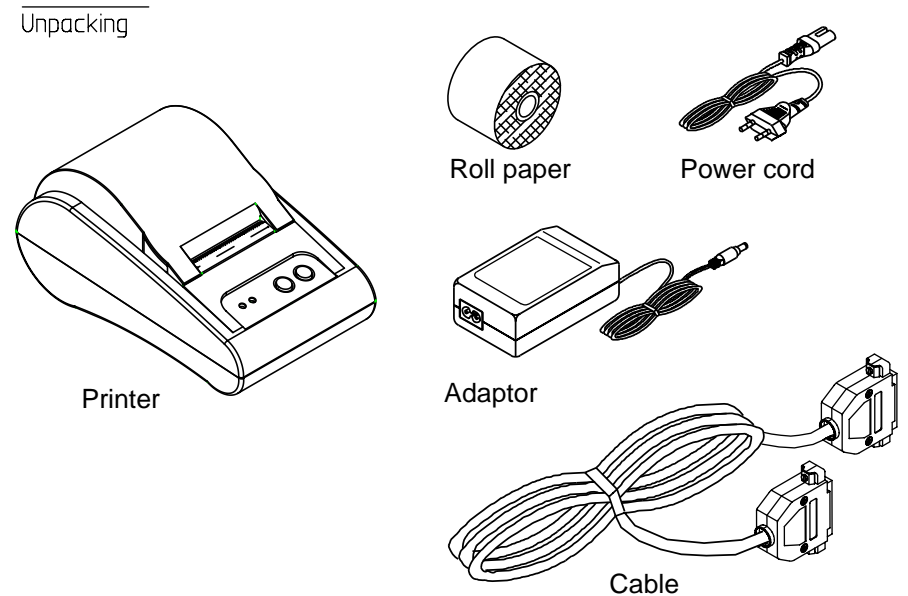

1-2. Locating the Printer.

Avoid location in direct sunlight or excessive heat.
 Avoid or storing the printer in the place subject to excessive moisture.
 Do not use or store, horizontal surface for the printer. Avoid places subject to intense vibration or shock.
 Make sure that there is enough space around the printer so that it can be used easily.

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*