


SHARP SERVICE MANUAL

CODE: 00ZER01PUSM2E

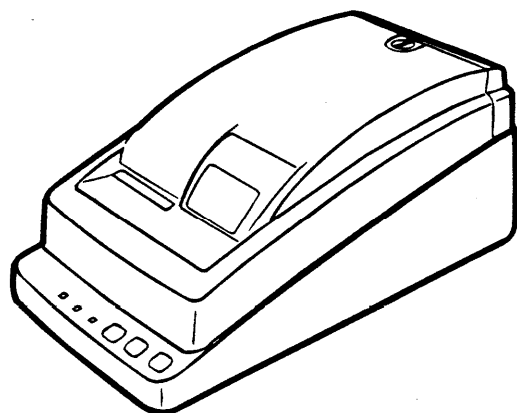

ECR / POS OPTION THERMAL LINE PRINTER

MODEL ER-01PU

PRINTER : PR-58L

CONTENTS

CHAPTER 1. SPECIFICATIONS	1-1
CHAPTER 2. OPTIONS	1-7
CHAPTER 3. INITIAL PROCESSING	3-1
CHAPTER 4. COMMAND DESCRIPTION	4-1
CHAPTER 5. CHARACTER DESCRIPTION	5-1
CHAPTER 6. HEXADECIMAL DUMP	6-1
CHAPTER 7. ERROR HANDLING	6-1
CHAPTER 8. DISASSEMBLY & ASSEMBLY	8-1
CHAPTER 9. INSTALLATION OF SERVICE OPTIONS	9-1
CHAPTER 10. DIAG FUNCTION	10-1
CHAPTER 11. IPL (Initial Program Loading) MODE	11-1
CHAPTER 12. HARDWARE DESCRIPTION	12-1
CHAPTER 13. CIRCUIT DIAGRAM & PWB LAYOUT	13-1
PARTS GUIDE (Except for "KA" version)	
PARTS GUIDE (For "KA" version)	

Parts marked with "▲" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)