

TEC

TOSHIBA TEC Bar Code Printer

B-850 Series

External Equipment Interface Specification

First Edition: December 8, 2000
Second Edition: February 9, 2001

TOSHIBA TEC CORPORATION

TABLE OF CONTENTS

	Page
1. SCOPE	1
2. GENERAL DESCRIPTION.....	1
3. INTERFACE.....	3
3.1 SERIAL INTERFACE.....	3
3.2 PARALLEL INTERFACE	8
3.3 NETWORK INTERFACE.....	17
4. KEY OPERATION FUNCTIONS	18
4.1 SYSTEM MODE FUNCTIONS	18
4.2 ONLINE MODE FUNCTIONS.....	23
4.3 DOWNLOAD MODE SETTING FUNCTION	23
5. TRANSMISSION SEQUENCE	24
5.1 INITIALIZATION	24
5.2 LABEL ISSUE OPERATION.....	26
6. INTERFACE COMMANDS.....	28
6.1 OUTLINE OF COMMANDS.....	28
6.2 LIST OF COMMANDS	29
6.2.1 Commands for Creating Application.....	29
6.2.2 Commands for System Administrator.....	30
6.3 COMMANDS FOR CREATING APPLICATION	31
6.3.1 Label Size Set Command.....	31
6.3.2 Position Fine Adjust Command	36
6.3.3 Print Density Fine Adjust Command.....	41
6.3.4 Ribbon Motor Drive Voltage Fine Adjust Command.....	42
6.3.5 Image Buffer Clear Command.....	43
6.3.6 Clear Area Command.....	44
6.3.7 Line Format Command.....	46
6.3.8 Bit Map Font Format Command	51
6.3.9 Outline Font Format Command	65
6.3.10 Bar Code Format Command	81
6.3.11 Bit Map Font Data Command	113
6.3.12 Outline Font Data Command	116
6.3.13 Bar Code Data Command	119
6.3.14 Issue Command	132

	Page
6.3.15 Feed Command	142
6.3.16 Eject Command	147
6.3.17 Forward/Reverse Feed Command	148
6.3.18 Storage Area Allocate Command	150
6.3.19 Memory Card Format Command.....	152
6.3.20 2-byte Writable Character Code Range Command.....	153
6.3.21 Bit Map Writable Character Command.....	154
6.3.22 Graphic Command	166
6.3.23 Save Start Command	174
6.3.24 Save Terminate Command.....	176
6.3.25 Saved Data Call Command	177
6.3.26 Head Broken Dots Check Command	178
6.3.27 Message Display Command.....	179
6.3.28 Reset Command.....	181
6.3.29 Status Request Command	182
6.3.30 Version Information Acquire Command	183
6.3.31 ATA Card Information Acquire Command.....	184
6.3.32 ATA Card Writable Character Information Acquire Command.....	186
6.3.33 IP Address Set Command	187
6.4 COMMANDS FOR SYSTEM ADMINISTRATOR	188
6.4.1 Parameter Set Command.....	188
6.4.2 Fine Adjustment Value Set Command	191
6.4.3 Batch Reset Command	193
7. CONTROL CODE SELECTION	194
8. ERROR PROCESSING	195
8.1 COMMUNICATION ERRORS	195
8.2 ERRORS IN ISSUING OR FEEDING.....	195
8.3 ERRORS IN WRITABLE CHARACTER AND PC COMMAND ENTRY MODES.....	197
8.4 SYSTEM ERRORS.....	197
8.5 RESET PROCESSING	197

	Page
9. STATUS RESPONSE.....	198
9.1 SERIAL INTERFACE.....	198
9.1.1 Functions	198
9.1.2 Status Format	198
9.1.3 Detail Status	199
9.2 PARALLEL INTERFACE	201
9.2.1 Compatible Mode.....	201
9.2.2 Nibble Mode.....	203
10. LCD MESSAGES AND LED INDICATIONS.....	204
11. LCD MESSAGES IN DIFFERENT LANGUAGES.....	207
12. CHARACTER CODE TABLE	209
12.1 TIMES ROMAN, HELVETICA, LETTER GOTHIC, PRESTIGE ELITE, COURIER	209
12.2 PRESENTATION.....	216
12.3 OCR-A	220
12.4 OCR-B	224
12.5 TEC OUTLINE FONT 1	227
12.6 PRICE FONT 1, 2, 3	234
12.7 TEC OUTLINE FONT 2, 3	235
12.8 TrueType FONT.....	242
13. BAR CODE TABLE	249
14. DRAWING OF BAR CODE DATA.....	261
15. AUTOMATIC ADDING OF START/STOP CODE	282

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)