



TOSHIBA Bar Code Printer

## **B-SX4 Series, B-SX5 Series**

### **Key Operation Specification**

First Edition:	November 18, 2002
Second Edition:	February 21, 2003
Third Edition:	June 6, 2003
Fourth Edition:	August 22, 2003
Fifth Edition:	February 27, 2004
Sixth Edition:	January 14, 2005
Seventh Edition:	February 8, 2005
Eighth Edition:	May 9, 2005
Ninth Edition:	April 4, 2006
Tenth Edition:	May 23, 2007

**TOSHIBA TEC CORPORATION**

# TABLE OF CONTENTS

	Page
<b>1. SCOPE.....</b>	<b>1</b>
<b>2. OUTLINE .....</b>	<b>1</b>
<b>3. OPERATION PANEL .....</b>	<b>1</b>
<b>4. GENERAL VIEW OF KEY OPERATION .....</b>	<b>2</b>
<b>5. ONLINE MODE.....</b>	<b>3</b>
5.1 KEY FUNCTION.....	3
5.2 LED FUNCTION.....	3
5.3 LCD FUNCTION.....	3
5.4 ONLINE MODE OPERATION EXAMPLE .....	4
5.5 THRESHOLD SETTING.....	5
5.5.1 Outline of Threshold Setting .....	5
5.5.2 Threshold Setting Operation Example.....	5
5.6 RESET.....	7
5.7 PARAMETER SETTING.....	8
5.7.1 Parameter Setting Operation Example .....	8
5.7.2 Setting Contents.....	13
5.8 FINE ADJUSTMENT VALUE SETTING.....	17
5.8.1 Fine Adjustment Value Setting Operation Example .....	17
5.8.2 Setting Contents.....	20
5.9 DUMPING OF RECEIVE BUFFER .....	21
5.9.1 Operation Example of Receive Buffer Dumping.....	21
5.10 BASIC EXPANSION MODE .....	24
5.11 AUTOMATIC CALIBRATION SETTING (SUPPORTED FROM V4.4) .....	25
5.11.1 Operation Example of Automatic Calibration Setting .....	25
5.12 LAN ENABLE/DISABLE SETTING (SUPPORTED ONLY BY V4.4) .....	28
5.12.1 Operation Example of LAN Enable/Disable Setting .....	28
5.13 LCD MESSAGES AND LED INDICATIONS .....	30
5.14 LCD MESSAGES IN DIFFERENT LANGUAGES (UPPER LINE OF LCD) .....	34

	Page
<b>6. SYSTEM MODE.....</b>	<b>37</b>
6.1 OUTLINE OF SYSTEM MODE .....	37
6.2 SELF-TEST .....	39
6.2.1 Self-test Operation Example .....	39
6.2.2 Self-test Items .....	43
6.2.3 Self-test Results Printout Samples .....	46
6.2.4 Self-test Printout Contents .....	48
6.3 VARIOUS PARAMETERS SETTING .....	59
6.3.1 Various Parameters Setting Operation Example .....	59
6.3.2 Setting Contents.....	64
6.4 FINE ADJUSTMENT VALUE SETTING.....	76
6.4.1 Fine Adjustment Value Setting Operation Example .....	76
6.4.2 Setting Contents.....	78
6.5 TEST PRINT .....	87
6.5.1 Test Print Operation Example.....	87
6.5.2 Setting Contents.....	91
6.5.3 Test Print Samples.....	95
6.6 SENSOR DISPLAY/ADJUSTMENT .....	99
6.6.1 Sensor Display/Adjustment Operation Example.....	99
6.6.2 Display Contents .....	101
6.7 RAM CLEAR.....	102
6.7.1 RAM Clear Operation Example.....	102
6.7.2 RAM Clear Contents .....	104
6.8 IP ADDRESS SETTING .....	108
6.8.1 IP Address Setting Operation Example .....	108
6.8.2 Setting Contents.....	113
6.9 BASIC SETTING .....	115
6.9.1 BASIC Setting Operation Example .....	115
6.10 ADJUSTMENT MODE FOR FACTORY.....	118
6.11 RFID SETTING.....	121
6.11.1 RFID Setting Operation Example.....	121
6.11.2 Setting Contents.....	124
<b>7. DOWNLOAD MODE.....</b>	<b>131</b>

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)