

TOSHIBA

TOSHIBA Barcode Printer

B-SX600 SERIES

Owner's Manual



TABLE OF CONTENTS

	Page
1. PRODUCT OVERVIEW.....	1- 1
1.1 Introduction.....	1- 1
1.2 Accessories	1- 2
1.3 Part Names and Functions	1- 3
1.3.1 Front View	1- 3
1.3.2 Rear View (Model with a USB interface)	1- 4
1.3.3 Rear View (Model with a LAN interface).....	1- 5
1.3.4 Interior	1- 6
1.3.5 Operation Panel.....	1- 8
1.4 Cutter Unit	1- 9
1.4.1 Cut Position	1- 9
1.4.2 Precautions when using the Cutter Unit	1-10
1.5 Peel-off Unit.....	1-11
1.5.1 Part Names.....	1-11
1.5.2 Precautions when using the Peel-off Unit.....	1-12
2. PRINTER SETUP	2- 1
2.1 Removing the Protective Materials	2- 1
2.2 Installation Location	2- 4
2.3 Connecting the Power Cord	2- 5
2.4 Connecting the Printer (with a USB interface) to Your Computer.....	2- 6
2.5 Connecting the Printer (with a LAN interface) to Your Computer	2- 7
3. MEDIA AND RIBBON	3- 1
3.1 Supply Specifications	3- 1
3.2 Die-cut Label	3- 2
3.3 Notched Media	3- 3
3.4 Label with Black Marks.....	3- 4
3.5 Guaranteed Print Area.....	3- 5
3.6 Storage of Media and Ribbon.....	3- 6
3.7 Unacceptable Media and Ribbons.....	3- 6
4. LOADING THE RIBBON	4- 1
5. LOADING THE MEDIA.....	5- 1
5.1 How to Load the Media.....	5- 1
5.2 How to Load the Media for the Model with the Peel-off Unit.....	5- 5
5.3 How to Load Fanfold Paper.....	5-11

6. PRINTING FROM YOUR COMPUTER	6- 1
6.1 Print Test from Printer Driver	6- 1
6.2 Precautions when Using the Model with a LAN Interface	6- 4
7. PRINTER OPERATION	7- 1
7.1 Media Feed Mode	7- 1
7.2 Tear-off	7- 4
7.3 Page Alignment	7- 5
7.4 Media Calibration	7- 8
8. OPERATION PANEL	8- 1
8.1 Operation Panel	8- 1
8.2 Messages Displayed on the Operation Panel	8- 2
8.3 Printer Operation Using the Operation Panel	8- 6
8.4 Menu Options	8- 7
8.5 How to Cancel a Print Job	8-12
9. TEST PRINT	9- 1
9.1 How to Perform a Print Test	9- 1
9.2 Print Test Pattern	9- 1
10. REMOVING JAMMED MEDIA	10- 1
10.1 Removing Jammed Media from the Cutter Unit	10- 1
10.2 Removing Jammed Media from the Peel-off Unit	10- 2
11. DAILY MAINTENANCE	11- 1
11.1 Cleaning the Media Sensor	11- 2
11.2 Cleaning the Platen	11- 3
11.3 Cleaning the Ribbon Separation Plate	11- 4
11.4 Cleaning the Ribbon Guide Bar	11- 4
11.5 Cleaning the Print Head	11- 5
11.6 Cleaning the Peel-off Unit	11- 6
12. TROUBLESHOOTING	12- 1
12.1 Problems at Start-up of the Printer	12- 1
12.2 Problems while Printing	12- 1
12.3 Print Failure	12- 4
12.4 Problems in the Network (Model with a LAN Interface)	12- 8
12.5 Solutions if an Error Message Appears on the Operation Panel	12- 9
13. FREQUENTLY ASKED QUESTIONS (FAQ)	13- 1

14. SPECIFICATIONS	14- 1
14.1 Printer (Model with a USB Interface)	14- 1
14.2 Printer (Model with a LAN Interface)	14- 2
14.3 Cutter Unit	14- 4
14.4 Peel-off Unit.....	14- 4
15. POWER CORD	15- 1

WARNING!

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

CAUTION!

- 1. This manual may not be copied in whole or in part without prior written permission of TOSHIBA TEC.*
- 2. The contents of this manual may be changed without notification.*
- 3. Please refer to your local Authorised Service representative with regard to any queries you may have in this manual.*

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/B-SX600 series owners manual.html](https://the-checkout-tech.com/manuals/TEC/B-SX600%20series%20owners%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)