



TOSHIBA TEC Bar Code Printer

**B-452-QQ/QP, B-452-HS**

**Key Unit Interface Specification**

First Edition: December 14, 1998  
Second Edition: February 1, 1999  
Third Edition: October 26, 1999  
Fourth Edition: March 15, 2000

**TOSHIBA TEC CORPORATION**

## TABLE OF CONTENTS

	Page
<b>1. SCOPE</b> .....	1
<b>2. GENERAL DESCRIPTION</b> .....	1
<b>3. CONNECTION DIAGRAM</b> .....	2
<b>4. INTERFACE</b> .....	3
<b>5. TRANSMISSION SEQUENCE</b> .....	8
5.1 LIST OF DATA TO BE SENT/RECEIVED .....	12
<b>6. INTERFACE COMMANDS</b> .....	14
6.1 OUTLINE OF COMMANDS .....	14
6.2 LABEL SIZE SET COMMAND                    {D.....	15
6.3 POSITION FINE ADJUST COMMAND            {AX.....	15
6.4 PRINT DENSITY FINE ADJUST COMMAND    {AY.....	15
6.5 IMAGE BUFFER CLEAR COMMAND            {C.....	15
6.6 CLEAR AREA COMMAND                    {XR .....	15
6.7 LINE FORMAT COMMAND                    {LC.....	15
6.8 BIT MAP FONT FORMAT COMMAND          {PC .....	15
6.9 OUTLINE FONT FORMAT COMMAND          {PV.....	15
6.10 BAR CODE FORMAT COMMAND             {XB.....	15
6.11 BIT MAP FONT DATA COMMAND          {RC .....	15
6.12 OUTLINE FONT DATA COMMAND          {RV .....	15
6.13 BAR CODE DATA COMMAND             {RB .....	15
6.14 ISSUE COMMAND                        {XS.....	15
6.15 FEED COMMAND                         {T .....	15
6.16 EJECT COMMAND                        {IB .....	15
6.17 FORWARD/REVERSE FEED COMMAND       {U1, {U2.....	15
6.18 FORMAT COMMAND                       {J1.....	15
6.19 BIT MAP WRITABLE CHARACTER COMMAND  {XD .....	15
6.20 GRAPHIC COMMAND                     {SG .....	15
6.21 SAVE START COMMAND                  {XO .....	15
6.22 SAVE TERMINATE COMMAND             {XP.....	15
6.23 SAVED DATA CALL COMMAND            {XQ .....	15
6.24 RESET COMMAND                        {WR .....	15
6.25 STATUS REQUEST COMMAND             {WS .....	15
6.26 PAUSE COMMAND                        {WP .....	16
6.27 RESTART COMMAND                     {WQ.....	17

		Page
6.28 FEED COMMAND	{WU .....	18
6.29 THRESHOLD SET FEED COMMAND	{WT .....	19
6.30 ALL BATCHES CLEAR COMMAND	{WV .....	20
6.31 SELF-TEST RESULTS PRINT COMMAND	{Z1 .....	21
6.32 PARAMETER SET COMMAND	{Z2 .....	22
6.33 TEST PRINT COMMAND	{Z3 .....	24
6.34 RAM CLEAR COMMAND	{Z4 .....	25
6.35 SET VALUES CALL COMMAND	{Z5 .....	26
6.36 SENSOR ADJUST COMMAND	{Z6 .....	29
6.37 INTERNAL LAN BOARD SET COMMAND	{Z7 .....	30
6.38 TRANSFER COMMAND (KB-80 → LAN)	{NA .....	31
6.39 VERSION CALL COMMAND	{Y.....	32

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/TEC/B452 Key Unit Specification manual.html](https://the-checkout-tech.com/manuals/TEC/B452%20Key%20Unit%20Specification%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)