

TEC

TOSHIBA TEC Bar Code Printer

B-452-QQ/QP

External Equipment Interface Specification

First Edition: November 6, 1998
Second Edition: January 6, 1999
Third Edition: July 16, 1999
Fourth Edition: October 26, 1999
Fifth Edition: March 22, 2000

TOSHIBA TEC CORPORATION

TABLE OF CONTENTS

	Page
1. SCOPE	1
2. GENERAL DESCRIPTION.....	1
3. INTERFACE	2
3.1 SERIAL INTERFACE	2
3.2 PARALLEL INTERFACE.....	7
3.2.1 Forward Interface.....	7
3.2.2 Backward Interface	12
4. KEY OPERATION FUNCTIONS	20
4.1 DIP SW FUNCTIONS	20
4.2 SELF-TEST MODE FUNCTIONS.....	21
4.3 MAINTENANCE MODE FUNCTIONS	21
4.4 ONLINE MODE FUNCTIONS	21
5. TRANSMISSION SEQUENCE	22
5.1 INITIALIZATION.....	22
5.2 LABEL ISSUE OPERATION	24
6. INTERFACE COMMANDS.....	26
6.1 OUTLINE OF COMMANDS	26
6.2 LIST OF COMMANDS	27
6.3 LABEL SIZE SET COMMAND	28
6.4 POSITION FINE ADJUST COMMAND.....	32
6.5 PRINT DENSITY FINE ADJUST COMMAND.....	37
6.6 RIBBON MOTOR DRIVE VOLTAGE FINE ADJUST COMMAND.....	38
6.7 IMAGE BUFFER CLEAR COMMAND	39
6.8 CLEAR AREA COMMAND.....	40
6.9 LINE FORMAT COMMAND	42
6.10 BIT MAP FONT FORMAT COMMAND.....	48
6.11 OUTLINE FONT FORMAT COMMAND	60
6.12 BAR CODE FORMAT COMMAND	75
6.13 BIT MAP FONT DATA COMMAND	102
6.14 OUTLINE FONT DATA COMMAND	105
6.15 BAR CODE DATA COMMAND	108
6.16 ISSUE COMMAND.....	115
6.17 FEED COMMAND.....	123
6.18 EJECT COMMAND.....	127
6.19 FORWARD/REVERSE FEED COMMAND.....	129
6.20 FORMAT COMMAND	131

	Page
6.21 2-BYTE WRITABLE CHARACTER CODE RANGE COMMAND	132
6.22 BIT MAP WRITABLE CHARACTER COMMAND.....	133
6.23 GRAPHIC COMMAND.....	142
6.24 SAVE START COMMAND.....	150
6.25 SAVE TERMINATE COMMAND.....	151
6.26 SAVED DATA CALL COMMAND	152
6.27 RESET COMMAND	153
6.28 STATUS REQUEST COMMAND.....	154
6.29 PARAMETER SET COMMAND.....	155
6.30 TRANSFER COMMNAND (LAN → KB-80)	157
6.31 TRANSFER COMMNAND (KB80 → LAN)	158
7. CONTROL CODE SELECTION.....	159
8. ERROR PROCESSING.....	160
8.1 COMMUNICATION ERRORS.....	160
8.2 ERRORS IN ISSUING OR FEEDING	160
8.3 ERRORS IN WRITABLE CHARACTER AND PC COMMAND ENTRY MODES	162
8.4 SYSTEM ERRORS	162
8.5 RESET PROCESSING	162
9. STATUS RESPONSE.....	163
9.1 SERIAL INTERFACE	163
9.1.1 Functions.....	163
9.1.2 Status Format	163
9.1.3 Detail Status.....	164
9.2 PARALLEL INTERFACE.....	165
10. KEY OPERATION.....	166
10.1 OPERATION PANEL	166
10.2 ONLINE MODE	166
10.2.1 Key Function	166
10.2.2 LED Function	166
10.2.3 Online Mode Operation Example	167
10.2.4 Reset.....	168
10.3 LED INDICATIONS	169
10.4 SELF-TEST/TEST PRINTING	170
10.4.1 Self-test Operation Example	170
10.4.2 Self-test Items.....	171
10.4.3 Self-test Results Printout Samples	173
10.4.4 Self-test Printout Contents	174
10.4.5 Test Print Samples.....	180

	Page
10.5 SENSOR ADJUSTMENT	181
10.5.1 Sensor Adjustment Operation Example.....	181
10.6 THRESHOLD SETTING (PREPRINTED LABEL)	182
10.6.1 Outline of Threshold Setting	182
10.6.2 Threshold Setting Operation Example.....	182
10.7 RAM CLEAR OPERATION EXAMPLE	183
10.7.1 RAM Clear Operation Example.....	183
10.7.2 RAM Clear Contents	184
11. CHARACTER CODE TABLE	186
11.1 TIMES ROMAN, HELVETICA, LETTER GOTHIC, PRESTIGE ELITE, COURIER.....	186
11.2 PRESENTATION	193
11.3 OCR-A.....	194
11.4 OCR-B.....	195
11.5 TEC OUTLINE FONT 1	196
11.6 PRICE FONT	203
11.7 TEC OUTLINE FONT 2, 3	204
11.8 TrueType FONT	211
12. BAR CODE TABLE	218
13. DRAWING OF BAR CODE DATA.....	229
14. AUTOMATIC ADDING OF START/STOP CODE	250

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](#)