



TOSHIBA TEC Bar Code Printer

B-452-QQ/QP, B-452-HS

Key Unit Interface Specification

First Edition: December 14, 1998
Second Edition: February 1, 1999
Third Edition: October 26, 1999
Fourth Edition: March 15, 2000

TOSHIBA TEC CORPORATION

TABLE OF CONTENTS

	Page
1. SCOPE	1
2. GENERAL DESCRIPTION	1
3. CONNECTION DIAGRAM	2
4. INTERFACE	3
5. TRANSMISSION SEQUENCE	8
5.1 LIST OF DATA TO BE SENT/RECEIVED	12
6. INTERFACE COMMANDS	14
6.1 OUTLINE OF COMMANDS	14
6.2 LABEL SIZE SET COMMAND {D.....	15
6.3 POSITION FINE ADJUST COMMAND {AX.....	15
6.4 PRINT DENSITY FINE ADJUST COMMAND {AY.....	15
6.5 IMAGE BUFFER CLEAR COMMAND {C.....	15
6.6 CLEAR AREA COMMAND {XR	15
6.7 LINE FORMAT COMMAND {LC.....	15
6.8 BIT MAP FONT FORMAT COMMAND {PC	15
6.9 OUTLINE FONT FORMAT COMMAND {PV.....	15
6.10 BAR CODE FORMAT COMMAND {XB.....	15
6.11 BIT MAP FONT DATA COMMAND {RC	15
6.12 OUTLINE FONT DATA COMMAND {RV	15
6.13 BAR CODE DATA COMMAND {RB	15
6.14 ISSUE COMMAND {XS.....	15
6.15 FEED COMMAND {T	15
6.16 EJECT COMMAND {IB	15
6.17 FORWARD/REVERSE FEED COMMAND {U1, {U2.....	15
6.18 FORMAT COMMAND {J1.....	15
6.19 BIT MAP WRITABLE CHARACTER COMMAND {XD	15
6.20 GRAPHIC COMMAND {SG	15
6.21 SAVE START COMMAND {XO	15
6.22 SAVE TERMINATE COMMAND {XP.....	15
6.23 SAVED DATA CALL COMMAND {XQ	15
6.24 RESET COMMAND {WR	15
6.25 STATUS REQUEST COMMAND {WS	15
6.26 PAUSE COMMAND {WP	16
6.27 RESTART COMMAND {WQ.....	17

		Page
6.28 FEED COMMAND	{WU	18
6.29 THRESHOLD SET FEED COMMAND	{WT	19
6.30 ALL BATCHES CLEAR COMMAND	{WV	20
6.31 SELF-TEST RESULTS PRINT COMMAND	{Z1	21
6.32 PARAMETER SET COMMAND	{Z2	22
6.33 TEST PRINT COMMAND	{Z3	24
6.34 RAM CLEAR COMMAND	{Z4	25
6.35 SET VALUES CALL COMMAND	{Z5	26
6.36 SENSOR ADJUST COMMAND	{Z6	29
6.37 INTERNAL LAN BOARD SET COMMAND	{Z7	30
6.38 TRANSFER COMMAND (KB-80 → LAN)	{NA	31
6.39 VERSION CALL COMMAND	{Y	32

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)