

## **TWO-COLOR PRINTER**

**Models:**

**CB-426-T3-QQ**

**CB-426-T3-QP**

## **EXTERNAL EQUIPMENT INTERFACE SPECIFICATION**

First Edition: February 19, 1999

***TOSHIBA TEC CORPORATION***

# TABLE OF CONTENTS

	Page
<b>1. SCOPE</b> .....	<b>1</b>
<b>2. GENERAL DESCRIPTION</b> .....	<b>1</b>
<b>3. INTERFACE</b> .....	<b>2</b>
3.1 SERIAL INTERFACE .....	2
3.2 PARALLEL INTERFACE .....	6
<b>4. KEY OPERATION FUNCTIONS</b> .....	<b>11</b>
4.1 DIP SW FUNCTIONS.....	11
4.2 SYSTEM MODE FUNCTIONS .....	13
4.3 ON-LINE MODE FUNCTIONS.....	15
<b>5. TRANSMISSION SEQUENCE</b> .....	<b>16</b>
5.1 INITIALIZATION.....	16
5.2 LABEL ISSUE OPERATION.....	17
<b>6. INTERFACE COMMANDS</b> .....	<b>20</b>
6.1 OUTLINE OF COMMANDS.....	20
6.2 LIST OF COMMANDS.....	22
6.3 LABEL SIZE SET COMMAND.....	23
6.4 POSITION FINE ADJUST COMMAND.....	26
6.5 COLOR REGISTRATION FINE ADJUST COMMAND (FOR USERS) .....	30
6.6 COLOR REGISTRATION FINE ADJUST COMMAND (FOR ADJUSTMENT BEFORE SHIPMENT FROM FACTORY).....	32
6.7 PRINT DENSITY FINE ADJUST COMMAND .....	34
6.8 RIBBON MOTOR DRIVE VOLTAGE FINE ADJUST COMMAND.....	35
6.9 RIBBON TYPE SET COMMAND.....	36
6.10 IMAGE BUFFER CLEAR COMMAND .....	37
6.11 CLEAR AREA COMMAND .....	38
6.12 LINE FORMAT COMMAND.....	40
6.13 BIT MAP FONT FORMAT COMMAND.....	46
6.14 OUTLINE FONT FORMAT COMMAND.....	55
6.15 BAR CODE FORMAT COMMAND .....	64
6.16 BIT MAP FONT DATA COMMAND .....	85
6.17 OUTLINE FONT DATA COMMAND .....	87
6.18 BAR CODE DATA COMMAND.....	89
6.19 ISSUE COMMAND.....	94
6.20 FEED COMMAND .....	100
6.21 FORMAT COMMAND .....	102
6.22 BIT MAP WRITABLE CHARACTER COMMAND .....	103
6.23 LOGO COMMAND.....	107

6.24 GRAPHIC COMMAND .....	110
6.25 HEAD BROKEN DOTS CHECK COMMAND .....	115
6.26 RESET COMMAND.....	116
6.27 STATUS REQUEST COMMAND.....	116
<b>7. CONTROL CODE SELECTION .....</b>	<b>117</b>
<b>8. ERROR PROCESSING .....</b>	<b>118</b>
8.1 COMMUNICATION ERRORS .....	118
8.2 ERRORS IN ISSUING OR FEEDING .....	118
8.3 ERRORS IN WRITABLE CHARACTER AND LOGO ENTRY MODES .....	119
8.4 SYSTEM ERRORS .....	120
8.5 RESET PROCESSING.....	120
<b>9. STATUS RESPONSE .....</b>	<b>121</b>
9.1 SERIAL INTERFACE .....	121
9.1.1 Functions .....	121
9.1.2 Status Format .....	121
9.1.3 Detail Status.....	122
9.2 PARALLEL INTERFACE .....	123
<b>10. LCD MESSAGES AND LED INDICATIONS.....</b>	<b>124</b>
<b>11. LCD MESSAGES IN DIFFERENT LANGUAGES .....</b>	<b>126</b>
<b>12. CHARACTER CODE TABLE .....</b>	<b>127</b>
12.1 TIMES ROMAN, HELVETICA, LETTER GOTHIC, PRESTIGE ELITE, COURIER.....	127
12.2 PRESENTATION .....	128
12.3 OCR-A .....	128
12.4 OCR-B .....	129
12.5 OUTLINE FONT.....	130
<b>13. BAR CODE TABLE.....</b>	<b>131</b>
<b>14. DRAWING OF BAR CODE DATA.....</b>	<b>140</b>
<b>15. AUTOMATIC ADDING OF START/STOP CODE.....</b>	<b>161</b>
<b>16. RIBBON NEAR END DETECTION.....</b>	<b>163</b>

[Click here to download the full manual at THE-CHECKOUT-TECH.COM](http://THE-CHECKOUT-TECH.COM)