


LINE THERMAL PRINTER

MODEL CT-S310

User's Manual

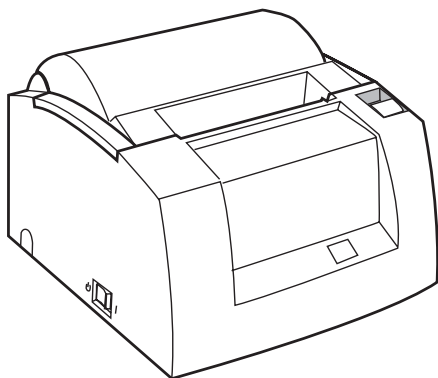

CITIZEN SYSTEMS JAPAN CO., LTD.

THE TABLE OF CONTENTS

1. GENERAL OUTLINE	9
1.1 Features	9
1.2 Unpacking	10
1.3 Model Classification	10
1.4 Basic Specifications	11
2. EXPLANATION OF PRINTER PARTS	12
2.1 Printer Appearance	12
2.2 Paper Cover Inside	14
2.3 Other Built-in Functions	14
3. PREPARATION	15
3.1 Connecting the AC Adapter and AC Power Cord	15
3.2 Connecting Interface Cables	16
3.3 Connecting the Cash Drawer	17
3.4 Installing the Printer	18
3.5 Partition for 58-mm Wide Paper Roll	18
3.6 Setting DIP Switch	19
3.7 Adjusting the Paper Near-end Sensor	20
4. MAINTENANCE AND TROUBLESHOOTING	21
4.1 Setting/Replacing Paper Rolls	21
4.2 Removing Jammed Paper	21
4.3 Cleaning the Print Head	22
4.4 When the Paper Cover Cannot Be Opened	22
4.5 Self-printing	23
4.6 Hexadecimal Dump Printing	23
4.7 Error Indication	24
5. OTHER	25
5.1 External Views and Dimensions	25
5.2 Manual Setting of Memory Switch	26
5.3 Printing Paper	28

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Uniwell/CT-S310 user manual.html](https://the-checkout-tech.com/manuals/Uniwell/CT-S310%20user%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)