

ACUWEIGH

AC-03 INDICATOR OPERATION MANUAL

Table of Contents

1.0 Introduction	1
2.0 Specifications	1
2.1 Keyboard and Display.....	2
3.0 Operation	3
3.1 Power	3
3.2 Zero Function.....	3
3.3 Tare Function.....	3
3.4 Preset Tare Function	3
3.5 Manual Memory Accumulation.....	4
3.6 Automatic Memory Accumulation	4
3.7 Manual Memory Accumulation.....	4
4.0 RS-232 Interface	5
4.1 Connections.....	5
4.2 Continuous Output.....	5
4.3 Automatic Output.....	6
4.4 Manual Printing.....	7
5.0 Battery Management	8
5.1 Operation with the Internal Battery	8
6.0 Technical Description	9
6.1 Purpose	9
6.2 Load Cell Connections.....	9
6.3 Configuration	9
6.3.1 A/D counts.....	9
6.3.2 SET menu	10
"d xx" = The decimal point and division of the scale.....	10
"n xxxxx" = The number of scale divisions	10
"Flt xx" = The digital filtering parameter.....	11
"rng x" = The auto zero range	11
"autP x" = The Automatic power off parameter	11
"Prt xx" = The printing parameter.....	12
"b xxxx" = Baud rate for RS-232 interface.....	12
6.3.3 CAL SP menu	12
6.3.4 Errors During Calibration.....	12
7.0 Trouble Guide	13
7.1 Error Codes	13
7.2 Trouble Shooting Guide	14

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Accuweigh/AC-03 Indicator operation manual.htm](https://the-checkout-tech.com/manuals/Accuweigh/AC-03%20Indicator%20operation%20manual.htm)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://the-checkout-tech.com)