ACUWEIGH CORPORATION

AC-11JB DIGITAL WEIGHING INDICATORS INSTALLATION MANUAL

(Digital Junction Box) Version in June,2008

CONTENTS

- 1.0 SPECIFICATIONS AND LED SYMBOLS
- 2.0 CONNECTION
- 3.0 MENU SELECTION
- 4.0 PARAMETERS SETTING
- 5.0 LOADCELL WEIGHT FACT SETTING
- 6.0 CALIBRATION
- 7.0 FACTORY PARAMETERS SETTING
- 8.0 A/D VALUE DISPLAY
- 9.0 ERROR MESSAGES AND TROUBLE-SHOOTING
- 10.0 AUTO CORNER ERROR ADJUSTMENT
- 11.0 LOAD IMBALANCE WARNING
- 12.0 TEMPORARY LOADCELL FAILURE PROCESSING

This is a "Table of Contents preview" for quality assurance

The full manual can be found at http://the-checkout-tech.com/estore/catalog/

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<u>http://the-checkout-tech.com</u> : the biggest supplier of cash register and scale manuals on the net