

ACUWEIGH CORPORATION

AC-11JB

DIGITAL WEIGHING INDICATORS INSTALLATION MANUAL

(Digital Junction Box)

Version in June,2008

CONTENTS

- 1.0 SPECIFICATIONS AND LED SYMBOLS
- 2.0 CONNECTION
- 3.0 MENU SELECTION
- 4.0 PARAMETERS SETTING
- 5.0 LOADCELL WEIGHT FACT SETTING
- 6.0 CALIBRATION
- 7.0 FACTORY PARAMETERS SETTING
- 8.0 A/D VALUE DISPLAY
- 9.0 ERROR MESSAGES AND TROUBLE-SHOOTING
- 10.0 AUTO CORNER ERROR ADJUSTMENT
- 11.0 LOAD IMBALANCE WARNING
- 12.0 TEMPORARY LOADCELL FAILURE PROCESSING

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Accuweigh/AC-11JB Indicator 2008 instruction m](https://the-checkout-tech.com/manuals/Accuweigh/AC-11JB%20Indicator%202008%20instruction%20manual.pdf)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)