ACU-P SERIES PRICE-COMPUTING SCALE WITH PRINTER USE GUIDE (2005)



10F-2, No.159, Jianping 17th St., Tainan 70850,

Taiwan. R.O.C

TEL: 886-6-2930-391 FAX: 886-6-2934-229

http://www.acuweigh.com.tw

email: sales@acuweigh.com

TABLE OF CONTENTS

1.	OVERVIEW	.1
1.1	Specifications	1
1.2	Main Function	1
1.3	.Displays windows	2
1.4	Keys and its function	2
1.5	.Label size	3
2.	BASIC OPERATIONS	4
2.1	.Power on	4
2.2	Weigh goods and price computing	. 4
2.3	Counting and prince computing	6
2.4	.Tare	.6
2.5	.Discount	7
2.6	.Date operation	8
2.7	.Modify shelf life temporarily	9
2.8	Shift between auto-print and manual print	.9
2.9	.Copy label	.9
2.1	0. Totals	10
3.	USING BARCODE PRINTER	12
3.1	. Appearance and Parts	12
3.2	. Getting the printer ready to use	13
3.3	. Routine maintenances	16
3.4	. Troubleshooting	.17
4.	SETTING OF FUNCTION AND PARAMETER	19
4.1	Setting of PLU parameter	19
4.2	Setting of label forma	22
4.3	Setting of Shop name	26
4.4	Setting of label extra information	26
4.5	Setting of Shop address	28
4.6	Extra setting	28
5.	WARNINGS	30
6.	ACU-P Scale management software User Instructions	.31
6.1	. Getting Started	31
6.2	. PLU Management	32
6.3	. System Settings	35
6.4	.Reports	36
6.5	. Restore factory default settings	36
Ext	tra page added for Calibration of ACU-P Scale	

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store: https://the-checkout-tech.com/manuals/Accuweigh/ACU-P user and calibration manual.h

And our free Online Keysheet maker: https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM