ELECTRONIC COUNTING SCALE

Operation Manual

MODEL:ECL/ECM/ECH

ACUWEIGH CORPORATION

http://www.acuweigh.com.tw email:sales@acuweigh.com.tw sales@acuweigh.com.tw

TABLE OF CONTENTS

| I. | PRECAUTIONS BEFORE USING THE SCALE | 2 |
|-------|--|------|
| II. | EXPLANATION OF DISPLAY SYMBOLS | 3 |
| III. | KEYPAD FUNCTIONS | 5 |
| M. | OPERATIONS | в |
| | (I)SWTCH ON & OFF | в |
| | (II) ZERO THE SCALE | ß |
| | (III) SAMPLING BEFORE COUNTING | გ |
| | (IV) PRESET UNIT WEIGHT IN NUMERIC KEYS | 8 |
| | (V)SUBTRACT CONTAINER'S WEIGHT | 9 |
| | (M)WEIGHT/QUANTITY ACCUMULATION | 12 |
| | (MI)PRESET COUNTING CHECK RANGE | 14 |
| | (MII)PRESET WEIGHT CHECK RANGE | 15 |
| V. | USER PROGRAMMING FUNCTIONS | . 17 |
| | (1)AUTO SHUT OFF TIME SPAN | 17 |
| | (II)ZEROTRACKING RANGE | 17 |
| | (III)ZERO DISPLAY RANG E | 18 |
| | (IV)STABLE CLASS RANGE | 19 |
| | (V)ZERO RETURN RANGE | .20 |
| | (M)BACKLIGHTTYPE | .20 |
| | (MI) CHANGE UNIT OF MEASURE FROM KG/G TO POUND | 22 |
| | (MII)UNIT WEIGHT RECOMPUTING | .22 |
| | (IX) CHECK ALARM TYPE | .23 |
| M. | CALIBRATION | 25 |
| VII. | | |
| VIII. | RS-232 OUTPUT | .27 |
| IX. | ERROR CODES | .29 |

This is a "Table of Contents preview" for quality assurance

The full manual can be purchased from our store:

https://the-checkout-tech.com/manuals/Accuweigh/ECL and ECH and ECM operation manuals/Accuweigh/ECL and ECM operation manuals/Accumeigh/ECL and ECM op

And our free Online Keysheet maker:

https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/

HTTPS://THE-CHECKOUT-TECH.COM