

MODEL:HJ-N

1. INTRODUCTION-----1

2. INSTALLATION-----2

 2.1 Unpacking-----2

 2.2 Illustration of the installation for plastic shield-----2

 2.3 Selecting the Location-----3

 2.4 Leveling the scale-----3

 2.5 Connecting Power-----3

 2.5.1 AC power-----3

 2.5.2 Battery power-----4

 2.6 Initial Calibration-----4

3. OVERVIEW OF DISPLAY INDICATORS AND KEYBOARD FUNCTIONS-----5

 3.1 Display Symbols-----5

 3.2 Keyboard Functions-----6

4. OPERATIONS-----7

 4.1 Weighing mode-----7

 4.1.1 Units Selection-----7

 4.1.2 Zero Function-----7

 4.1.3 Tare Function-----7

 4.1.4 Over load alarm-----8

 4.2 Counting mode-----8

 4.3 Percentage (%) mode-----9

5. PARAMETER SET-UP-----10

 5.1 Calibration-----11

 5.2 To choose the initial unit while turning on-----12

 5.3 To choose the "UNIT" you need-----13

 5.4 To choose the time of AUTO OFF-----14

 5.5 To choose output transmission method-----15

 5.6 Baud rate setting for RS232 interface-----16

 5.7 To choose the range of stability-----17

 5.8 To choose the Zero display range-----18

 5.9 To choose the Zero Recovery display range -----19

 5.10 To choose the auto-average in sampling on counting mode-----20

 5.11 To choose Backlight mode-----21

6. AUTO CALIBRATION-----22

7. RECOVERY OF THE DEFAULT VALUES FROM MEMORY----22

8. ERROR MESSAGES-----22

9. SPECIFICATION OF RS-232 INTERFACE-----23

10. CONVERSION UNITS TABLE FOR WEIGHTS-----25

11. TABLE LIST FOR FULL CAPACITY-----25
12. TECHNICAL DATA-----26

This is a “Table of Contents preview” for quality assurance

The full manual can be found at <http://the-checkout-tech.com/estore/catalog/>

We also offer free downloads, a free keyboard layout designer, cable diagrams, free help and support.

<http://the-checkout-tech.com> : *the biggest supplier of cash register and scale manuals on the net*