

MODEL:HJ-N

1. INTRODUCTION	1
2. INSTALLATION	2
2.1 Unpacking	2
2.2 Illustration of the installation for plastic shield	2
2.3 Selecting the Location	3
2.4 Leveling the scale	3
2.5 Connecting Power	3
2.5.1 AC power	3
2.5.2 Battery power	4
2.6 Initial Calibration	4
3. OVERVIEW OF DISPLAY INDICATORS AND KEYBOARD FUNCTIONS	5
3.1 Display Symbols	5
3.2 Keyboard Functions	6
4. OPERATIONS	7
4.1 Weighing mode	7
4.1.1 Units Selection	7
4.1.2 Zero Function	7
4.1.3 Tare Function	7
4.1.4 Over load alarm	8
4.2 Counting mode	8
4.3 Percentage (%) mode	9
5. PARAMETER SET-UP	10
5.1 Calibration	11
5.2 To choose the initial unit while turning on	12
5.3 To choose the "UNIT" you need	13
5.4 To choose the time of AUTO OFF	14
5.5 To choose output transmission method	15
5.6 Baud rate setting for RS232 interface	16
5.7 To choose the range of stability	17
5.8 To choose the Zero display range	18
5.9 To choose the Zero Recovery display range	19
5.10 To choose the auto-average in sampling on counting mode	20
5.11 To choose Backlight mode	21
6. AUTO CALIBRATION	22
7. RECOVERY OF THE DEFAULT VALUES FROM MEMORY	22
8. ERROR MESSAGES	22
9. SPECIFICATION OF RS-232 INTERFACE	23
10. CONVERSION UNITS TABLE FOR WEIGHTS	25

11. TABLE LIST FOR FULL CAPACITY-----25
12. TECHNICAL DATA-----26

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Accuweigh/HJ-N operation manual.html](https://the-checkout-tech.com/manuals/Accuweigh/HJ-N%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)