

WEIGHING INDICATOR

OPERATION MANUAL

Model: HW

ACUWEIGH CORPORATION

1.0 INTRODUCTION

The Weighing Indicator is used with strain gauge load cells.

The indicator offers:

- Preset weight, percentage weighing and quantity Hi-Lo limit checking
- 10 unit weight memory cells available
- Big LCD display with backlight
- Both weight & quantity accumulation
- User programming functions
- Standard RS-232 output & USB (option) output
- Unit of weight can be switched between kg and lb
- Operation from internal rechargeable battery or main power
- Keyboard calibration
- Weighing up to 1:75000 divisions
- Simple operation
- Up to 4 load cells of 350+- 3.5 ohm

This is a “Table of Contents preview” for quality assurance

The full manual can be purchased from our store:

[https://the-checkout-tech.com/manuals/Accuweigh/HW operation manual.html](https://the-checkout-tech.com/manuals/Accuweigh/HW%20operation%20manual.html)

And our free Online Keysheet maker:

<https://the-checkout-tech.com/Cash-Register-Keysheet-Creator/>

[HTTPS://THE-CHECKOUT-TECH.COM](https://THE-CHECKOUT-TECH.COM)